


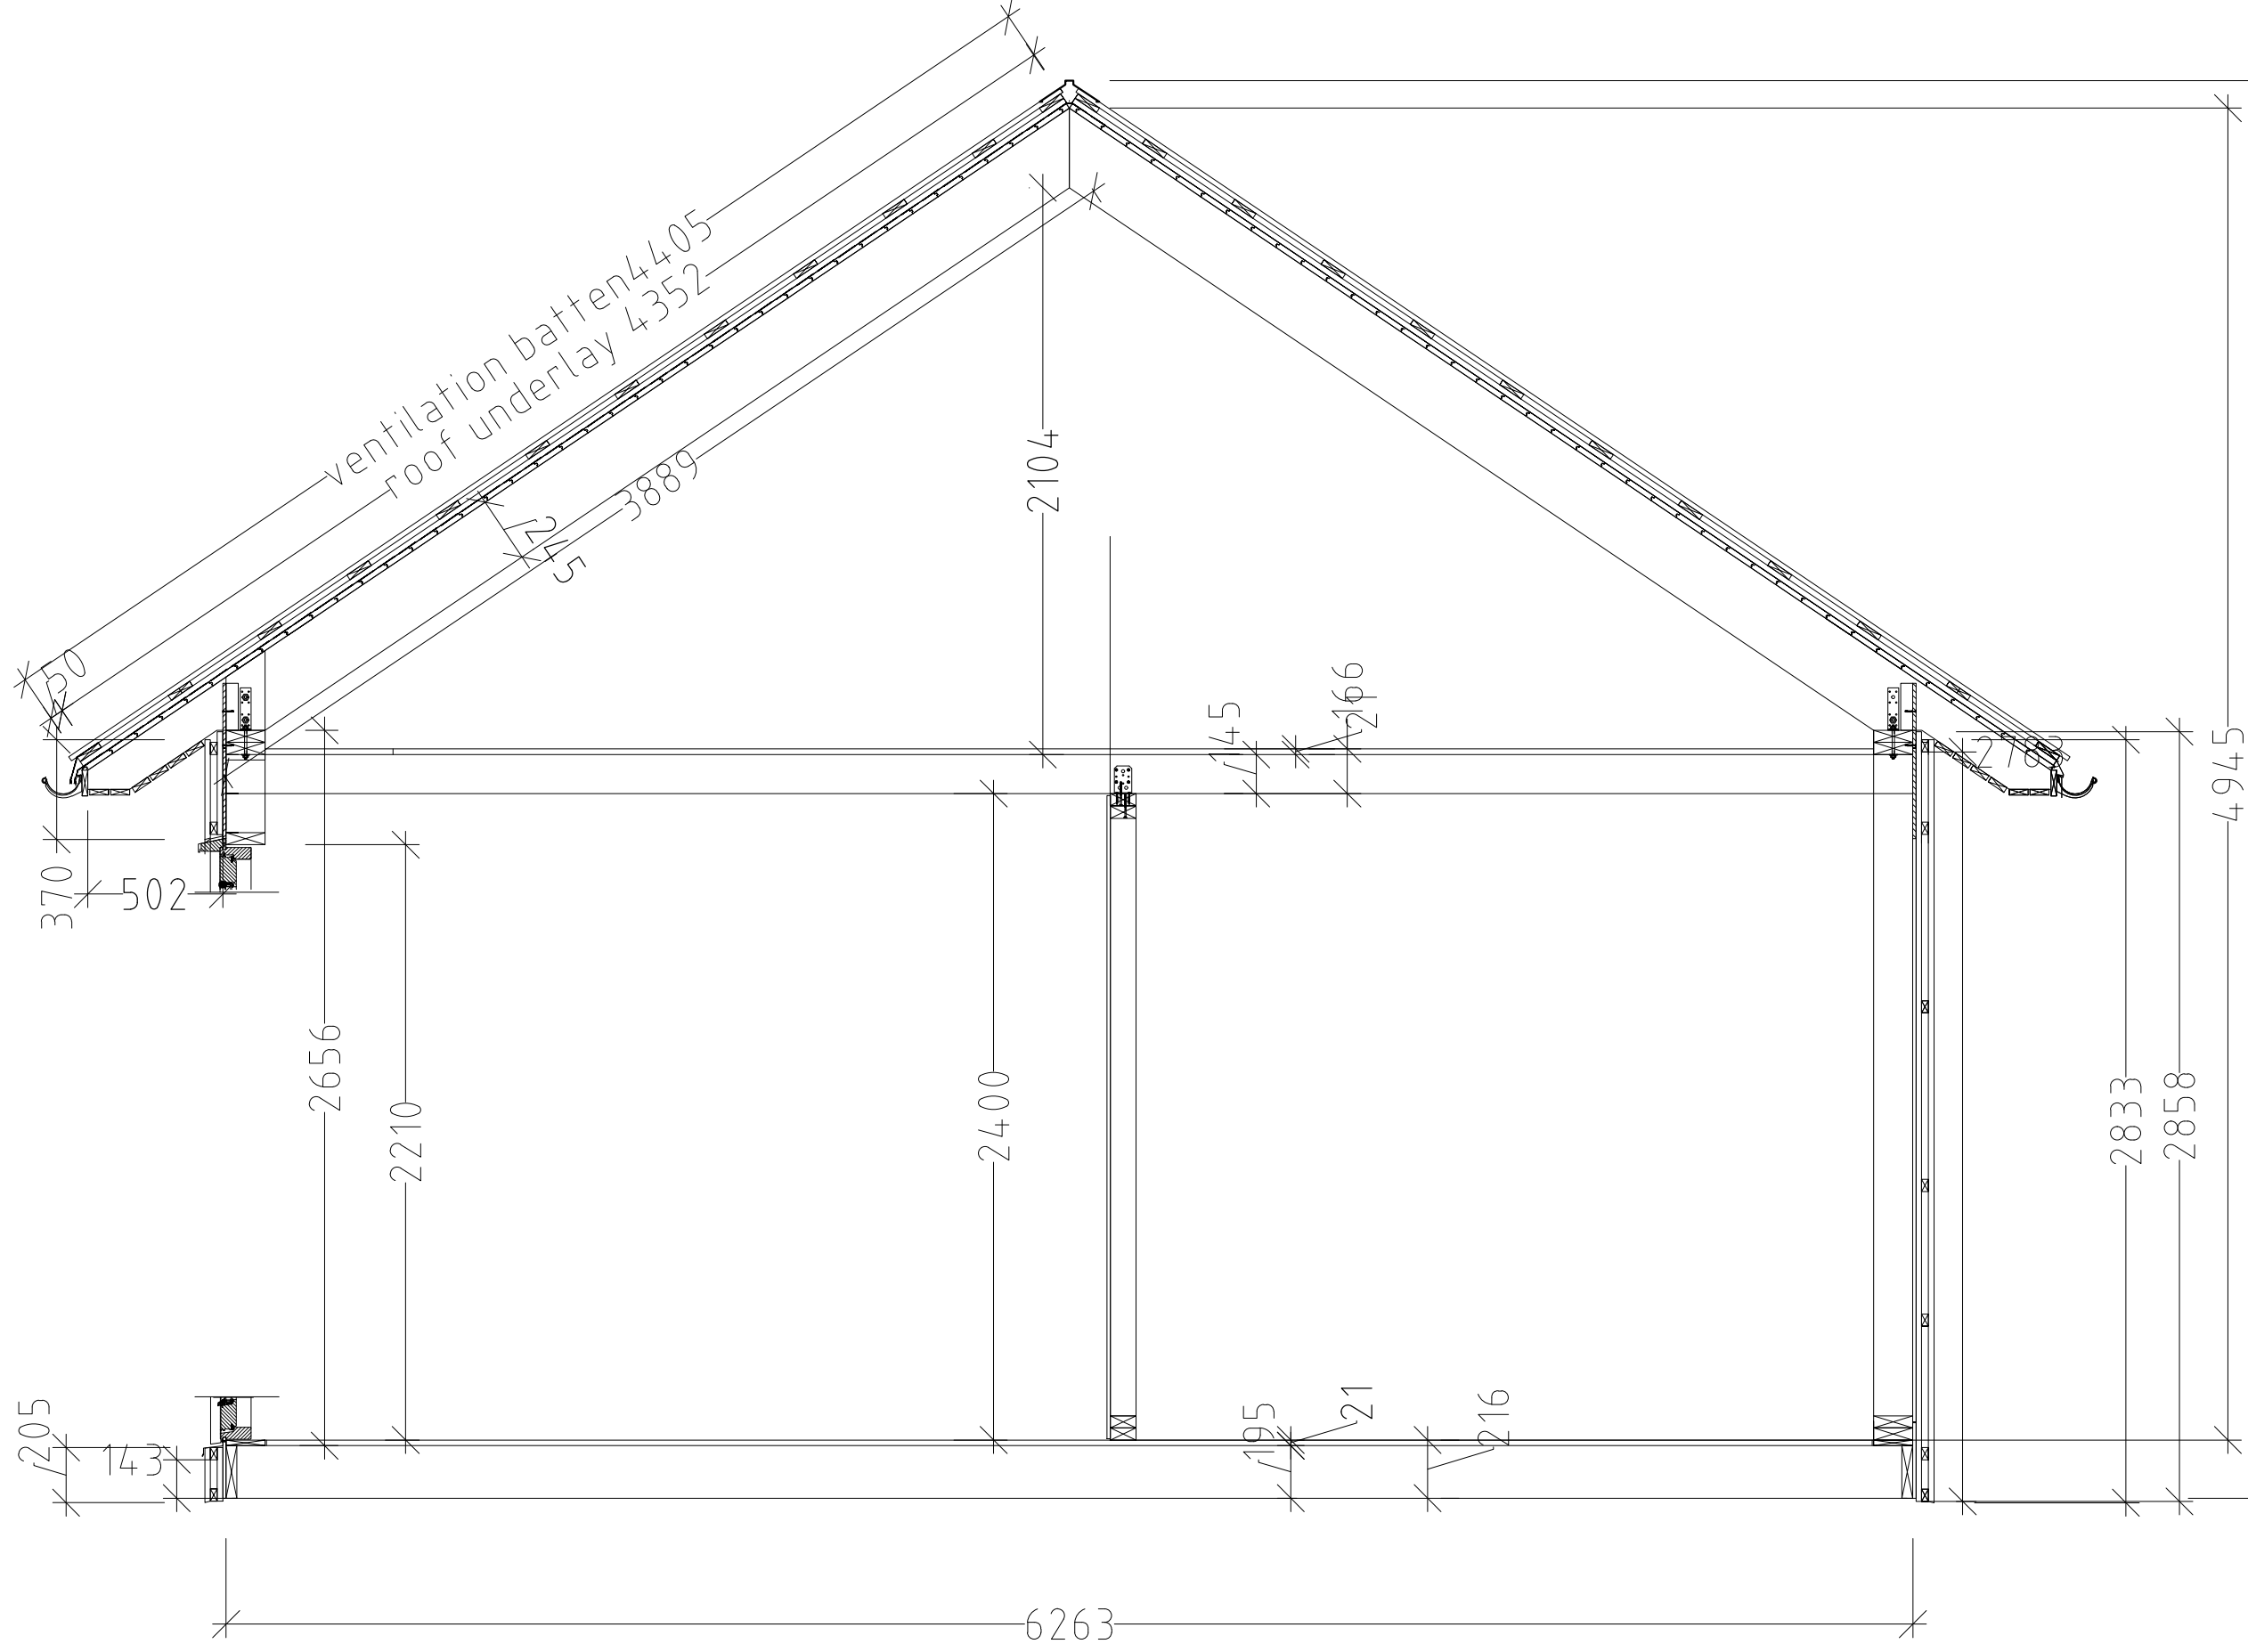
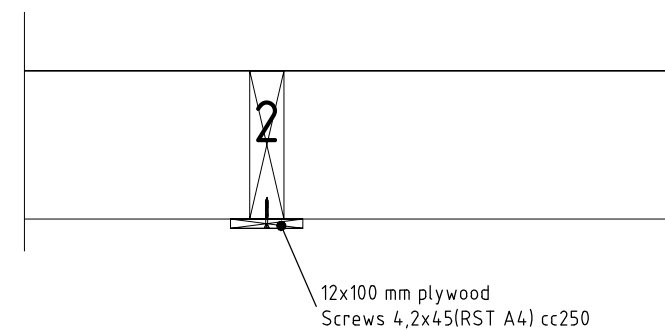
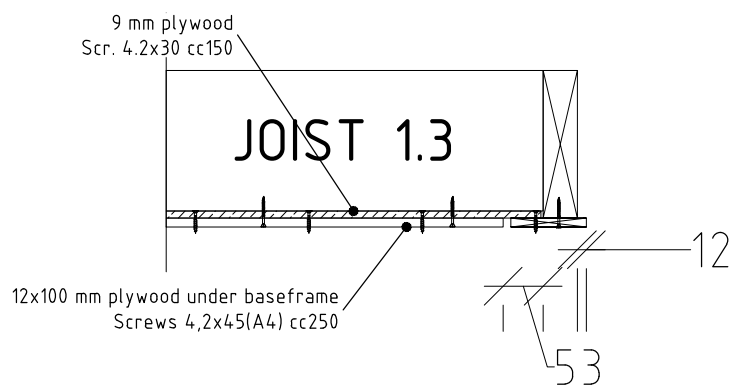
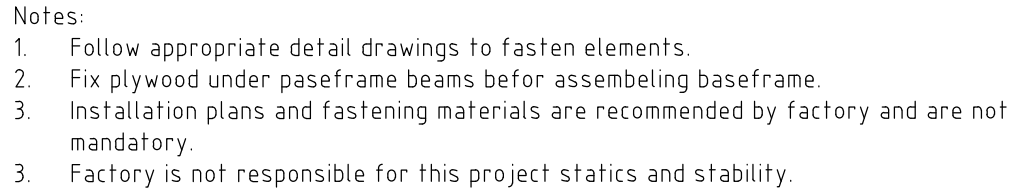
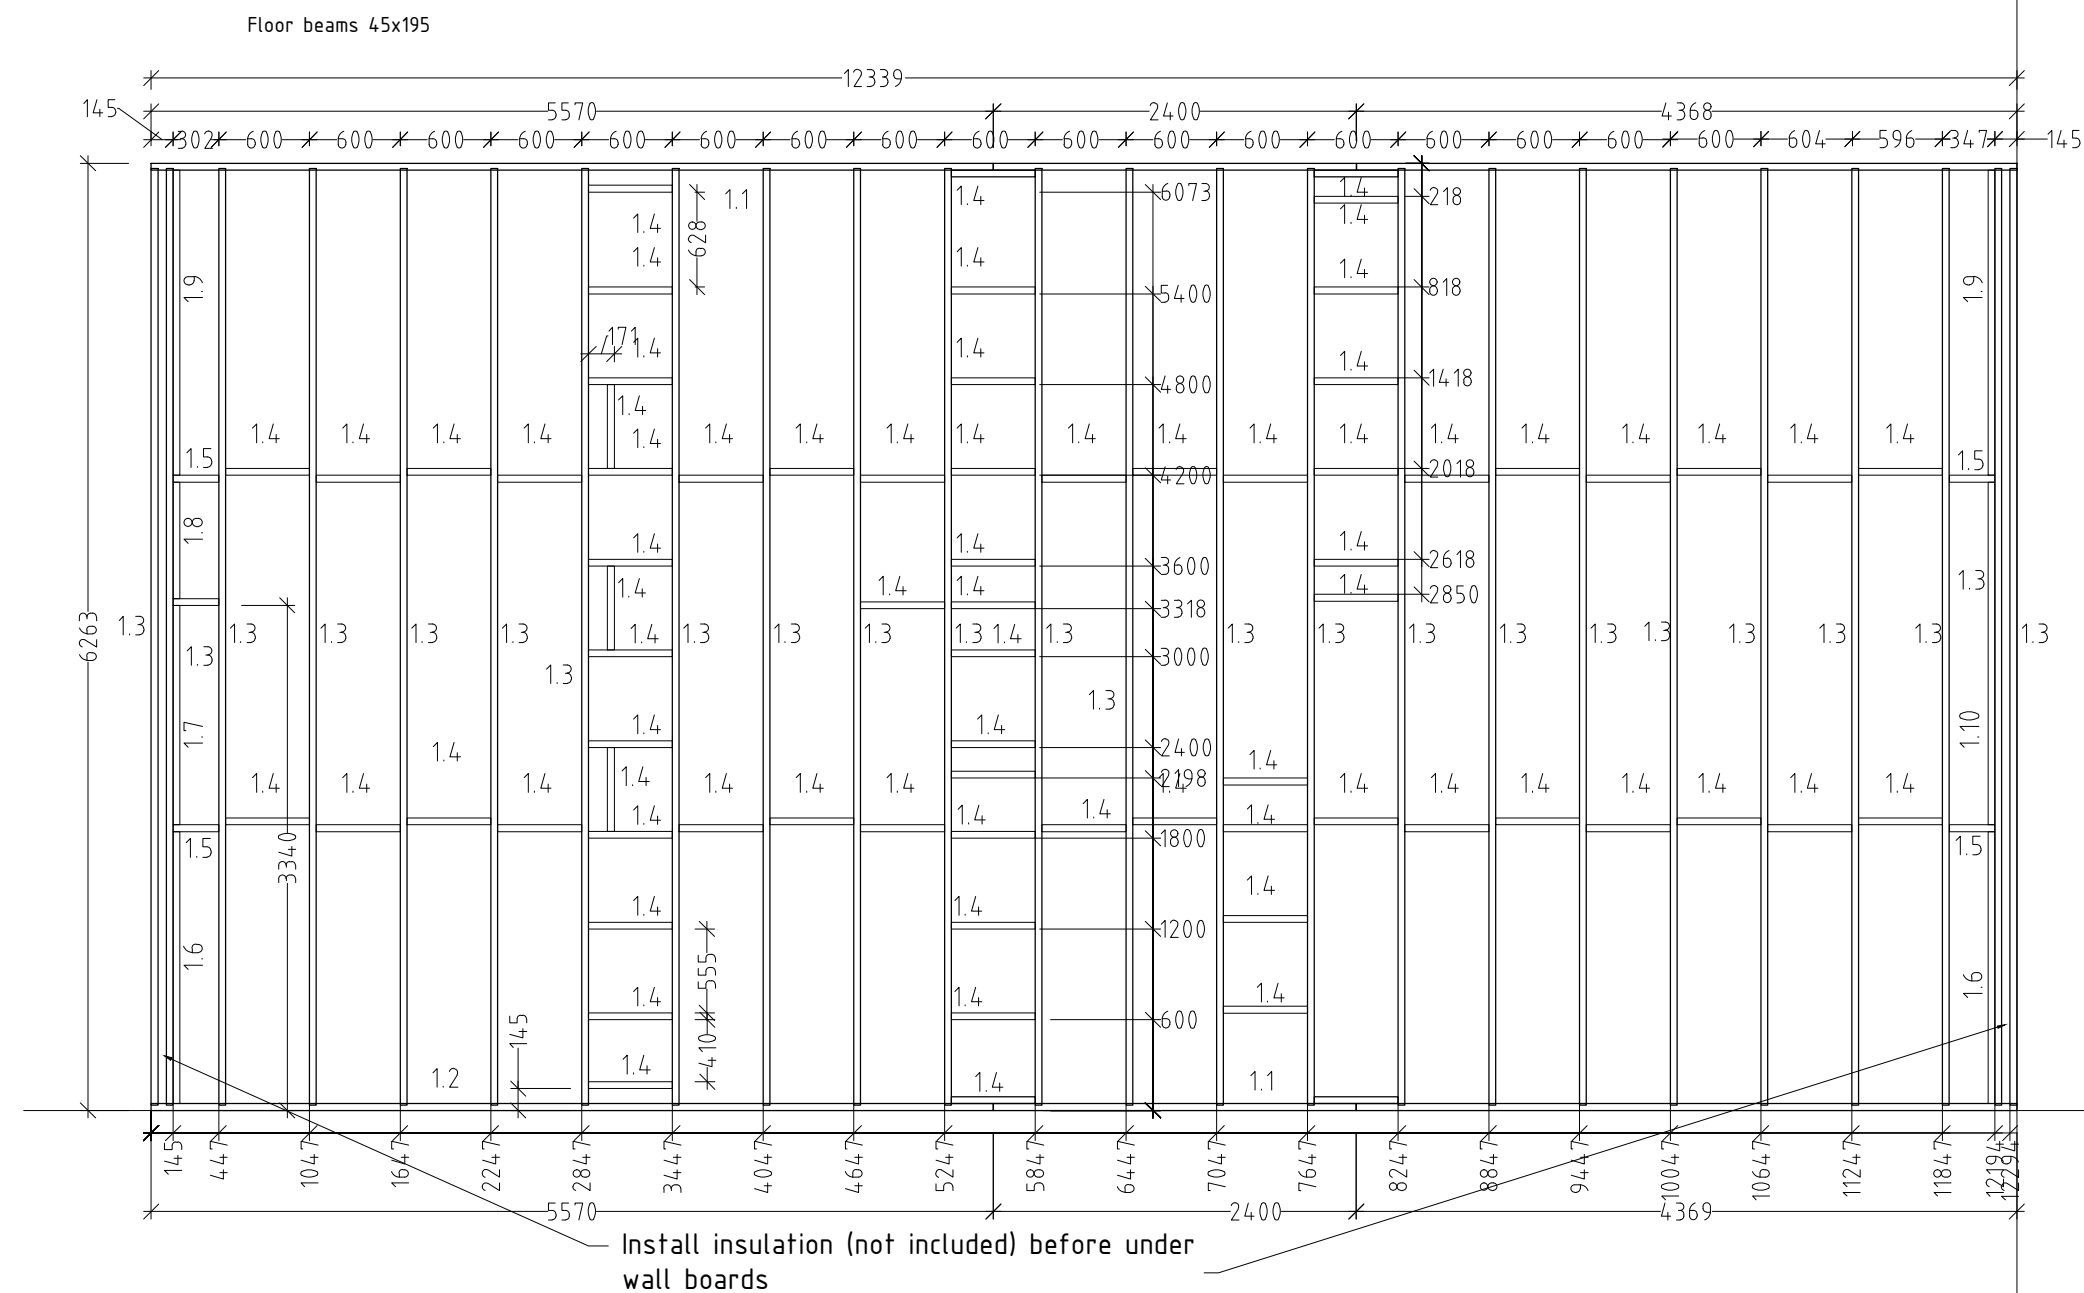





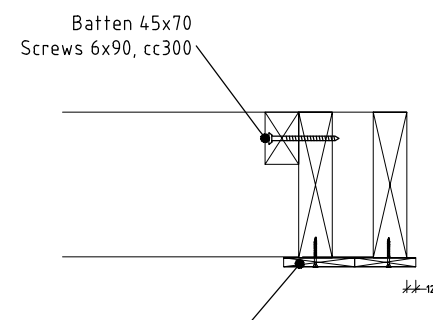


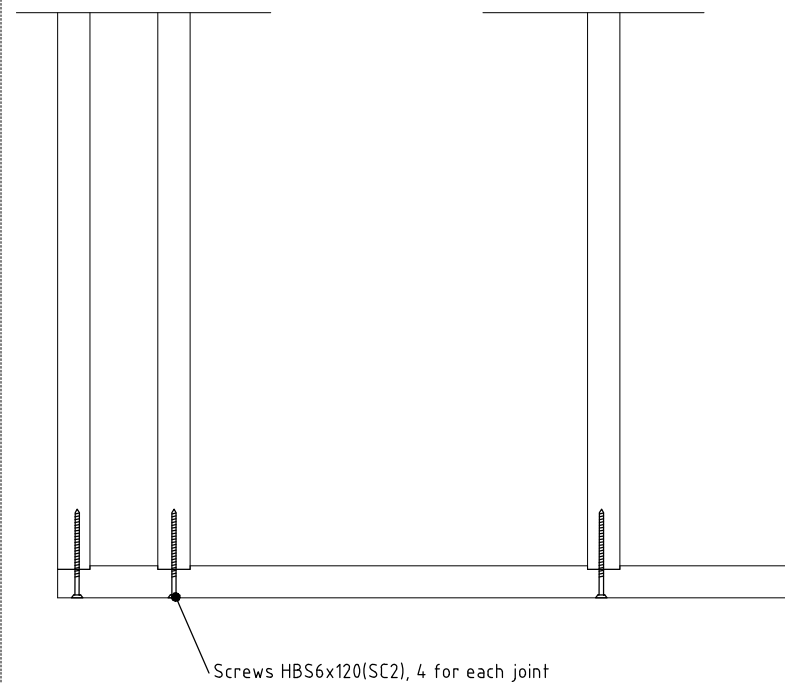

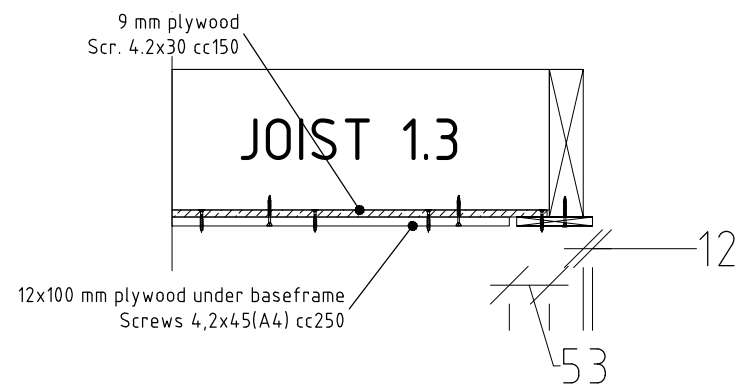



Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

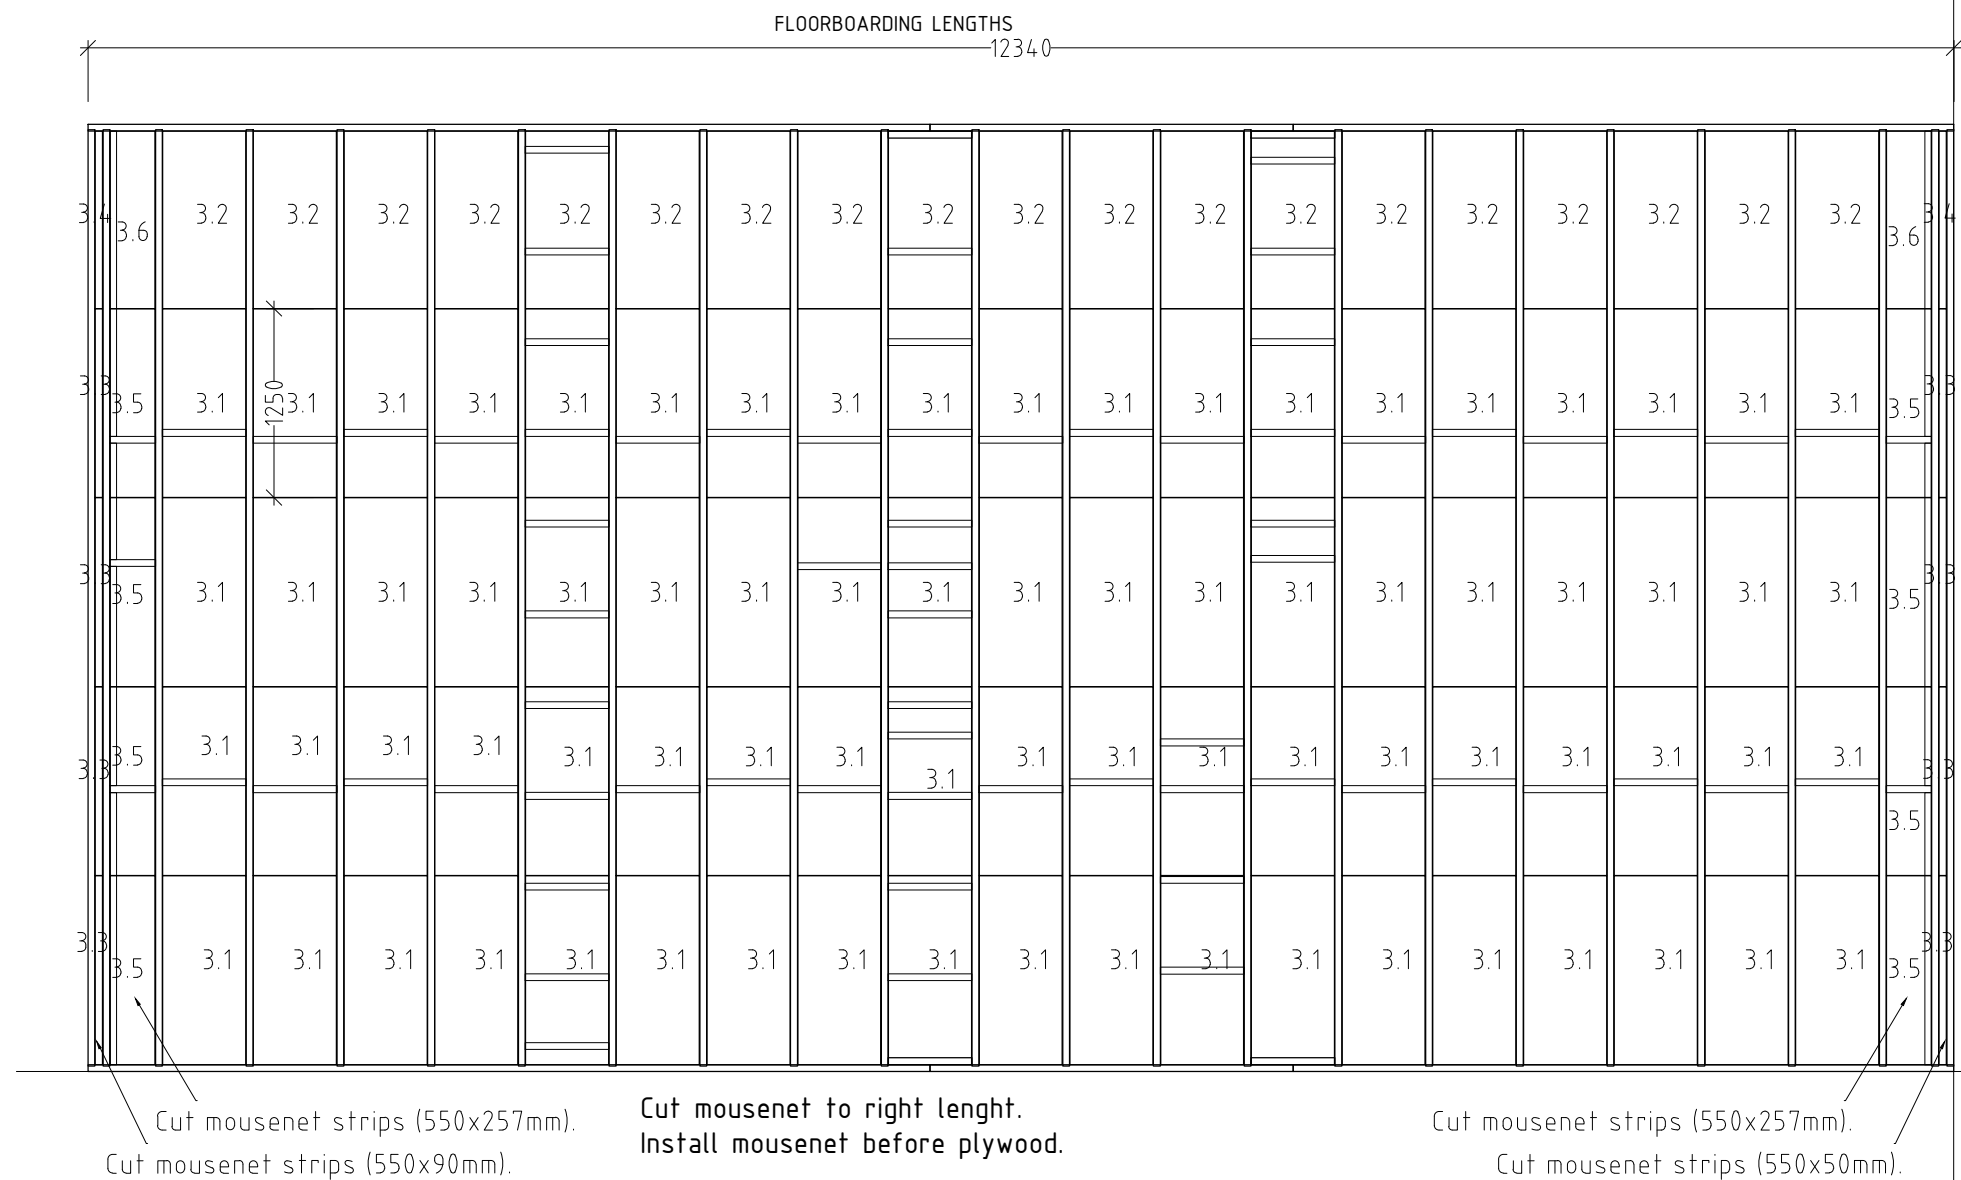
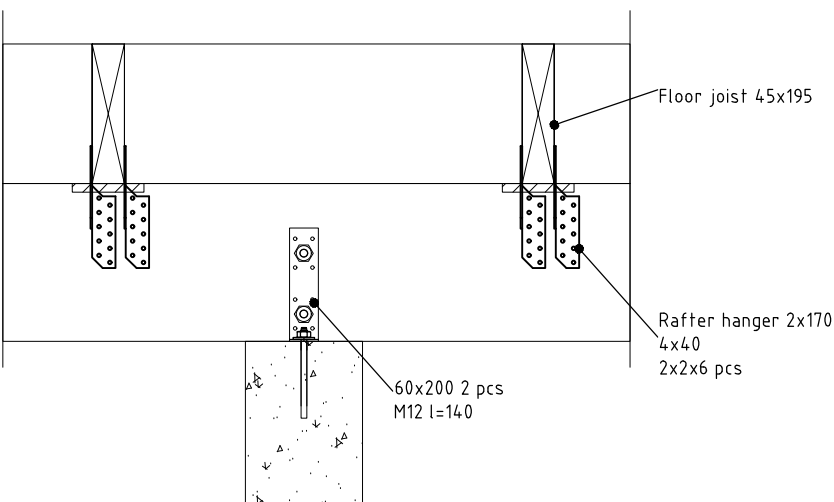
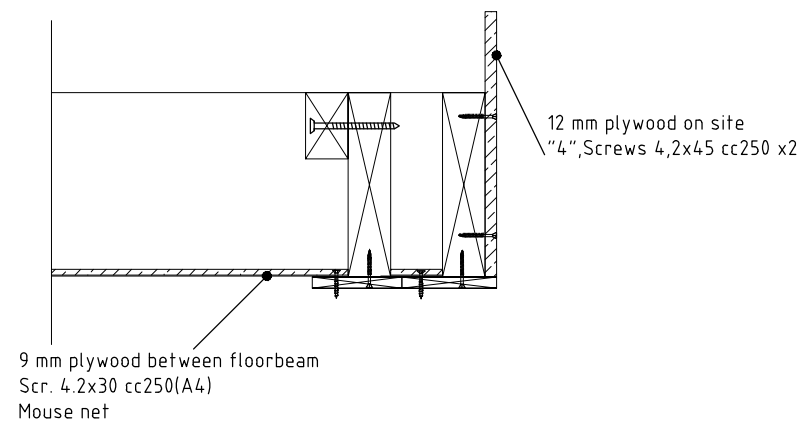
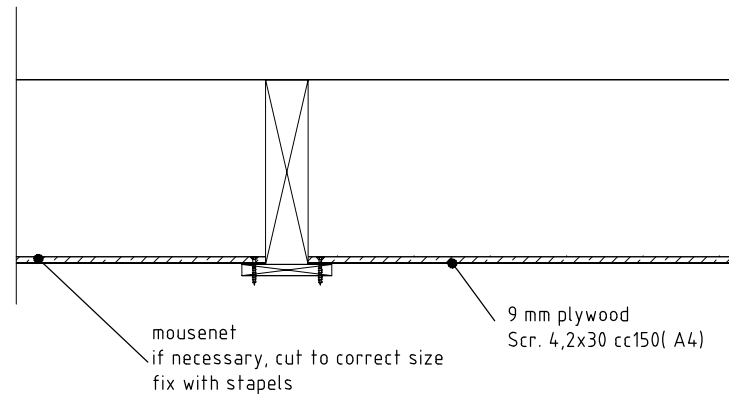


Notes:

- Follow appropriate detail drawings to assemble the elements.
- All dimensions are based on external surface of main timber frame.
- Installation plans and fastening materials are recommended by factory and are not mandatory.
- Factory is not responsible for this project statics and stability.

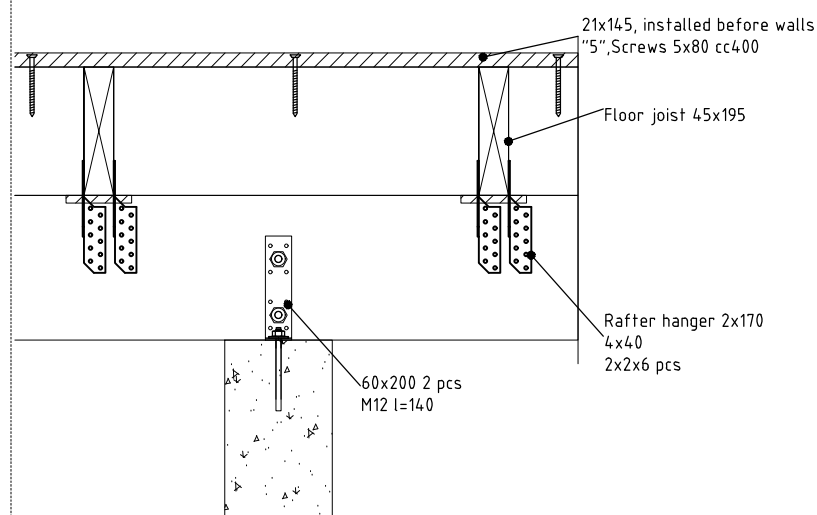



1. Follow appropriate detail drawings to assemble the elements.
2. All dimensions are based on external surface of main timber frame.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

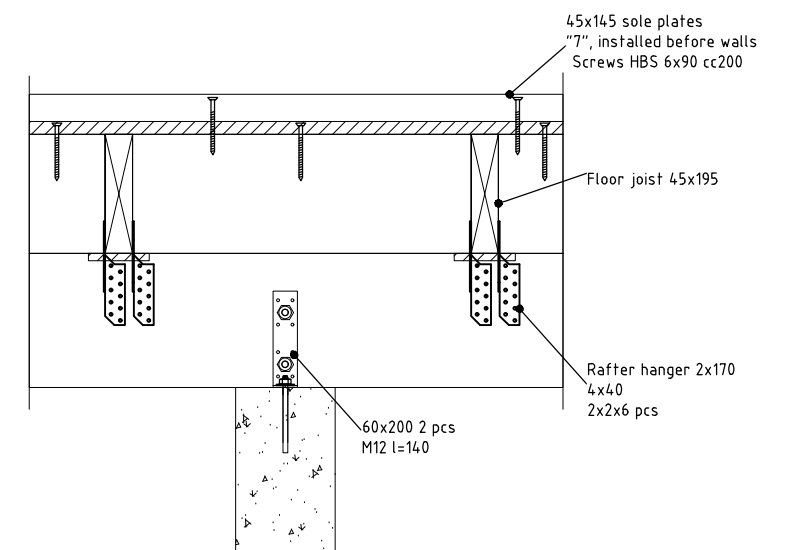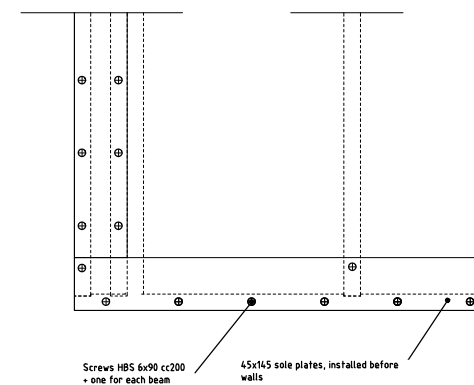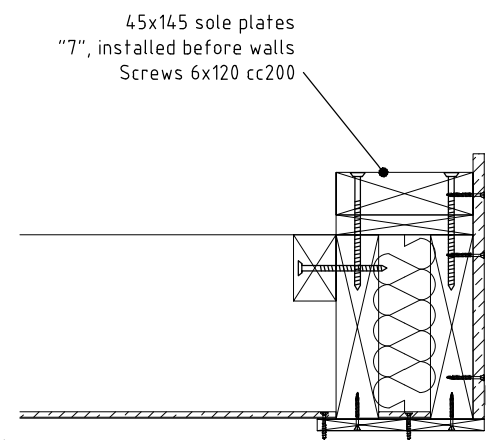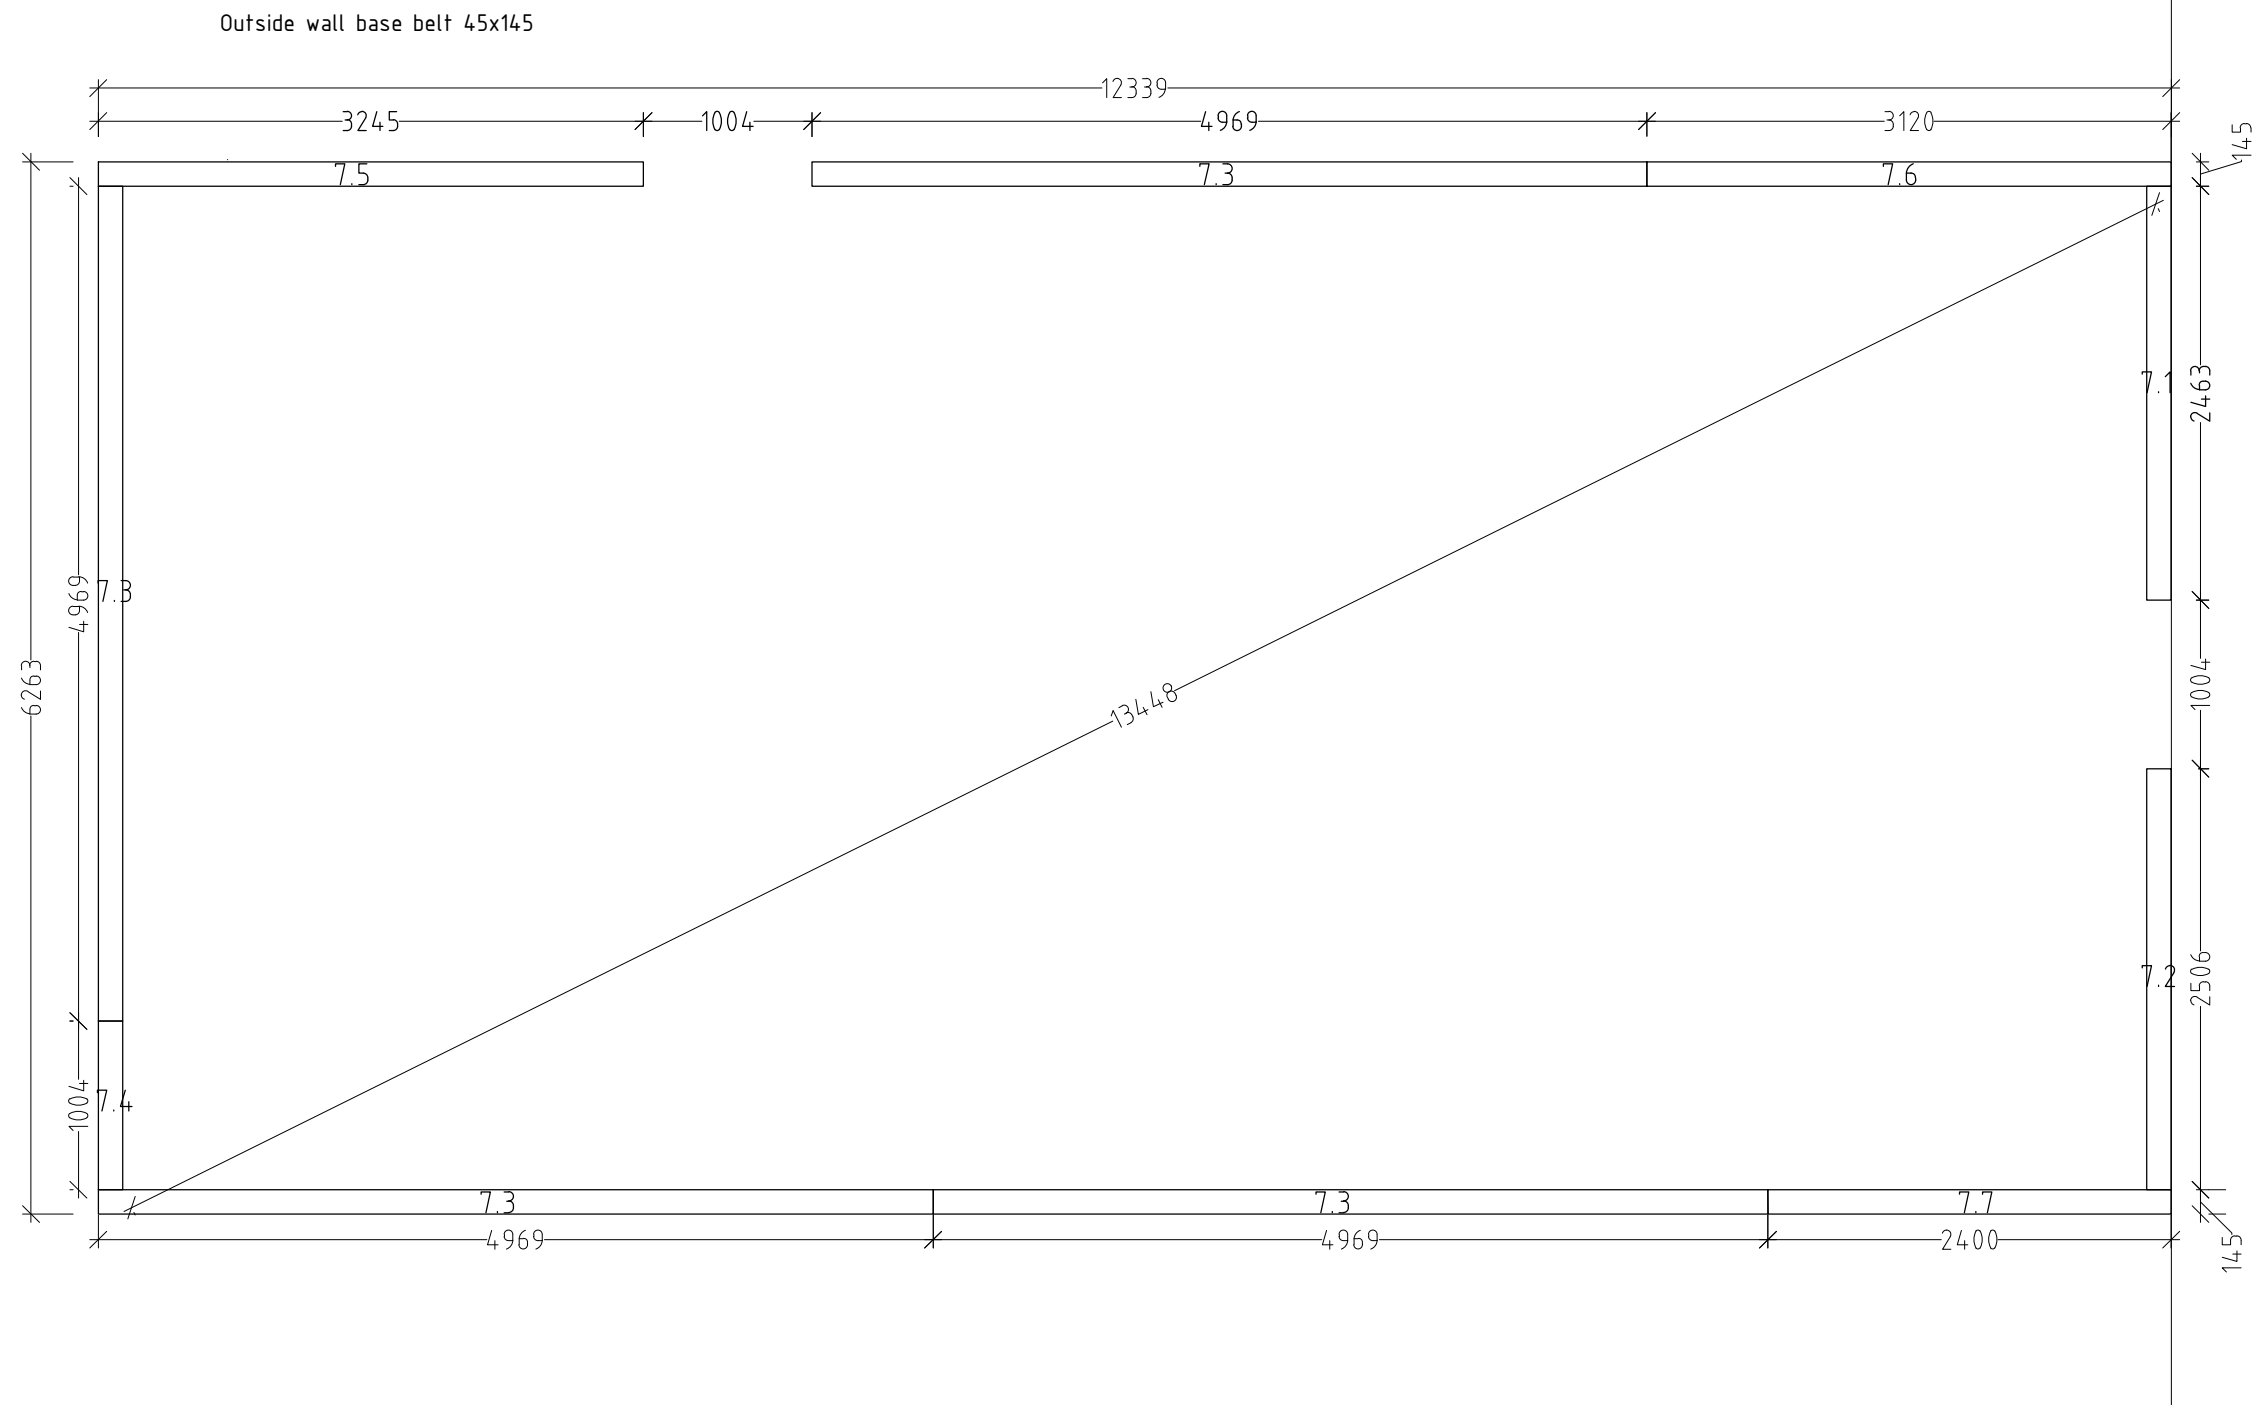


Notes:

1. Check base floor dimensions before installation of sole plate.
2. Follow appropriate detail drawings to fasten elements.
3. All external dimensions are based on external surface of main timber frame.
4. Installation plans and fastening materials are recommended by factory and are not mandatory.
5. Factory is not responsible for this project statics and stability.

External wall connection
with base frame

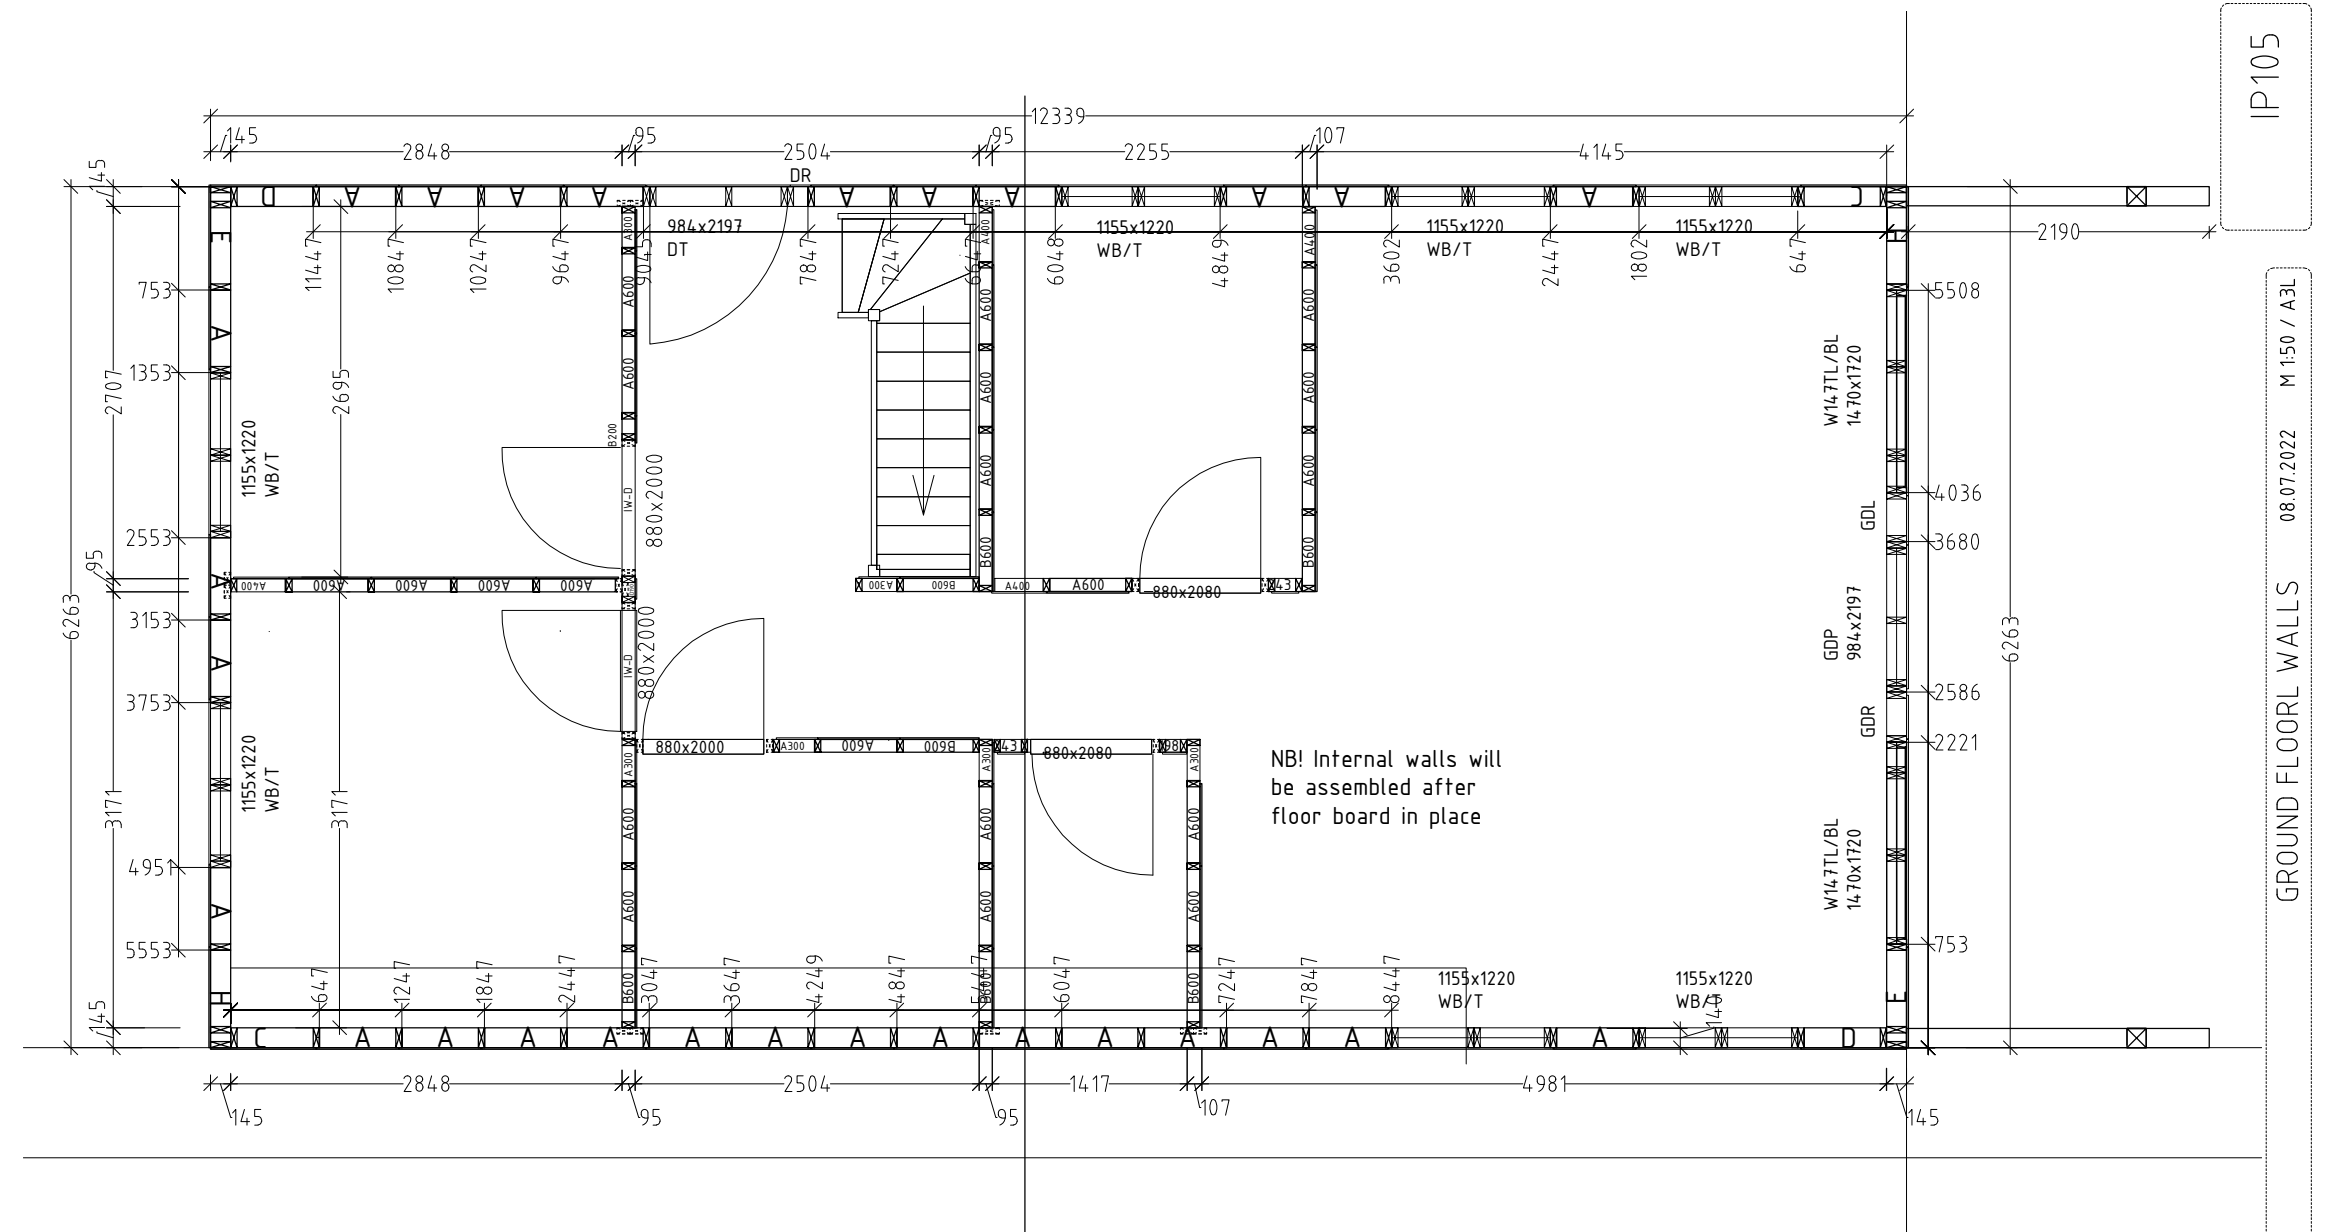
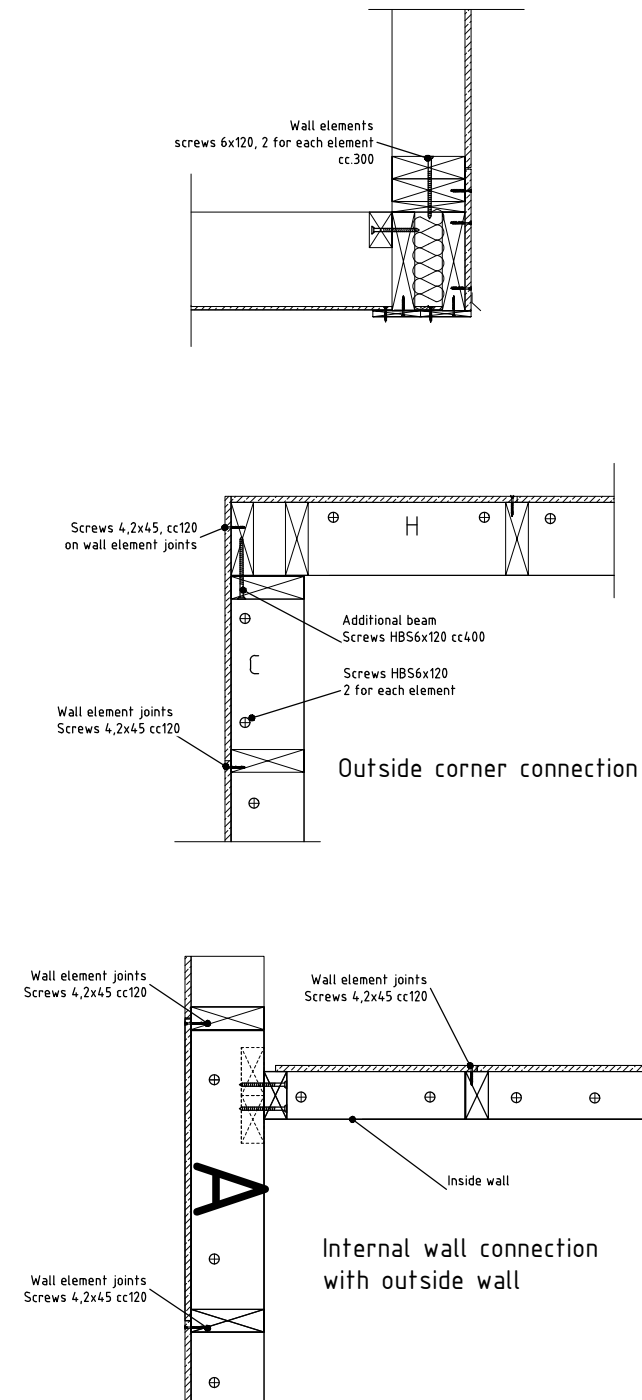


External wall connection
with base belt

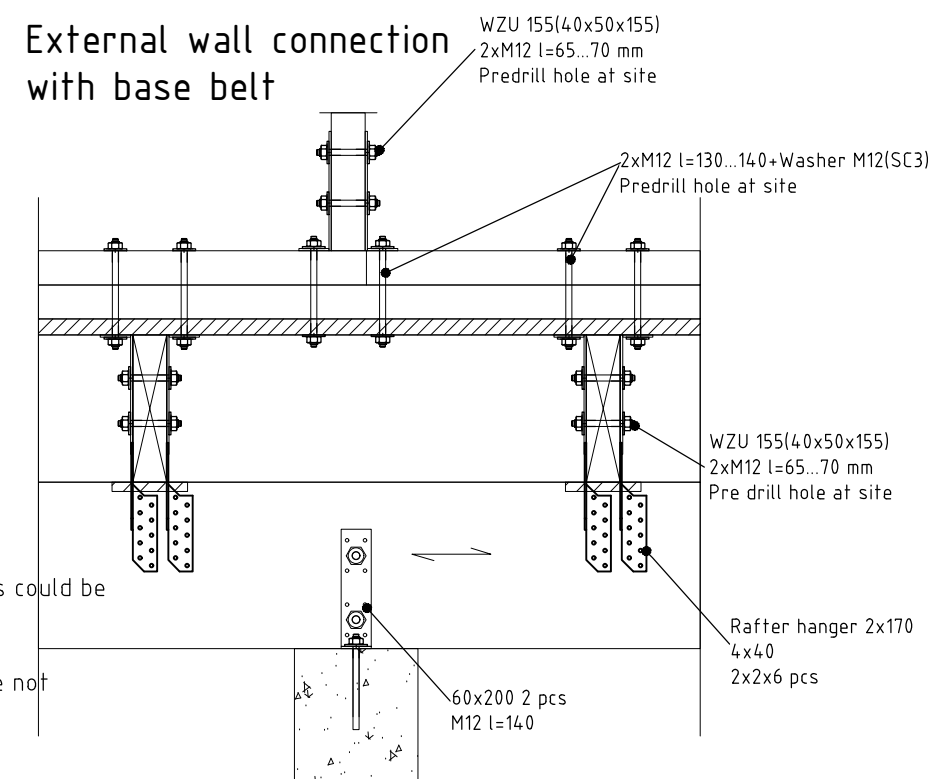

Notes:





- | | |
|-------|--|
| Notes | <ol style="list-style-type: none"> 1. Follow appropriate detail drawings to fasten elements. 2. All external dimensions are based on external surface of main timber frame. 3. Follow given dimensions for installing elements. Gap between element plywoods could be 1-2 mm. 4. Cover element joints with tape. 5. Installation plans and fastening materials are recommended by factory and are not mandatory. 6. Factory is not responsible for this project statics and stability. |
|-------|--|

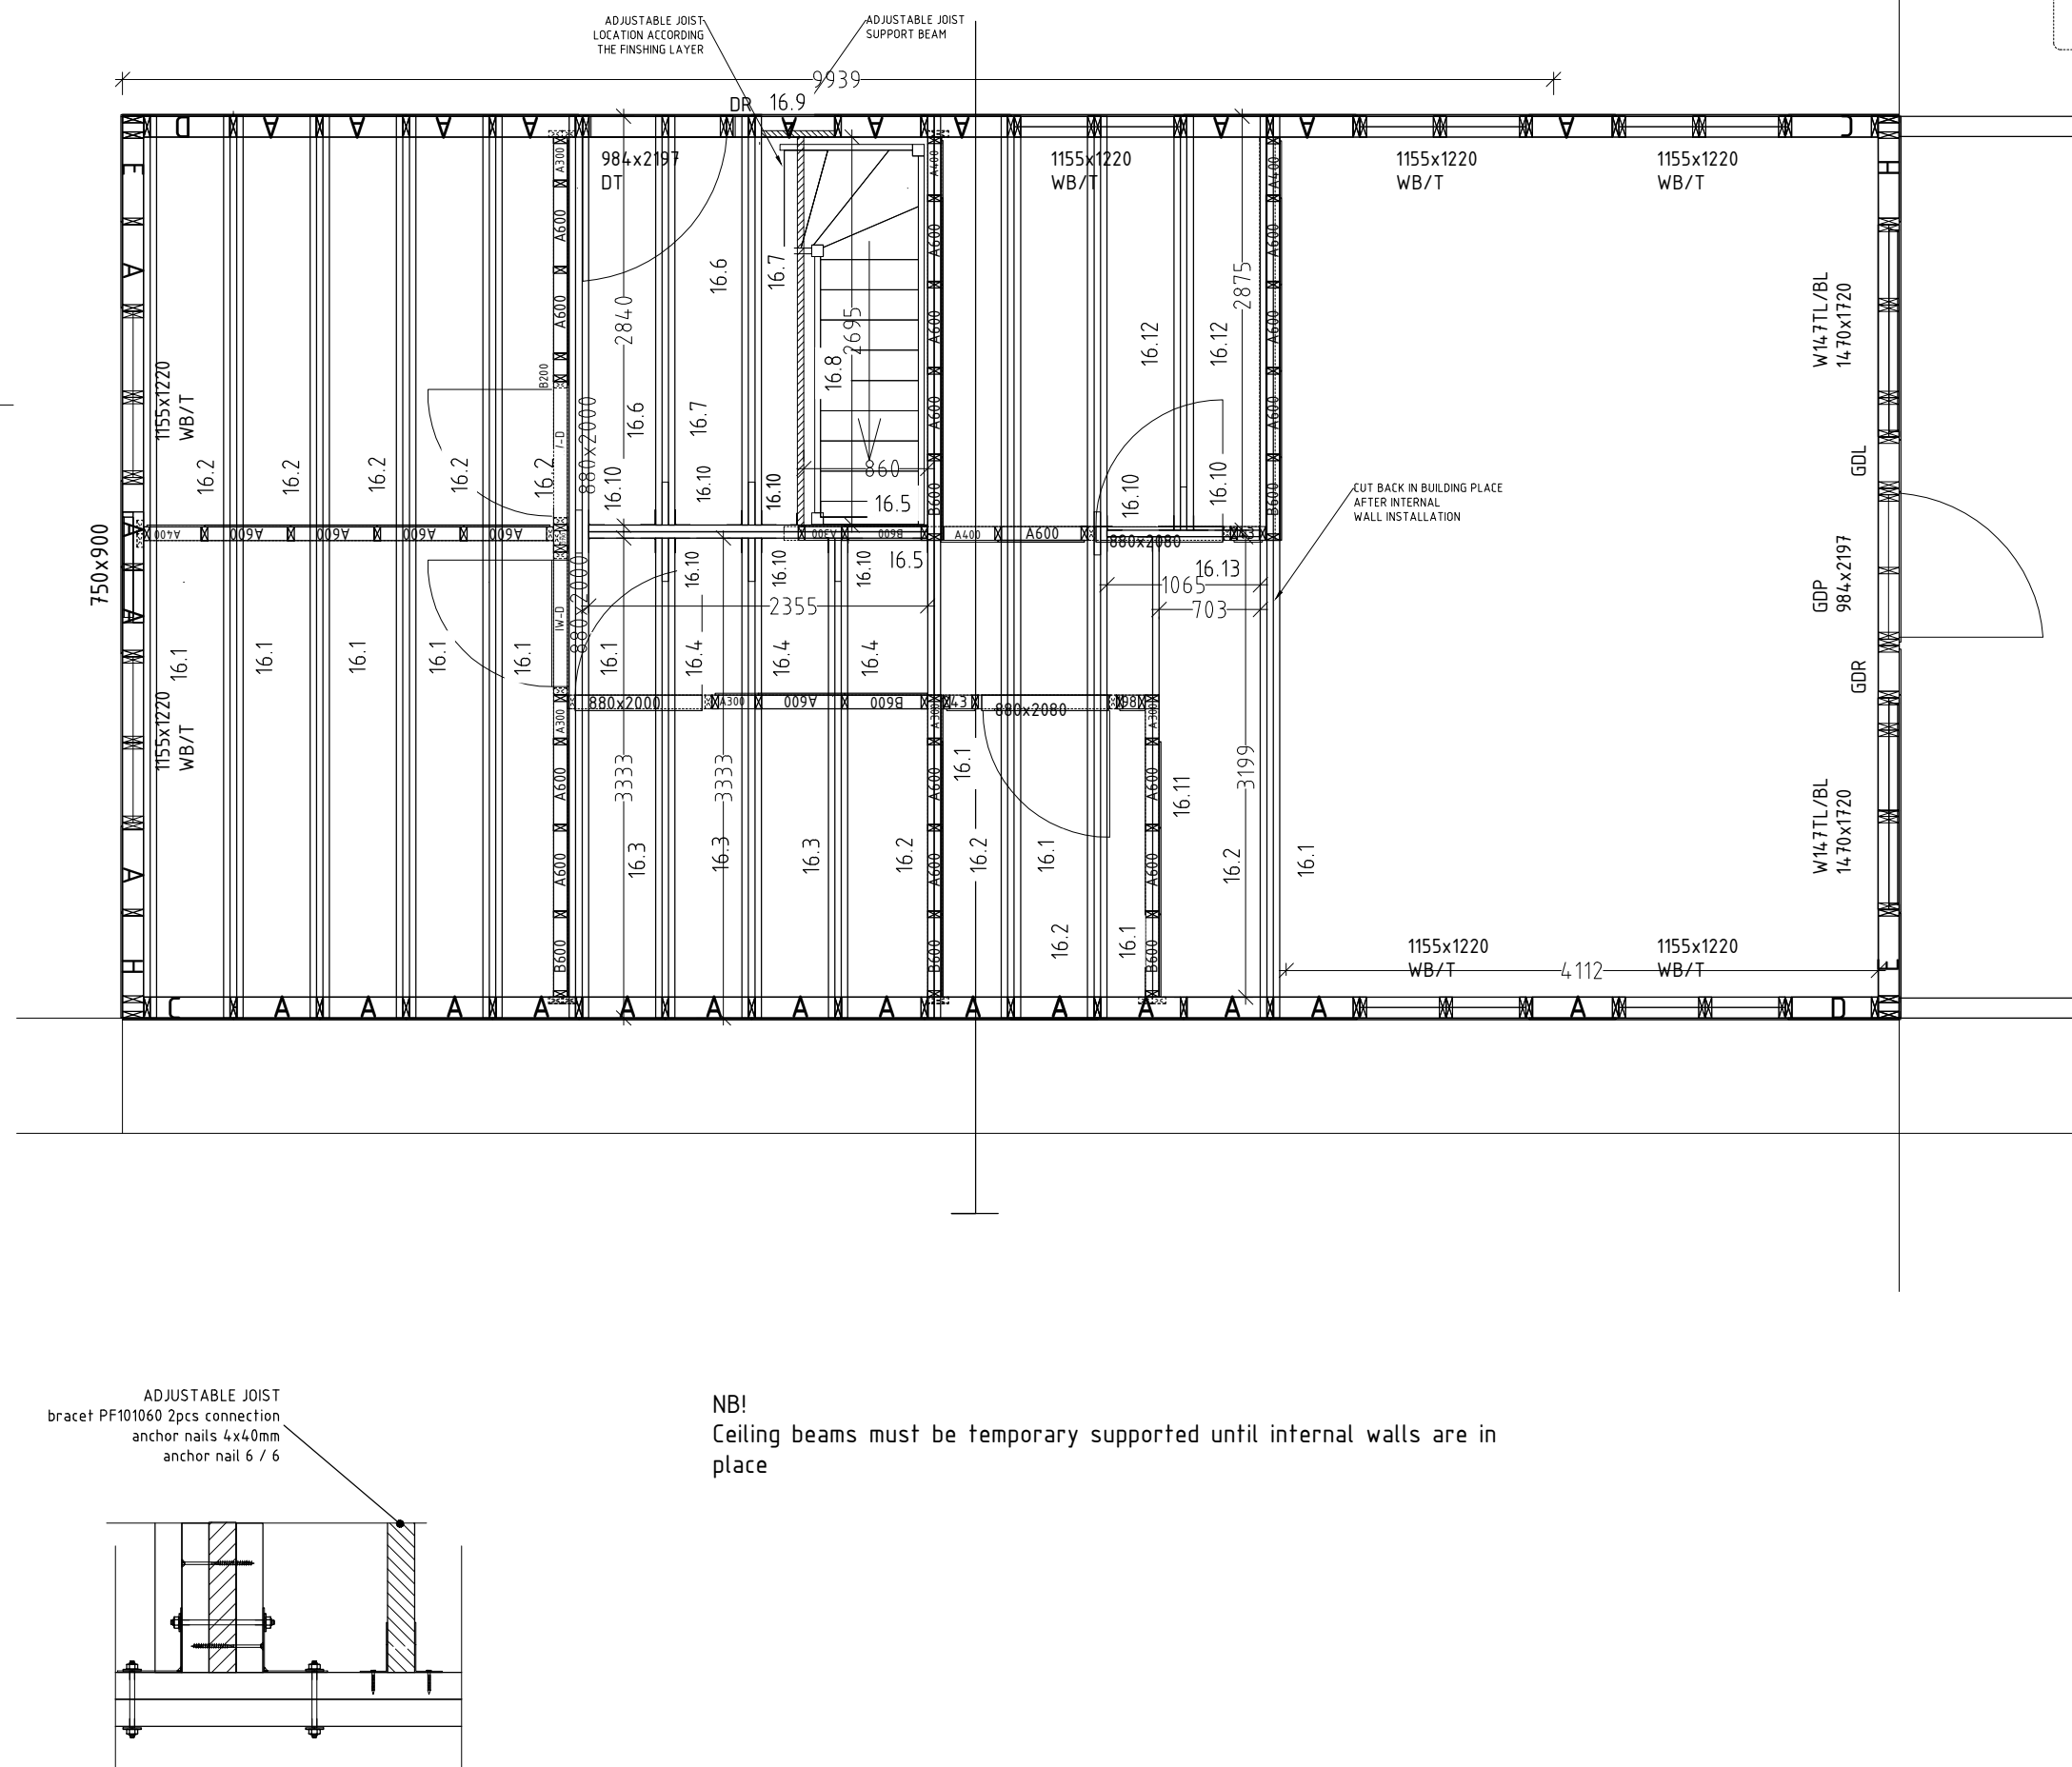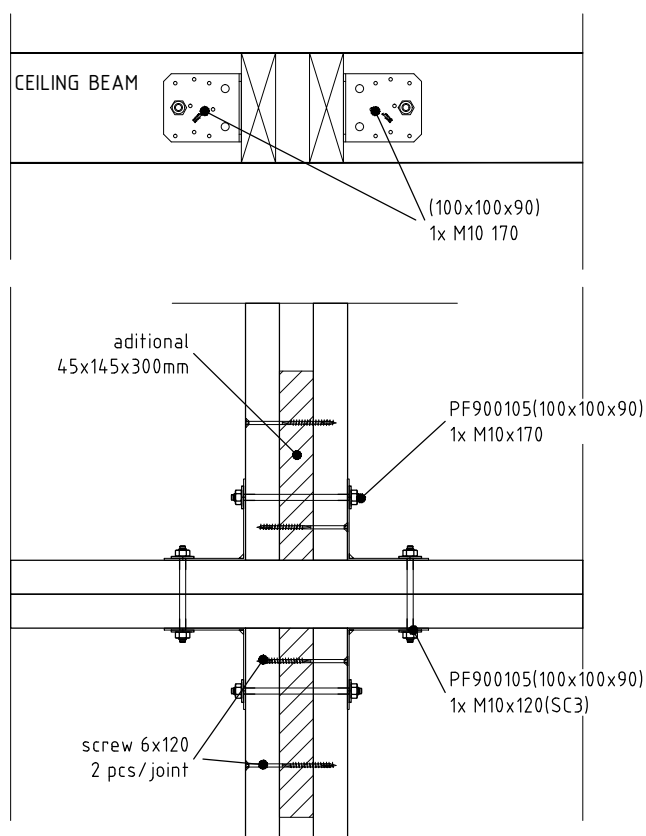



1. Follow appropriate detail drawings to fasten the elements.
2. Dimensions are based on external perimeter of main timber frame.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

CEILING BEAMS 08.07.2022 M 1:25 / A3L

ID:000-2018; project:Klettar 80m2; designer: M.K ;Drawer: M.K

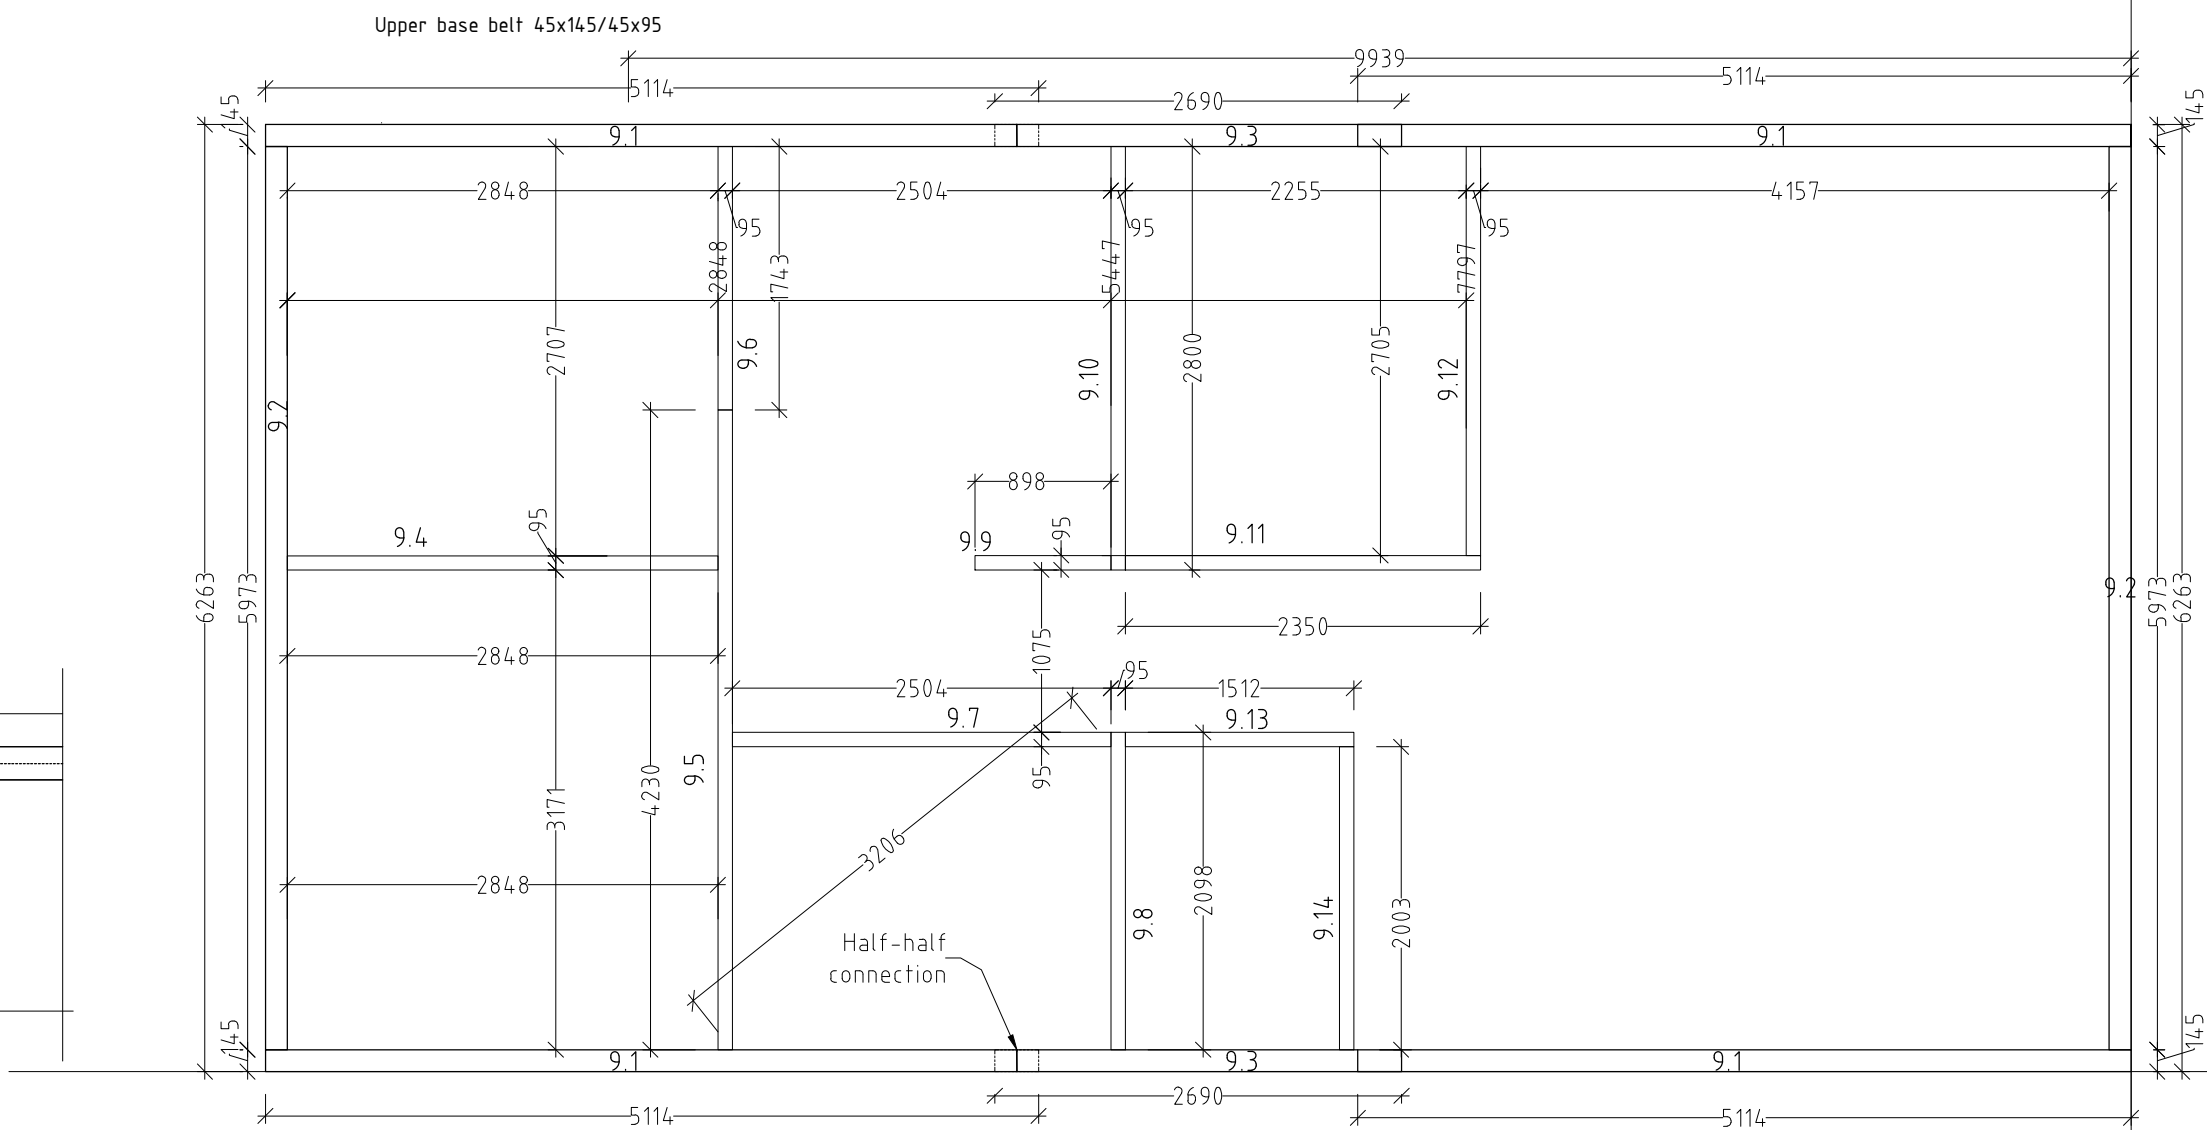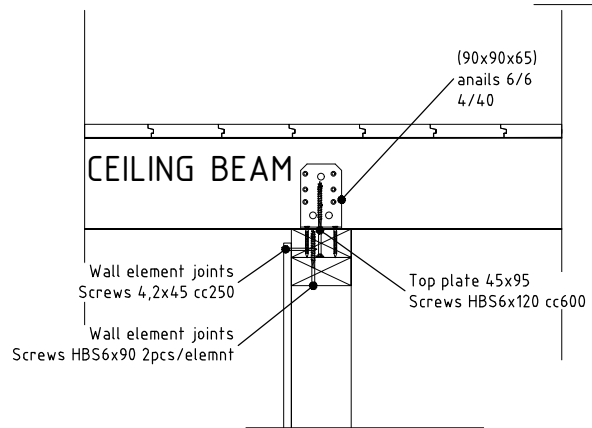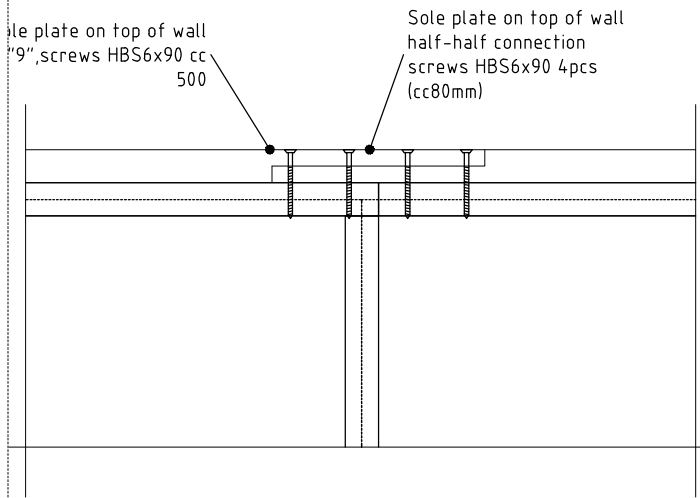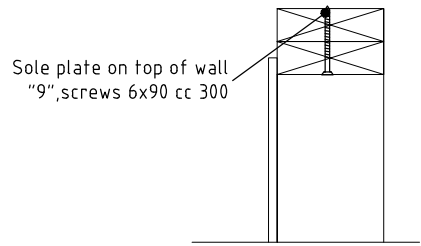


- Notes:
- External dimensions are based on external surface of main timber frame
 - Installation plans and fastening materials are recommended by factory and are not mandatory.
 - Factory is not responsible for this project statics and stability.



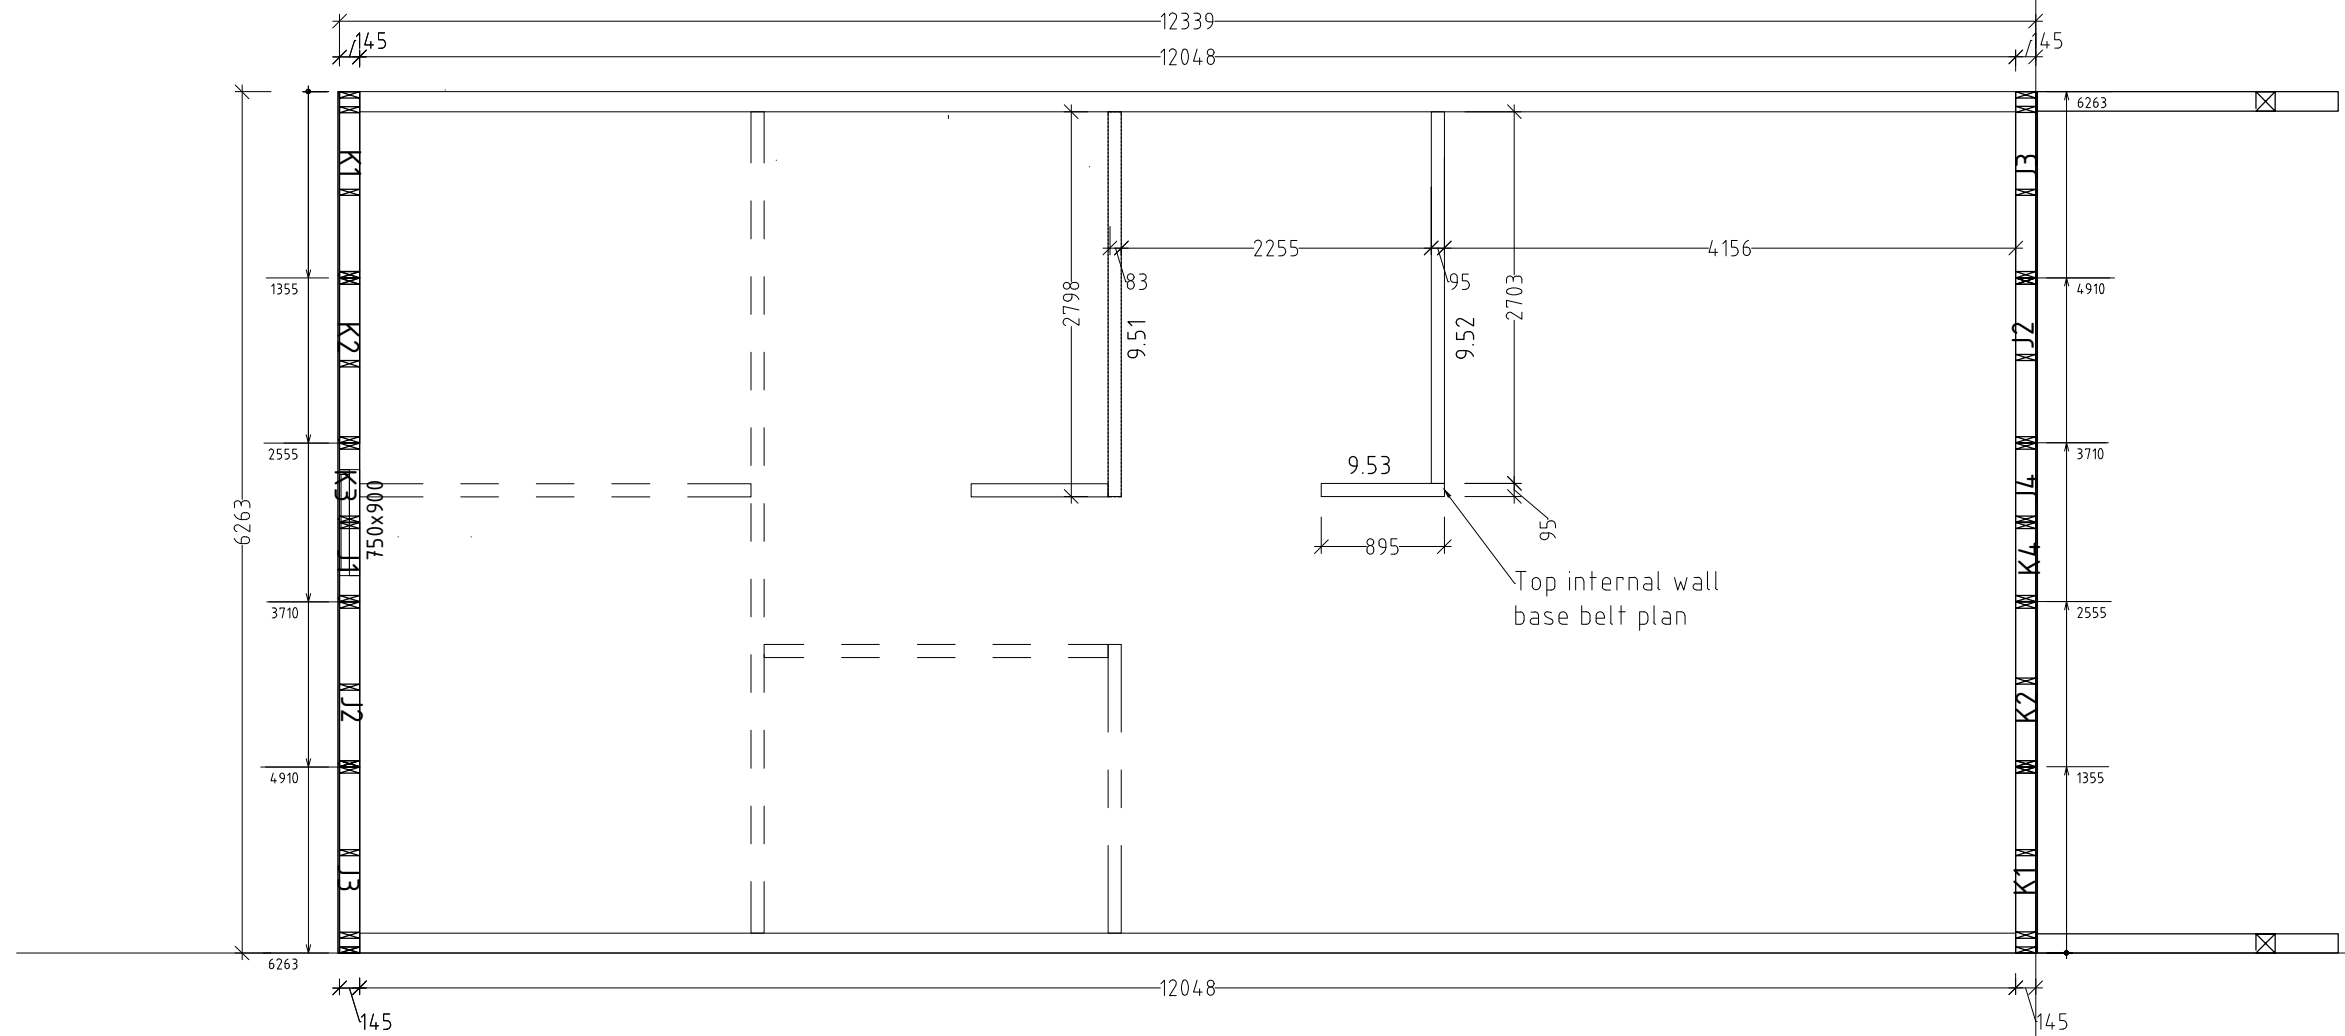
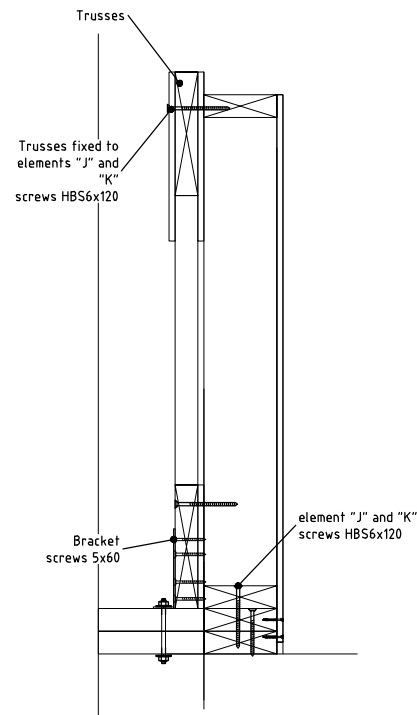


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

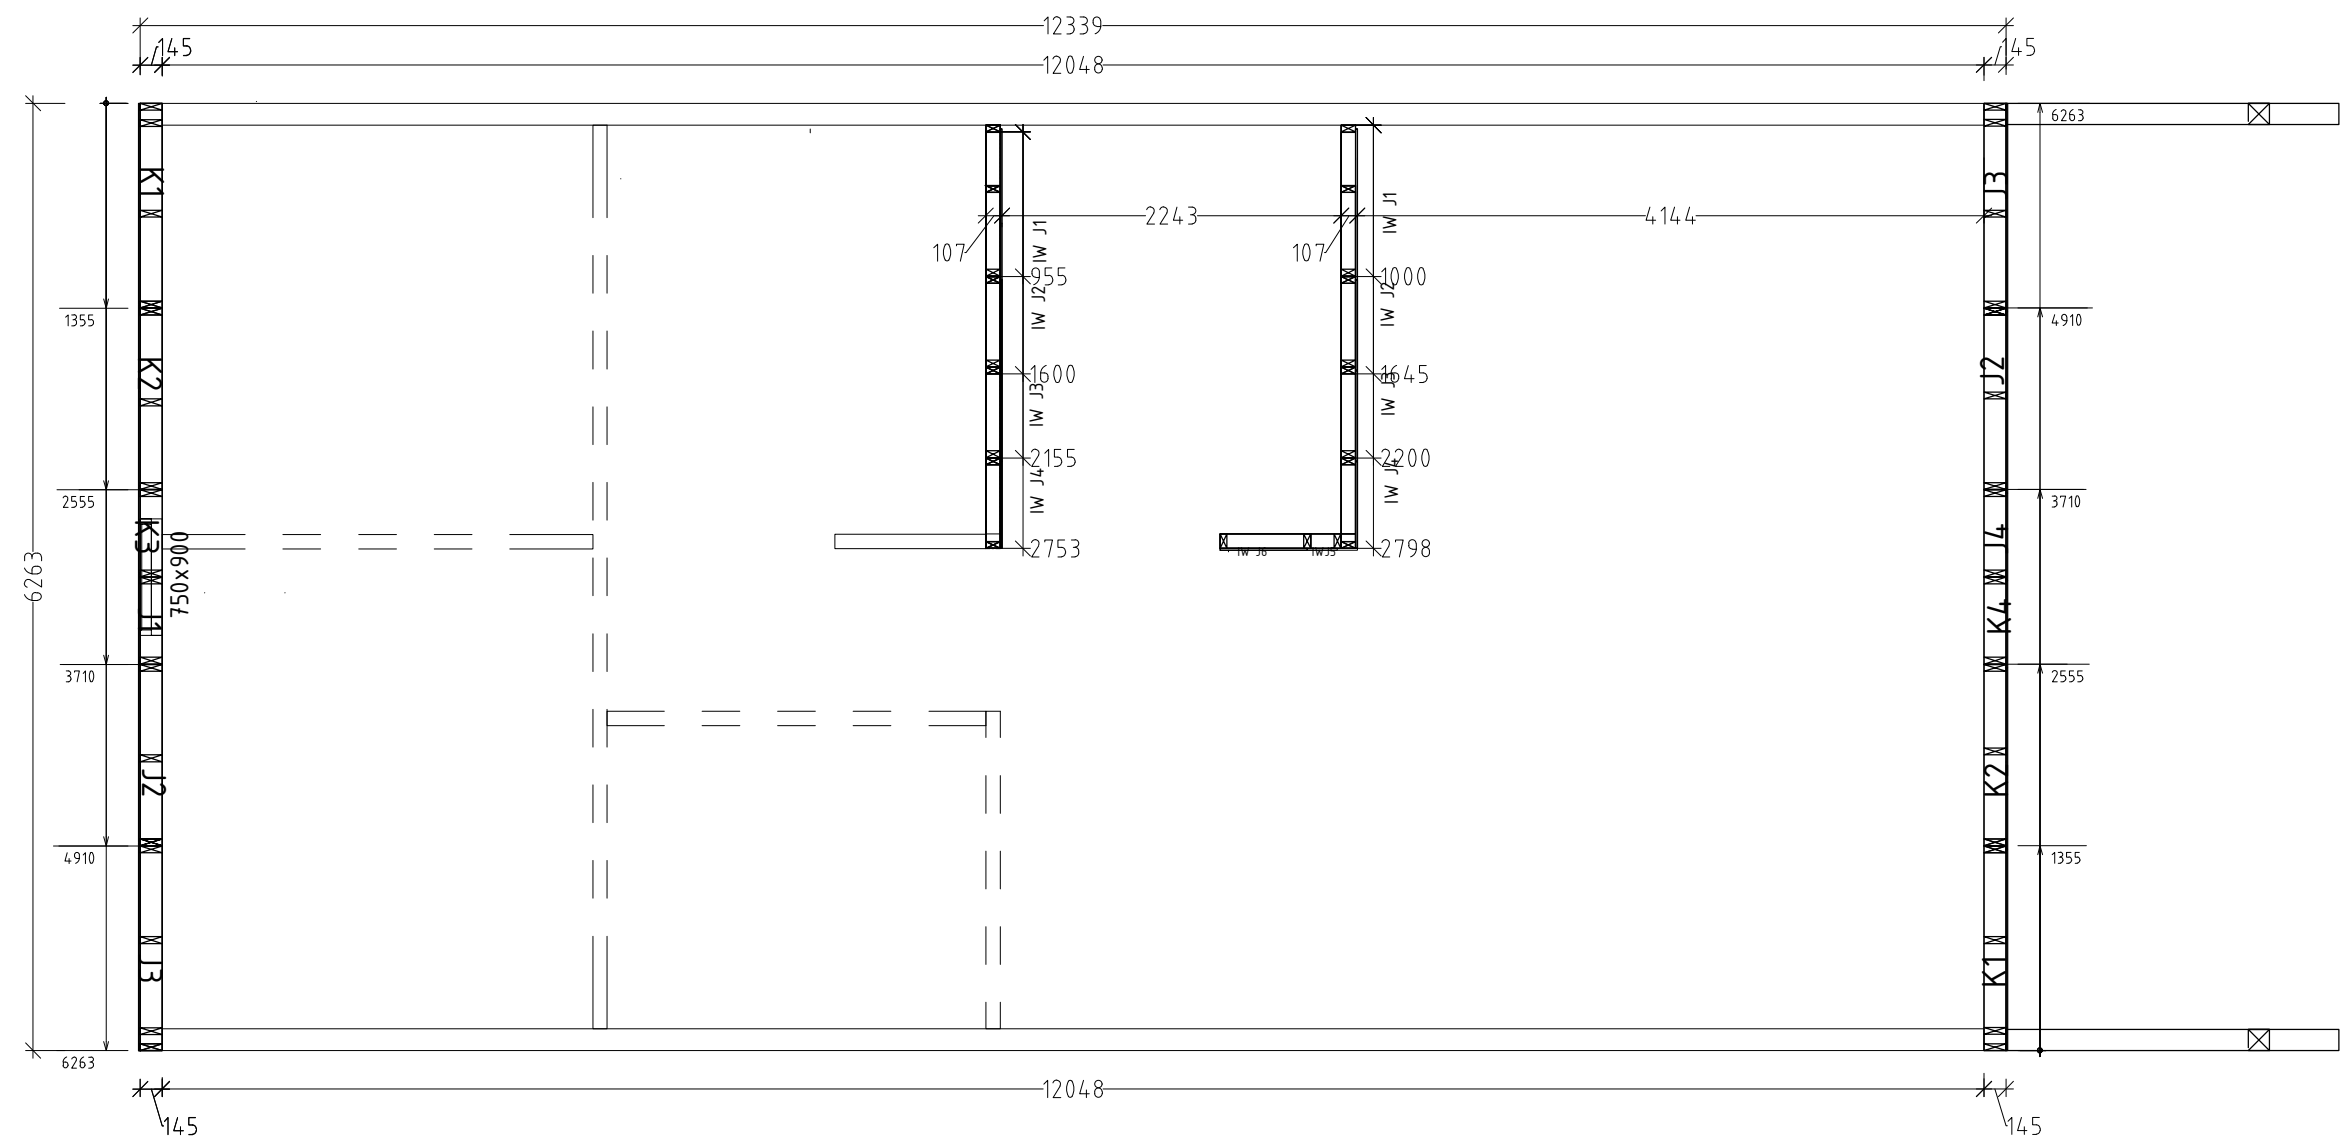

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

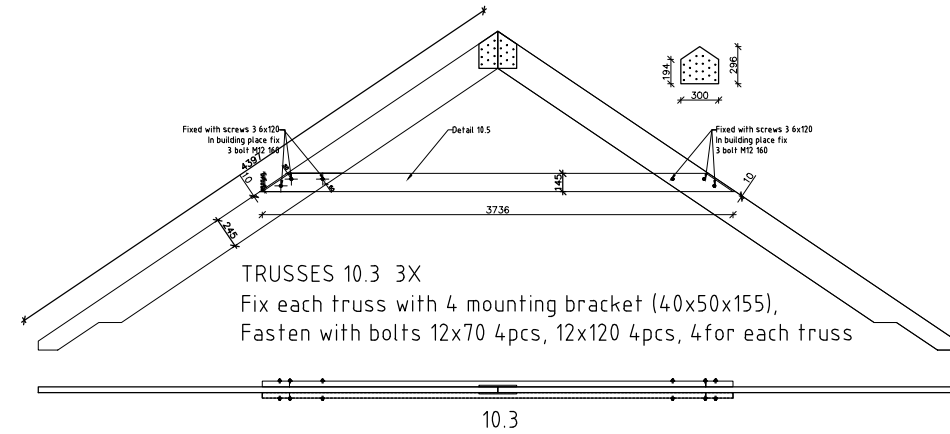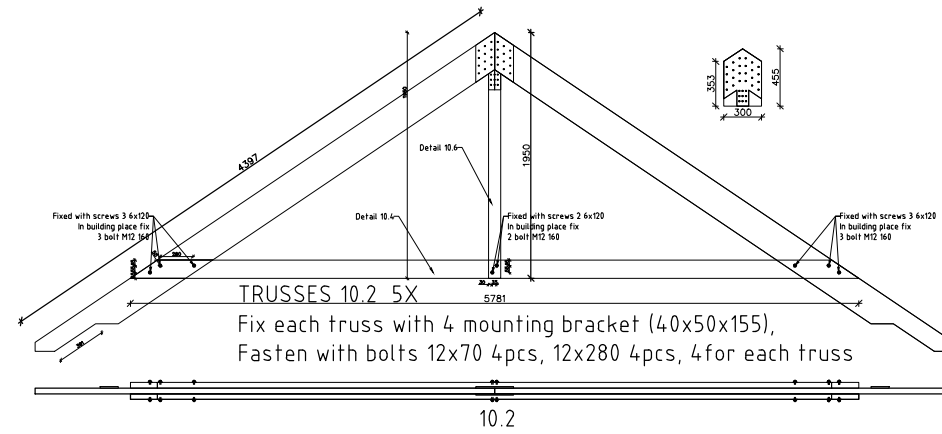
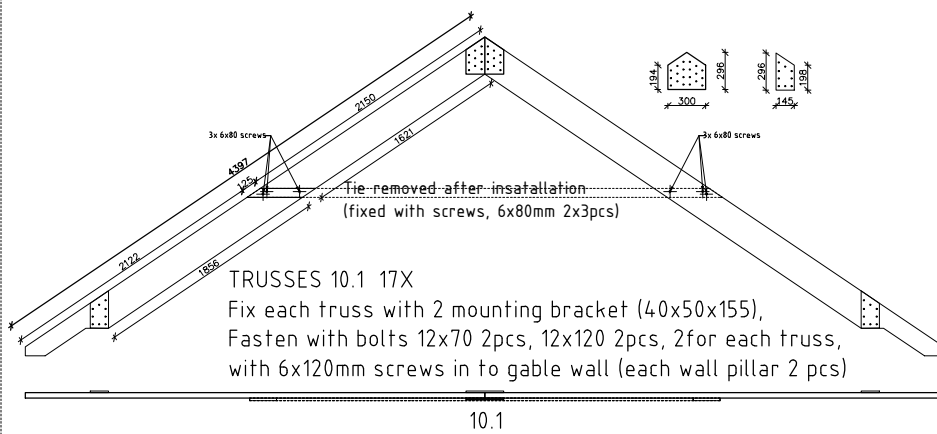
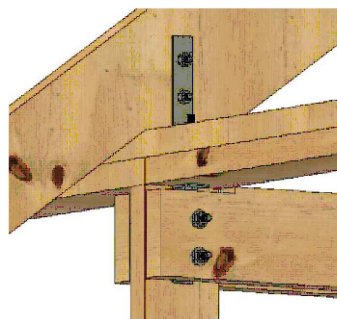


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

IP109

ROOF TRUSSES PLAN 08.07.2022 M 1:25 / A3L

ID:000-2018; project:Klettat 80m2; designer: M.K ;Drawer: M.K

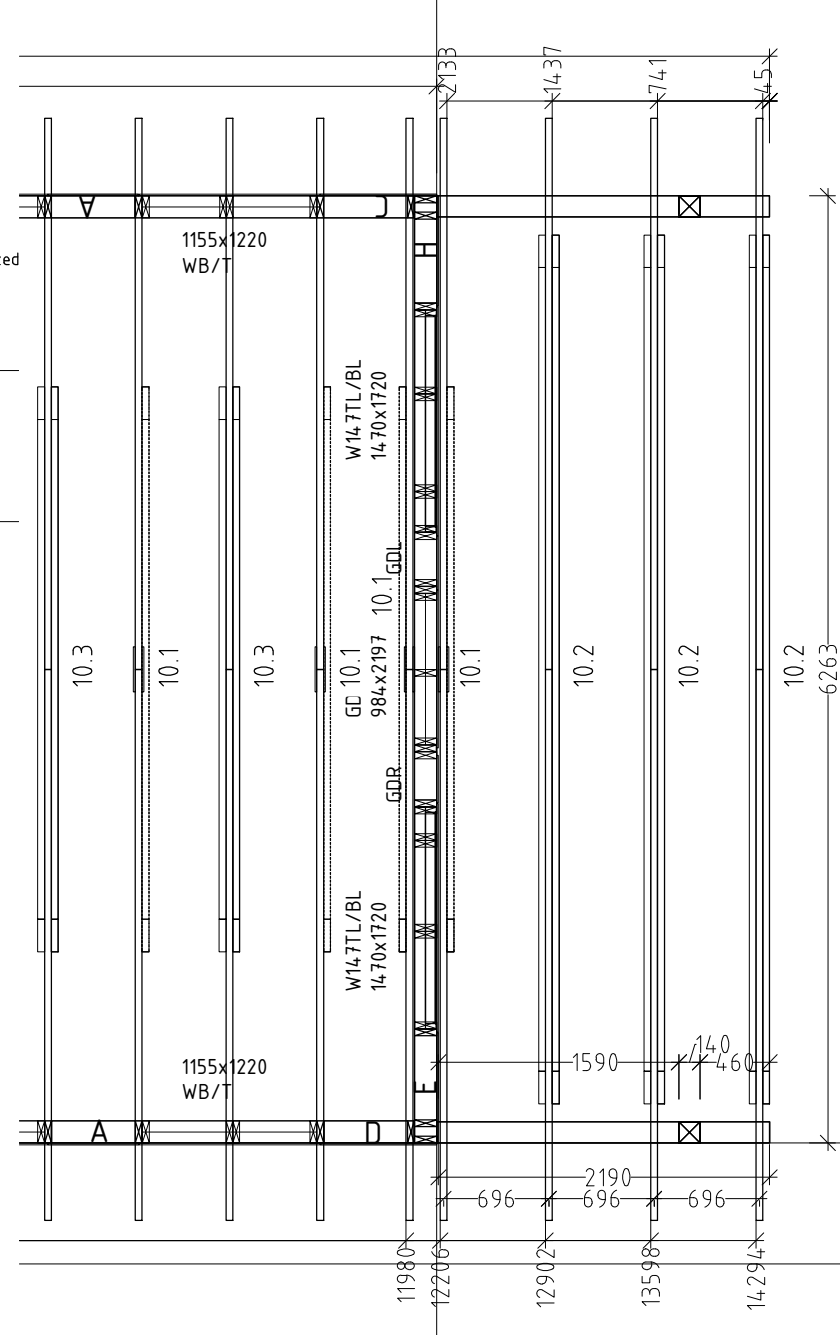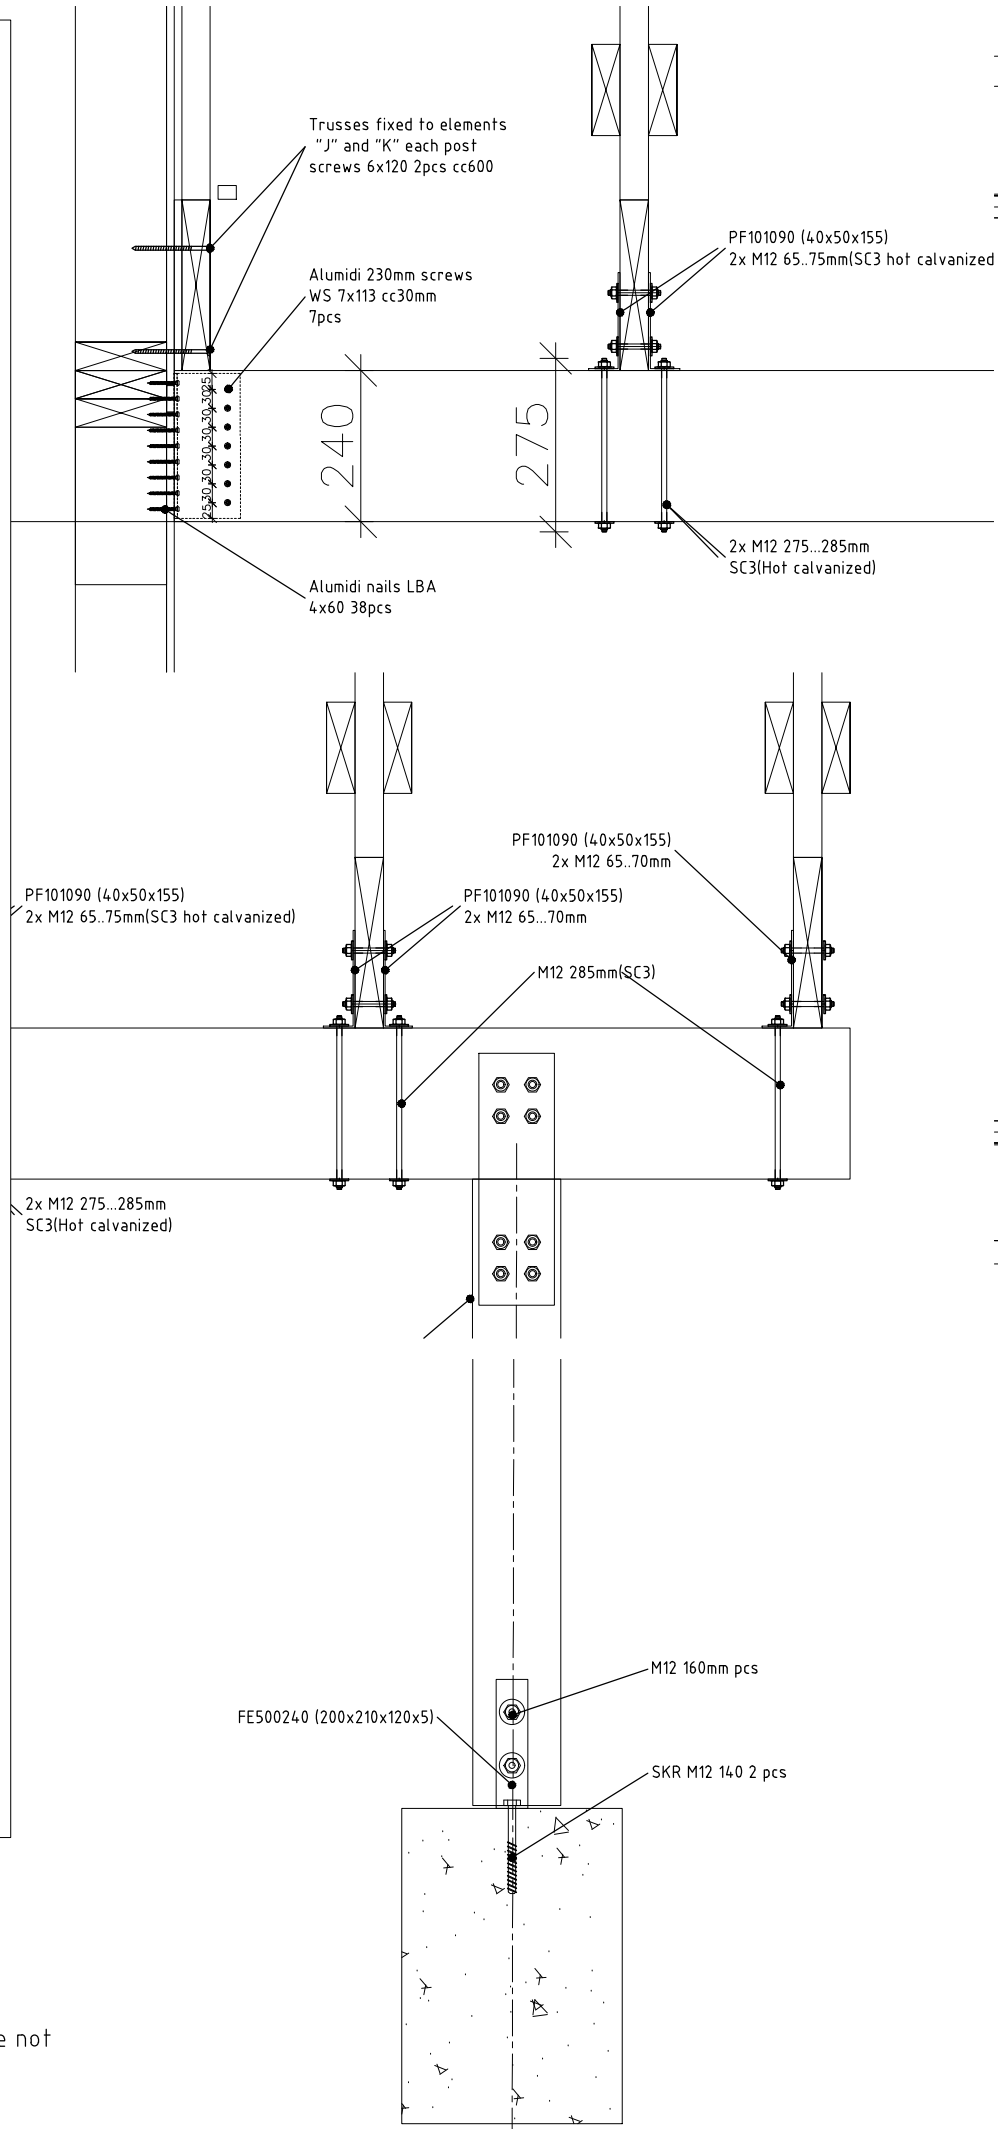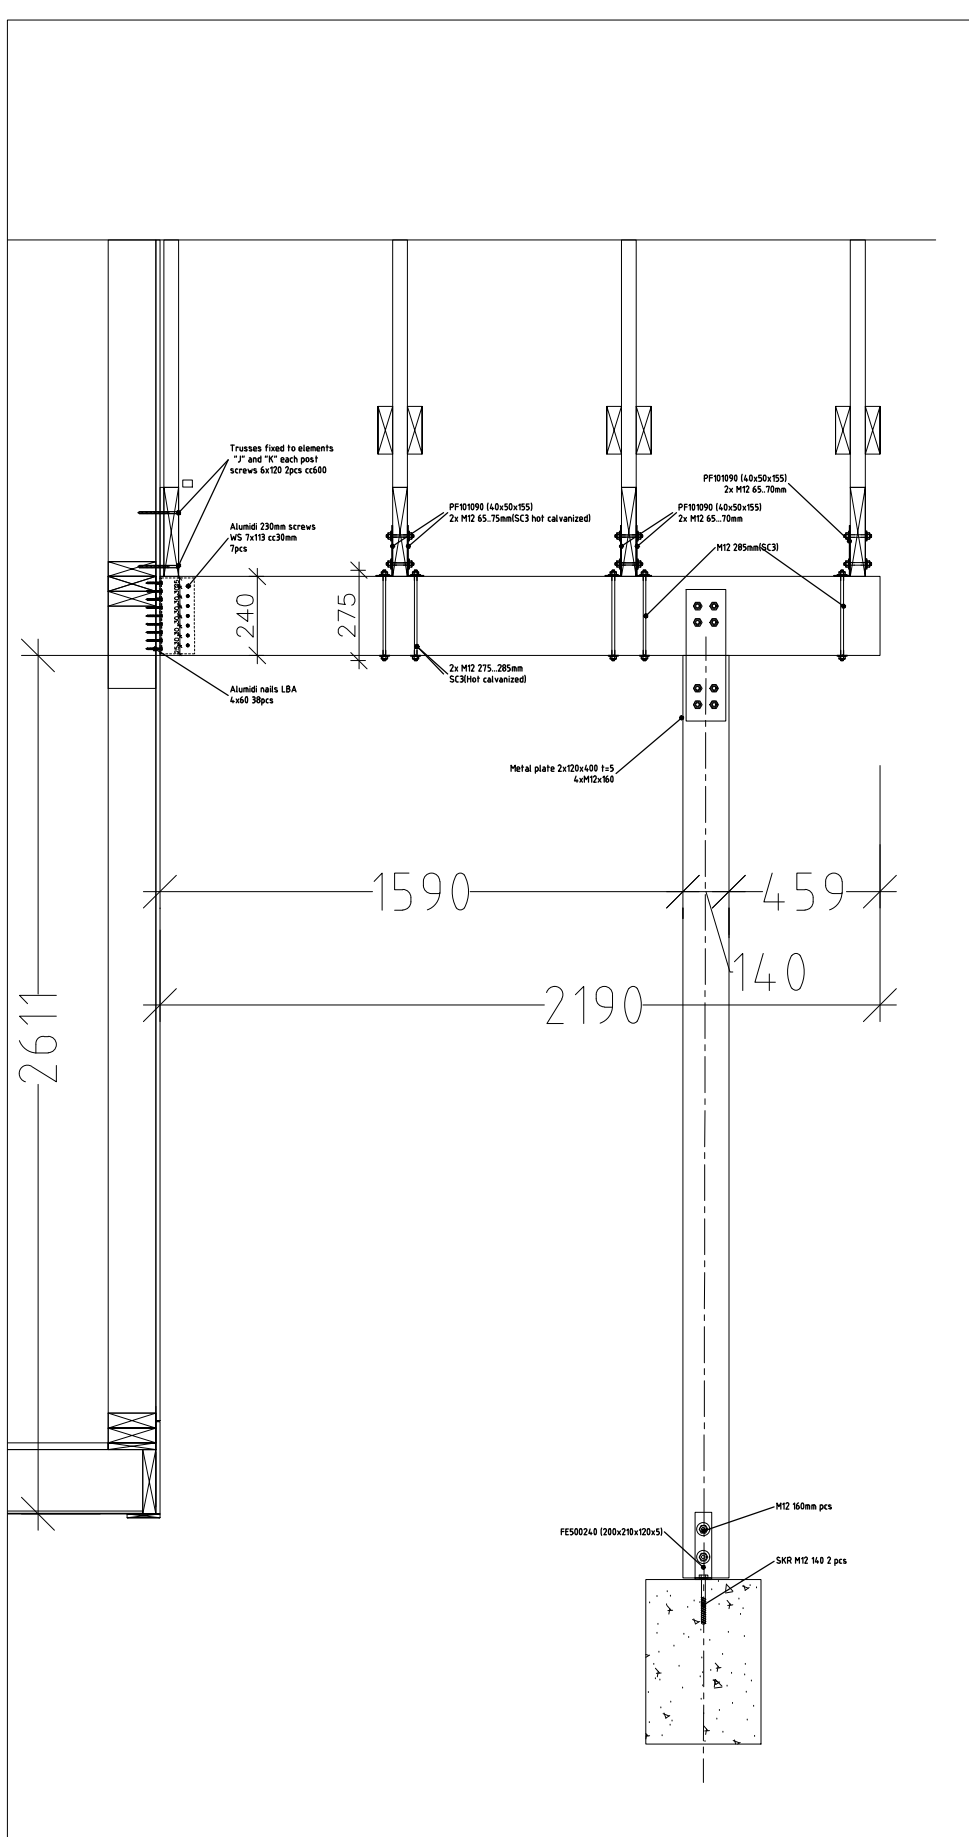


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.




IP110

POST AND BEAM ON FRONT OVERROOF AREA 08.07.2022 M 1:25 / A3L

ID:000-2018; project:Klettar 80m2; designer: M.K ;Drawer: M.K

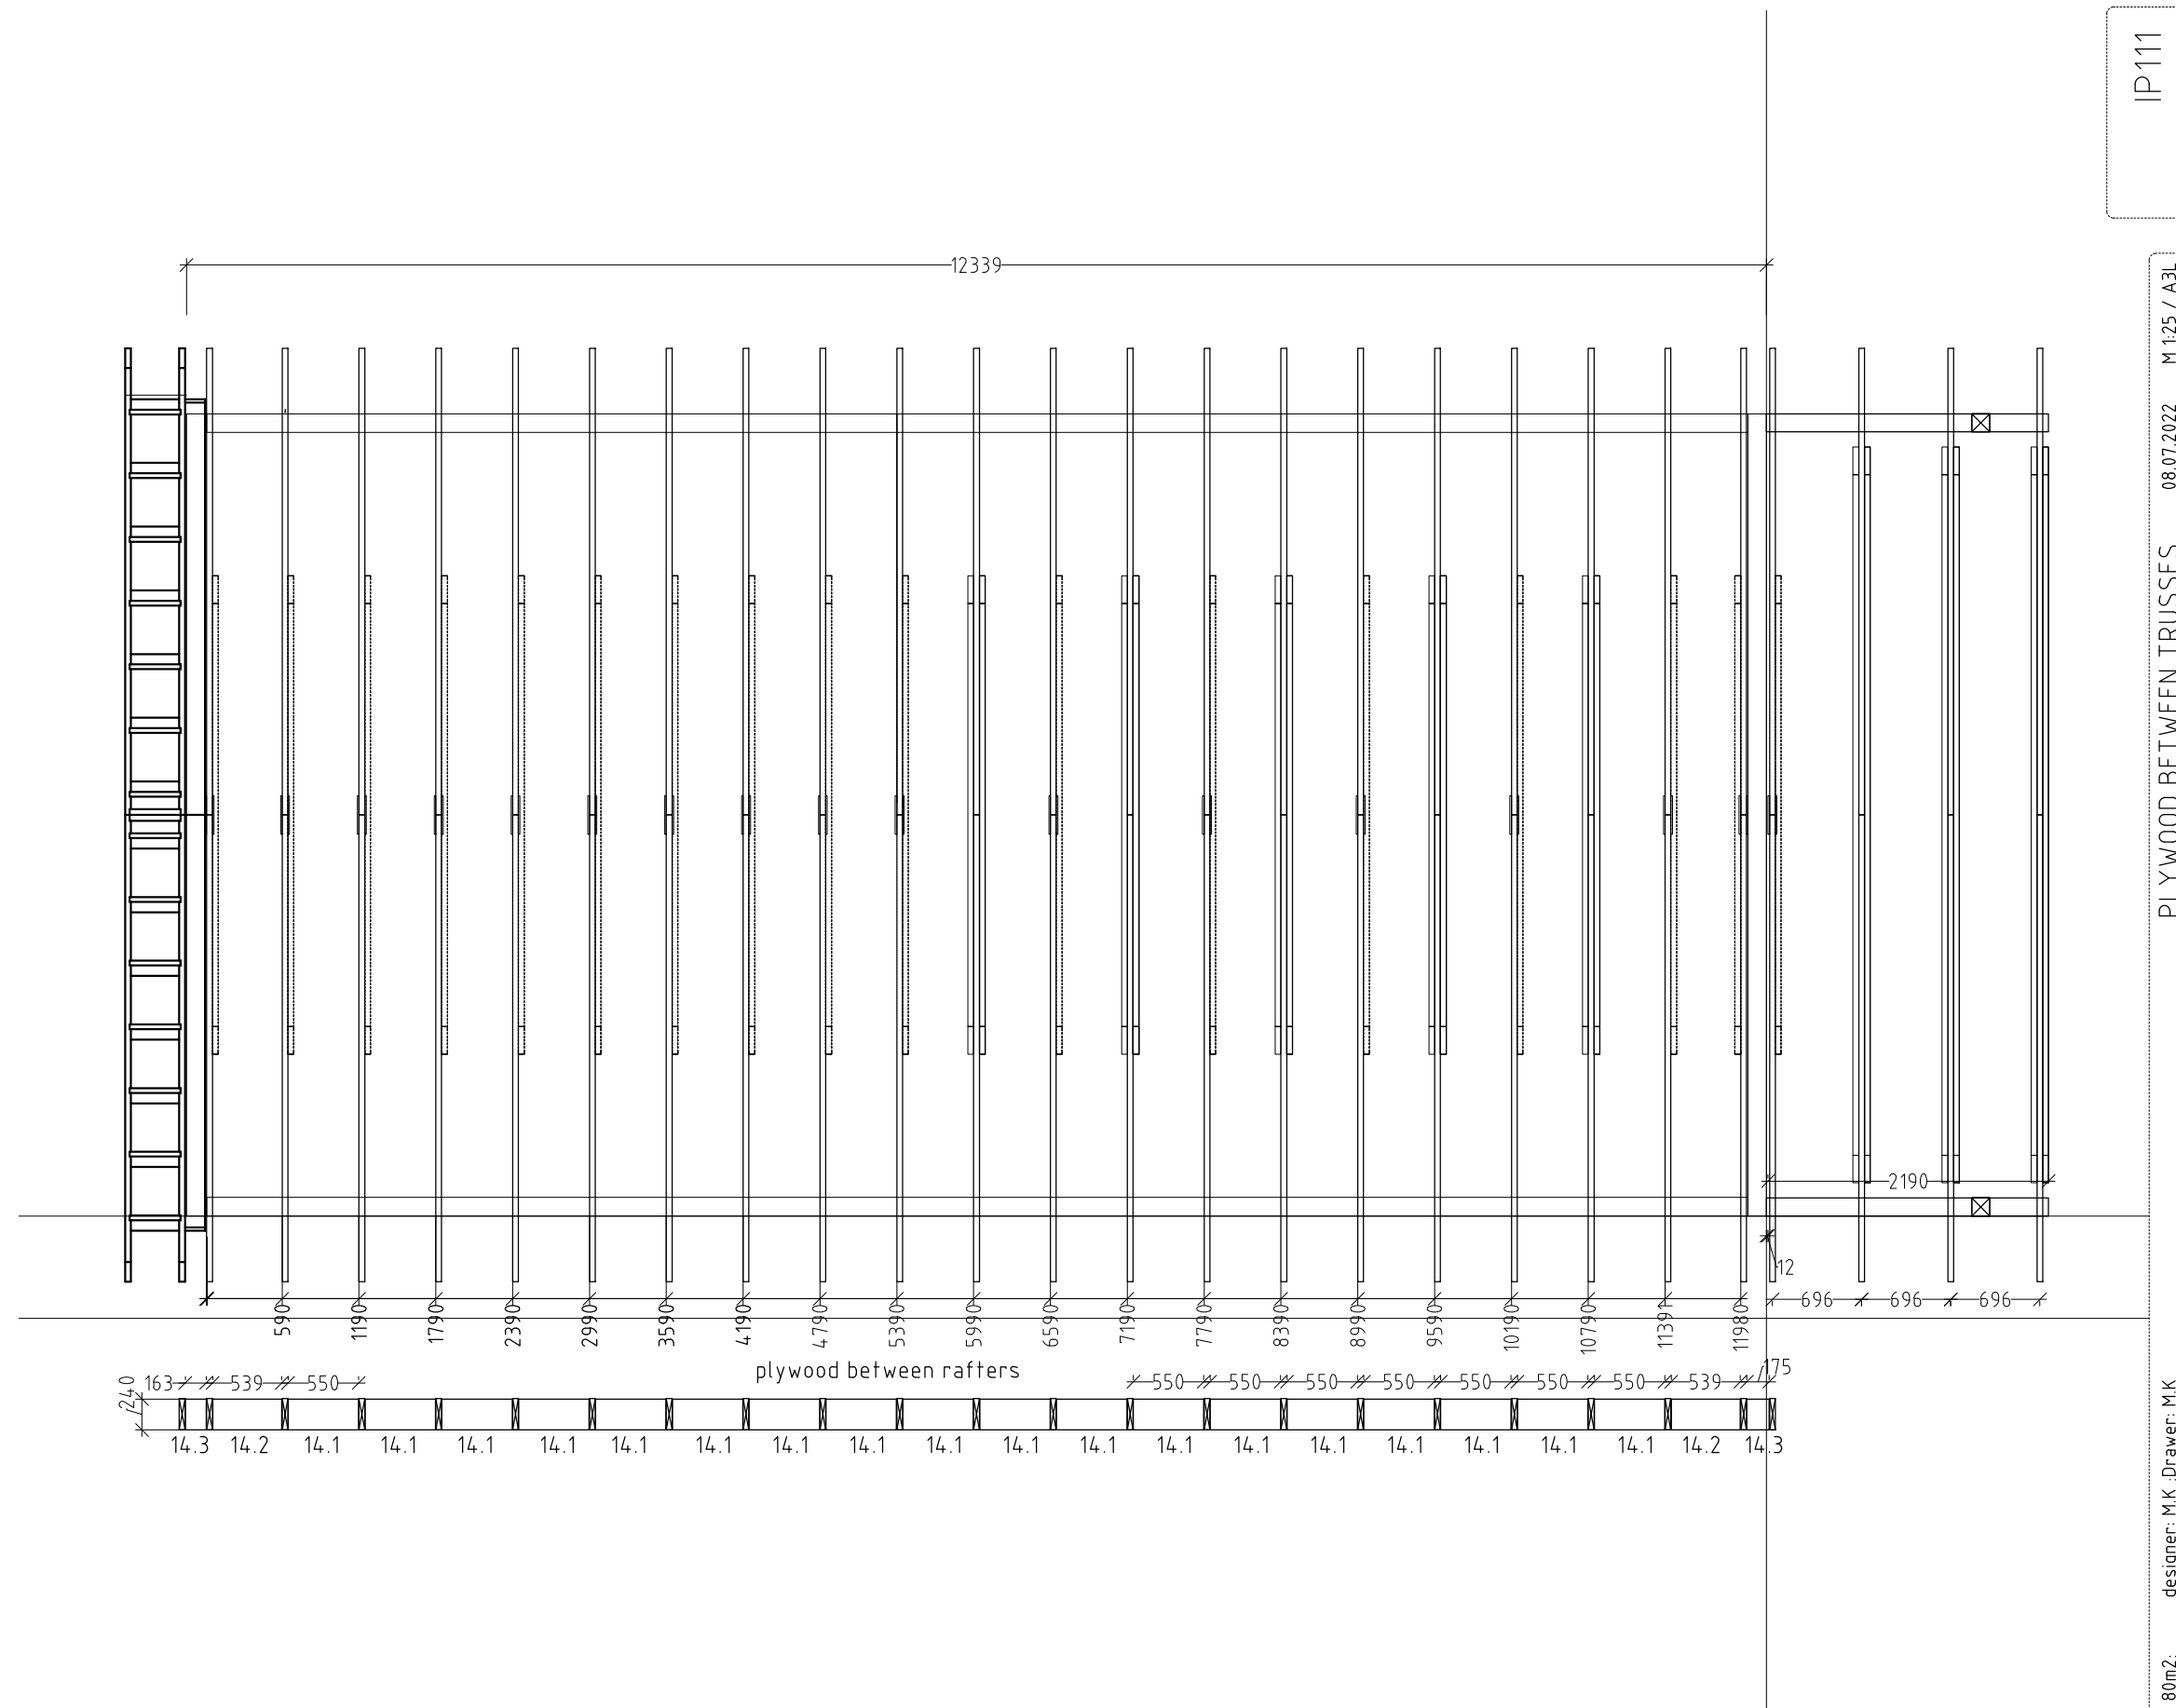



1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

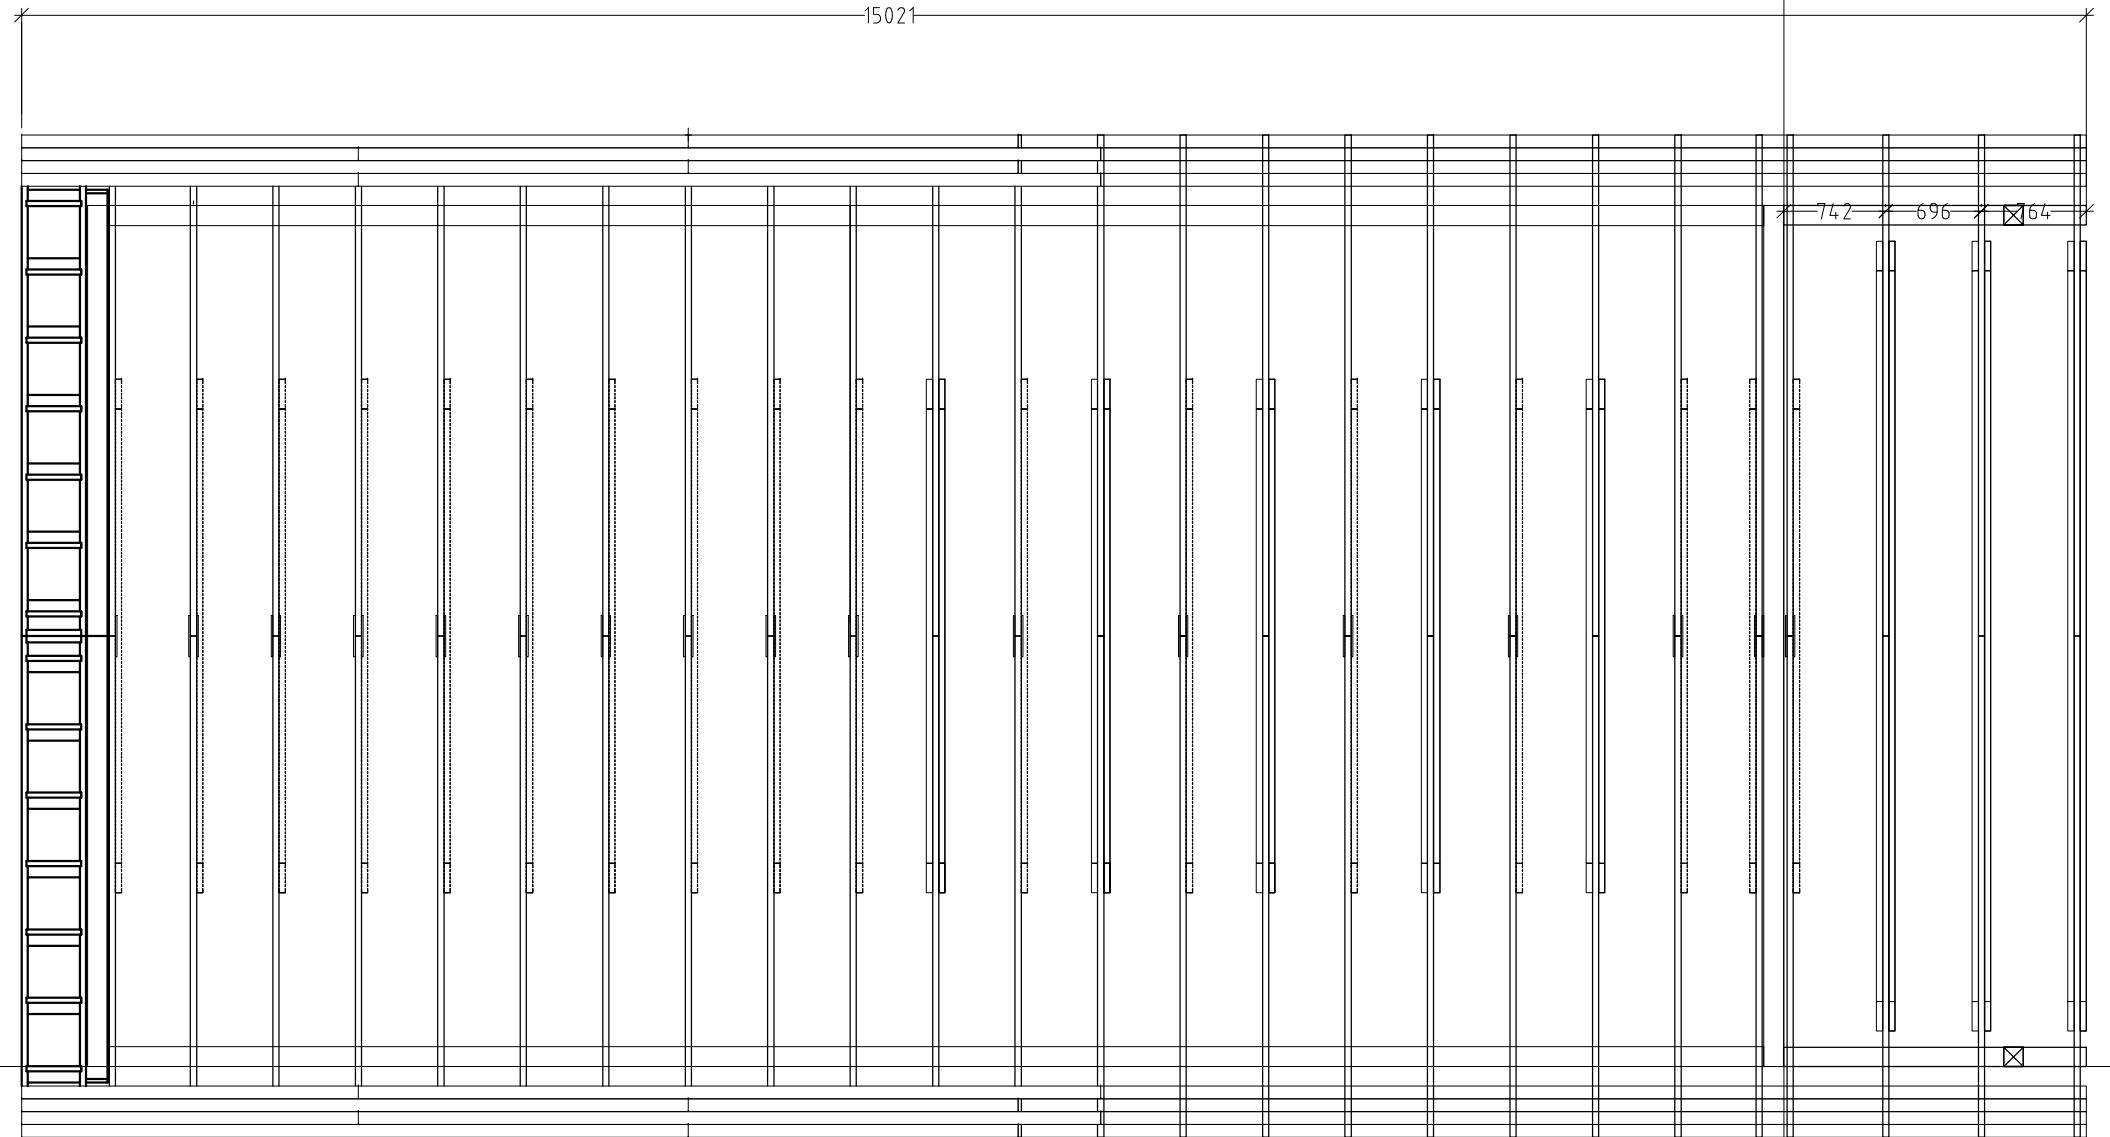
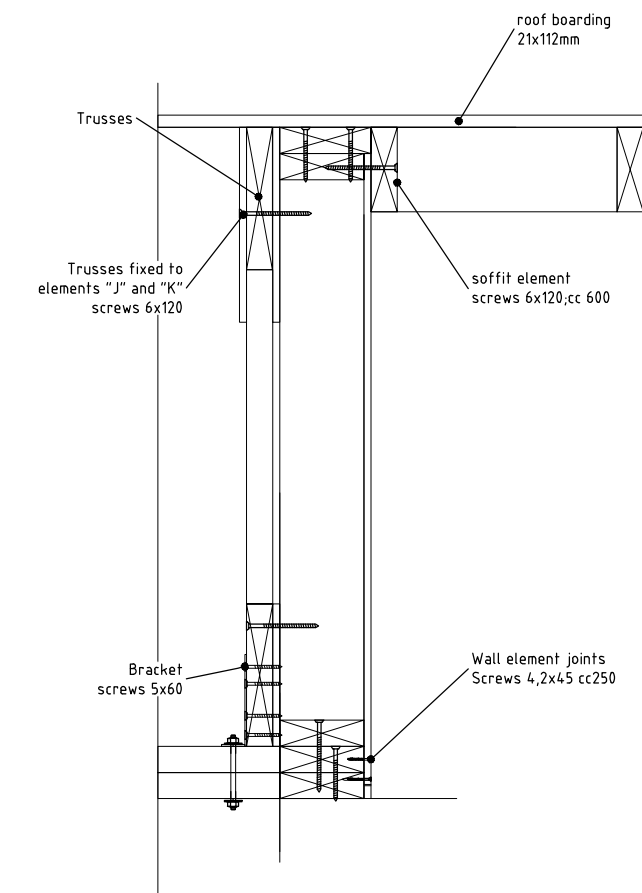
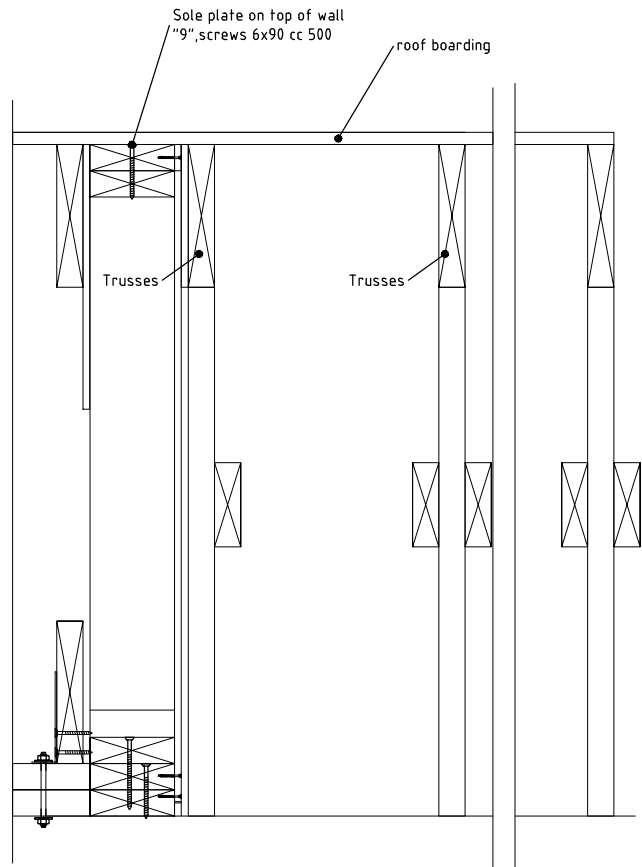


Board material amount is sent in meter amount
Board connection must be dispersed.
Board connection on the same bearing support is allowed over 2 boards

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

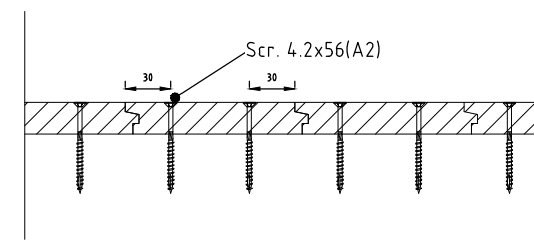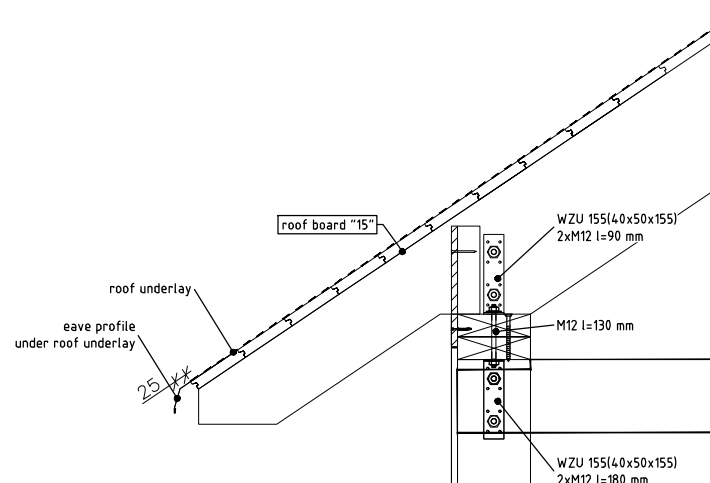

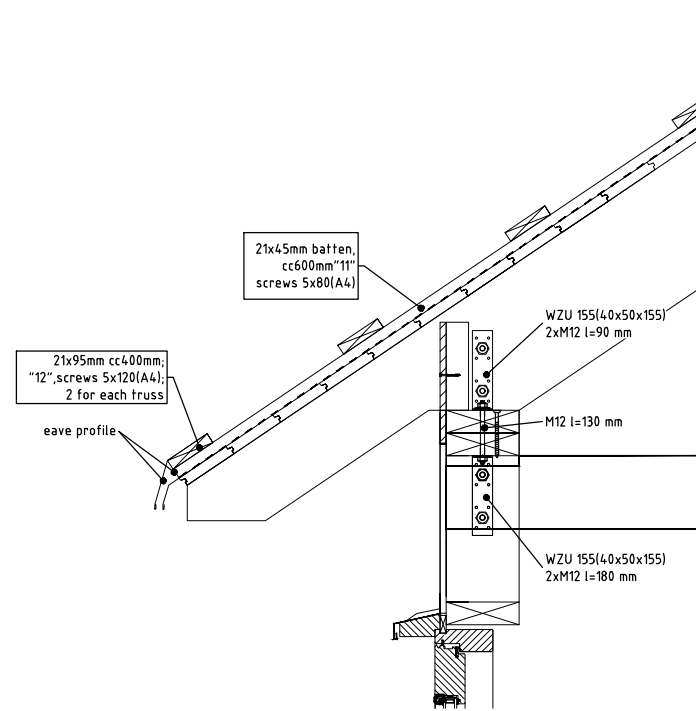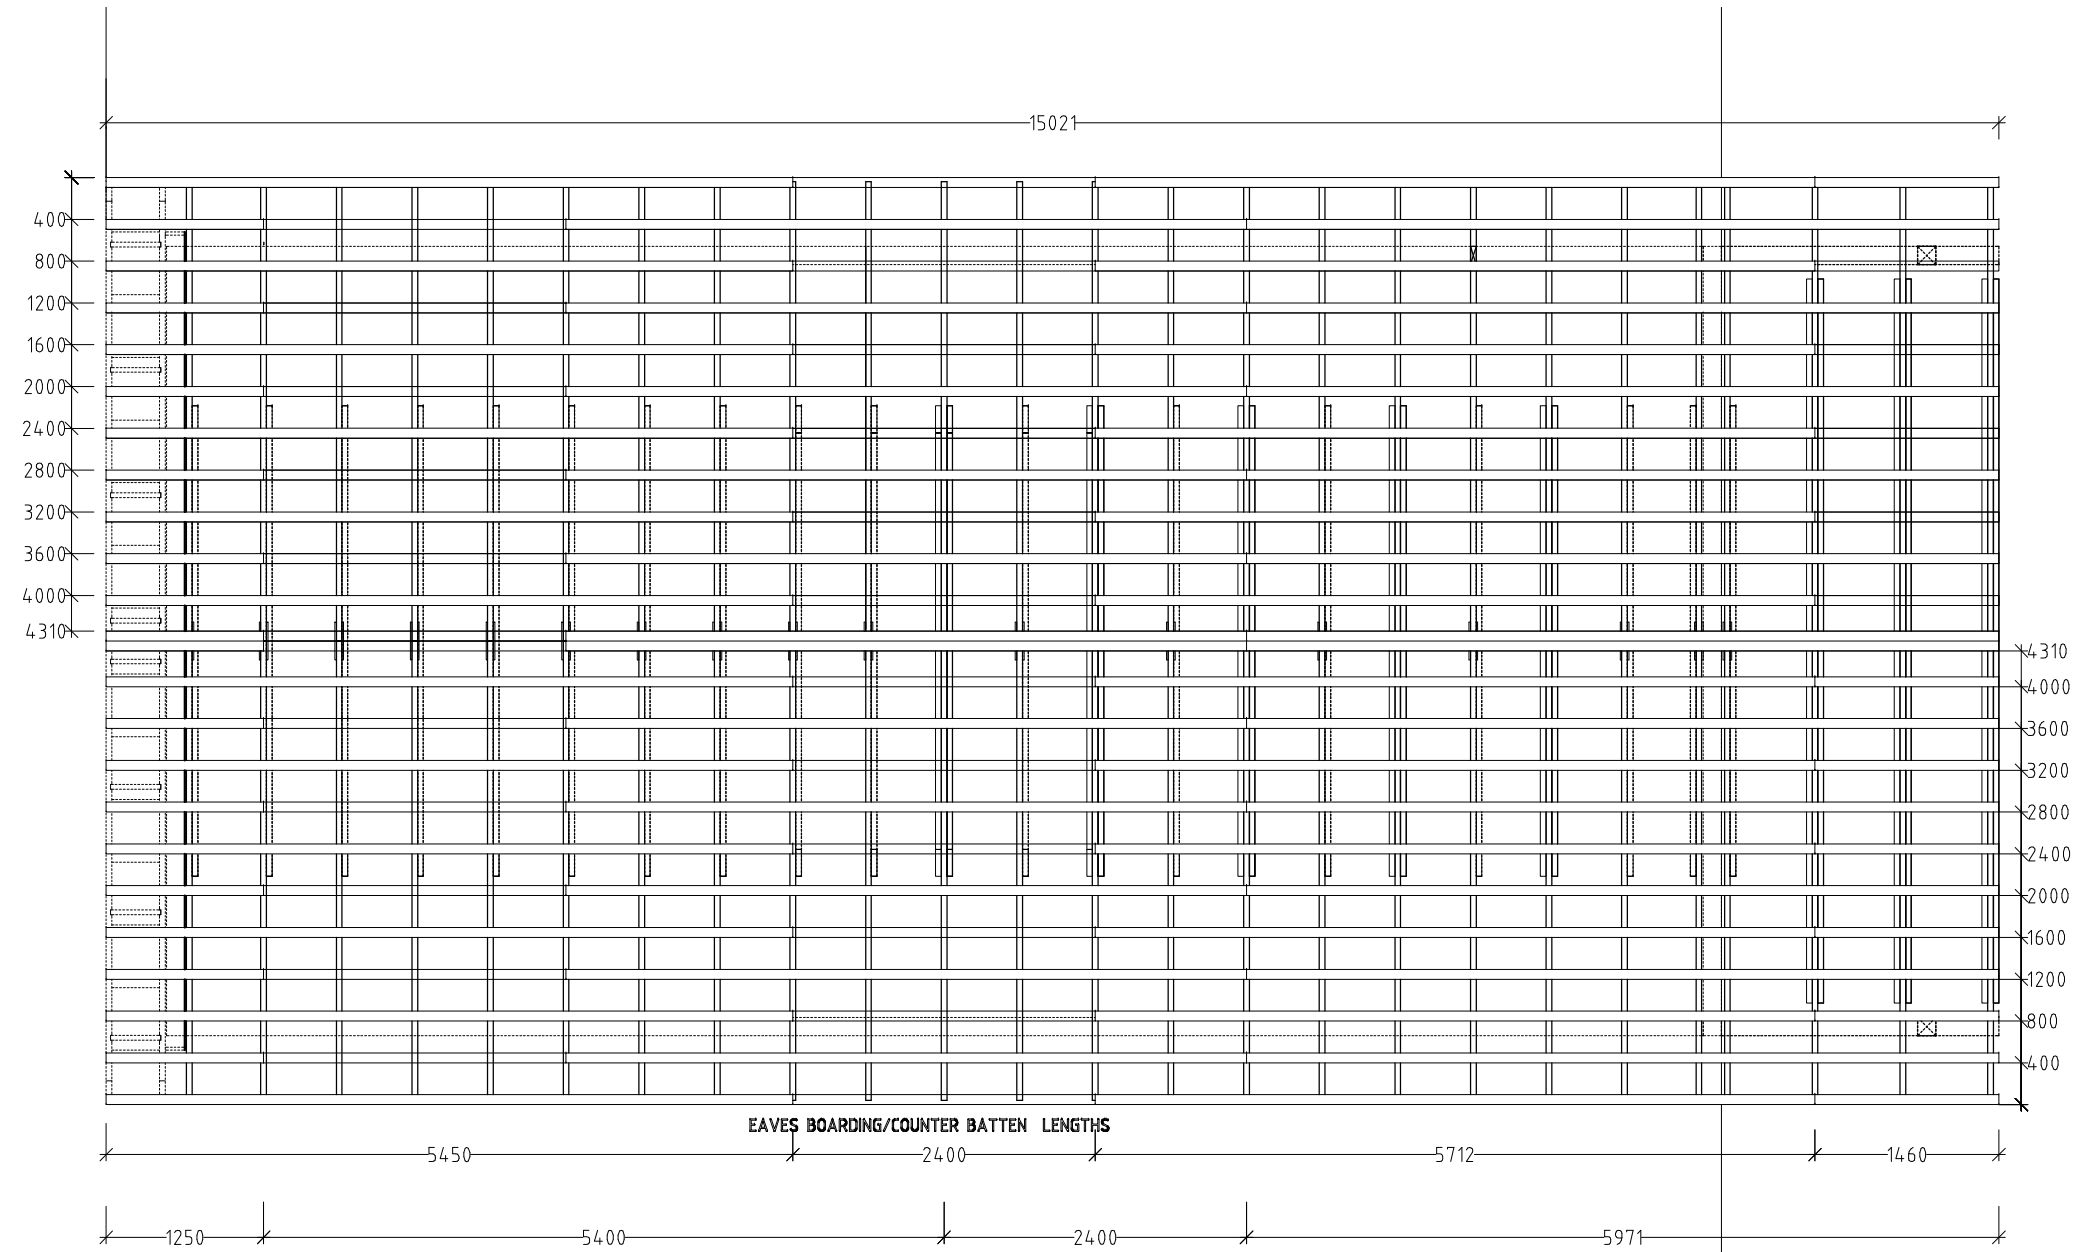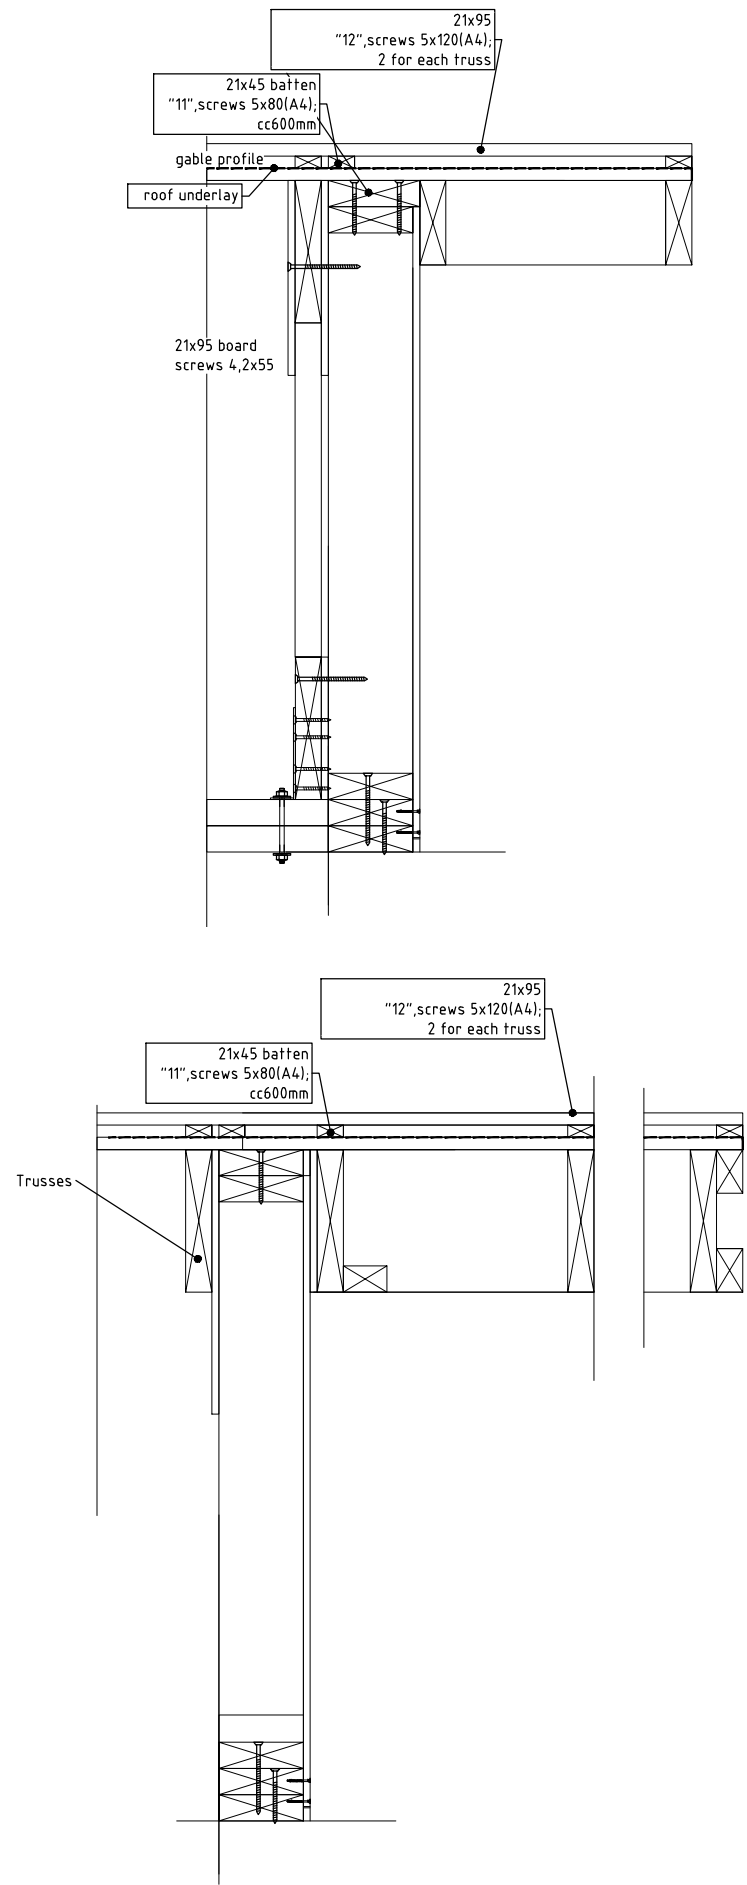


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

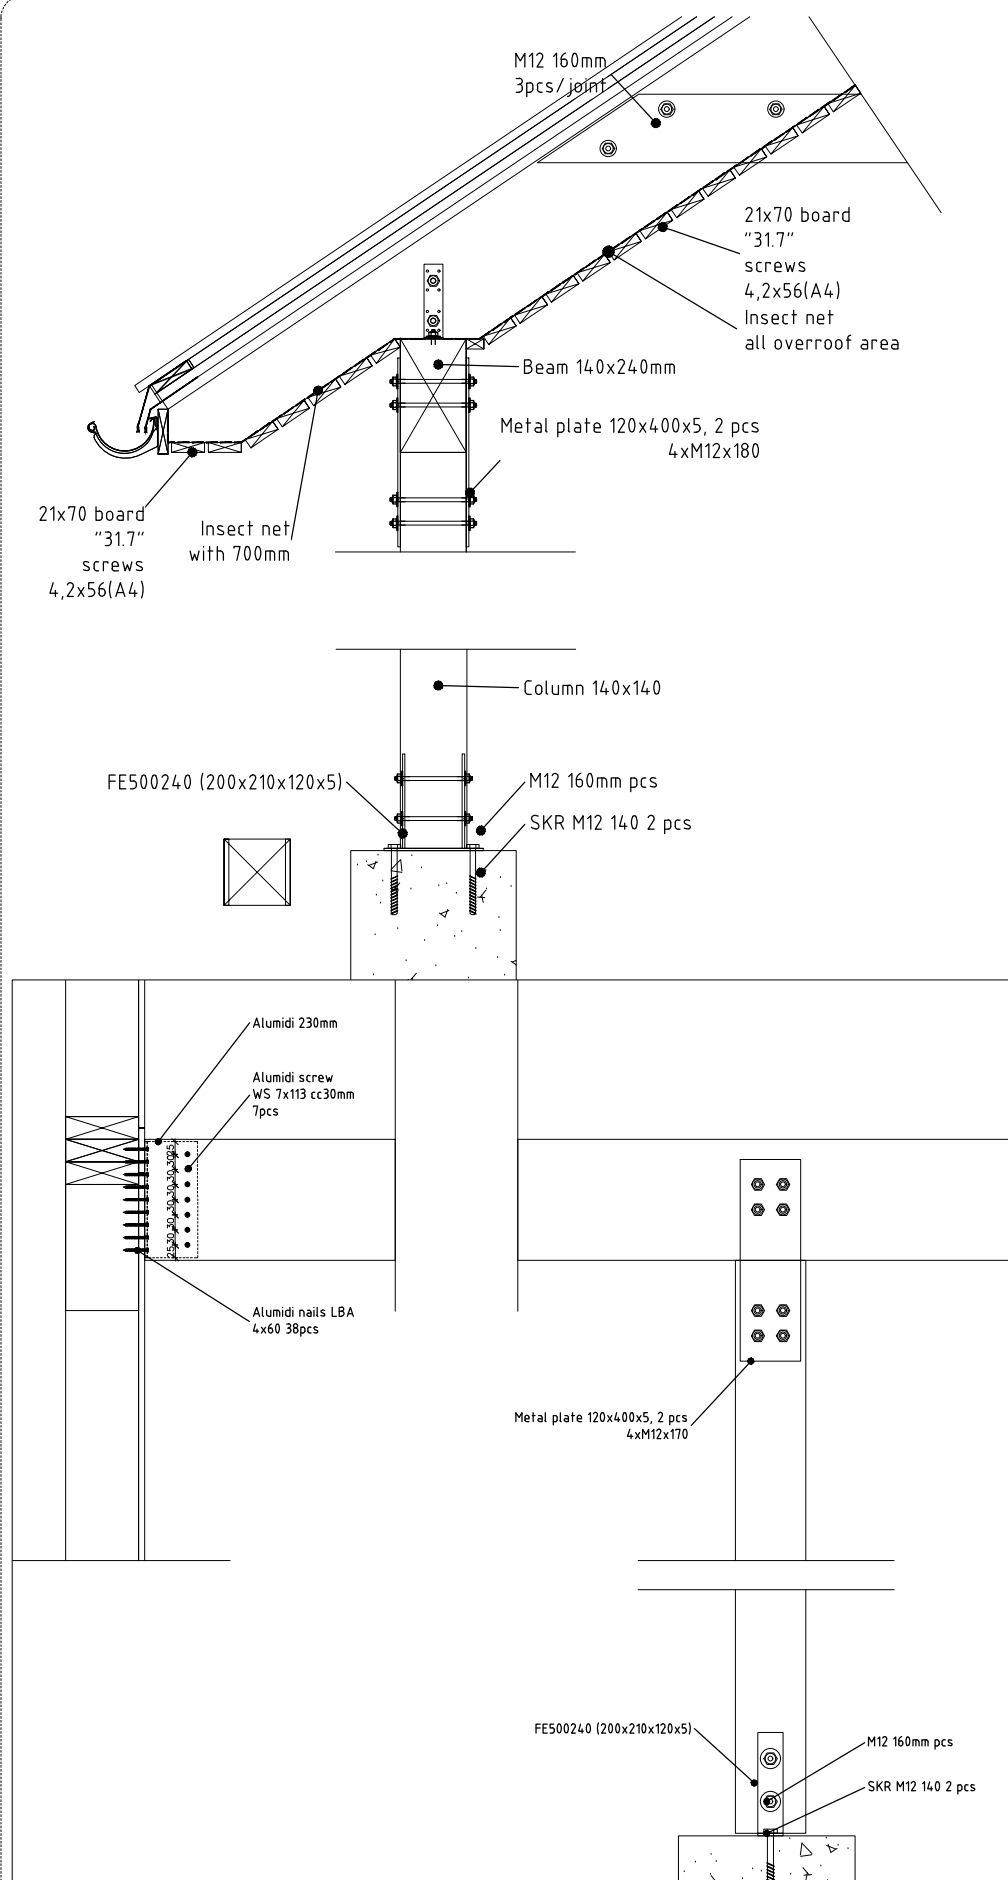

Notes:






1. Follow appropriate detail drawings to fasten elements.
2. Parapet steel profile installation order: corner profile and end profile, parapet profile.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

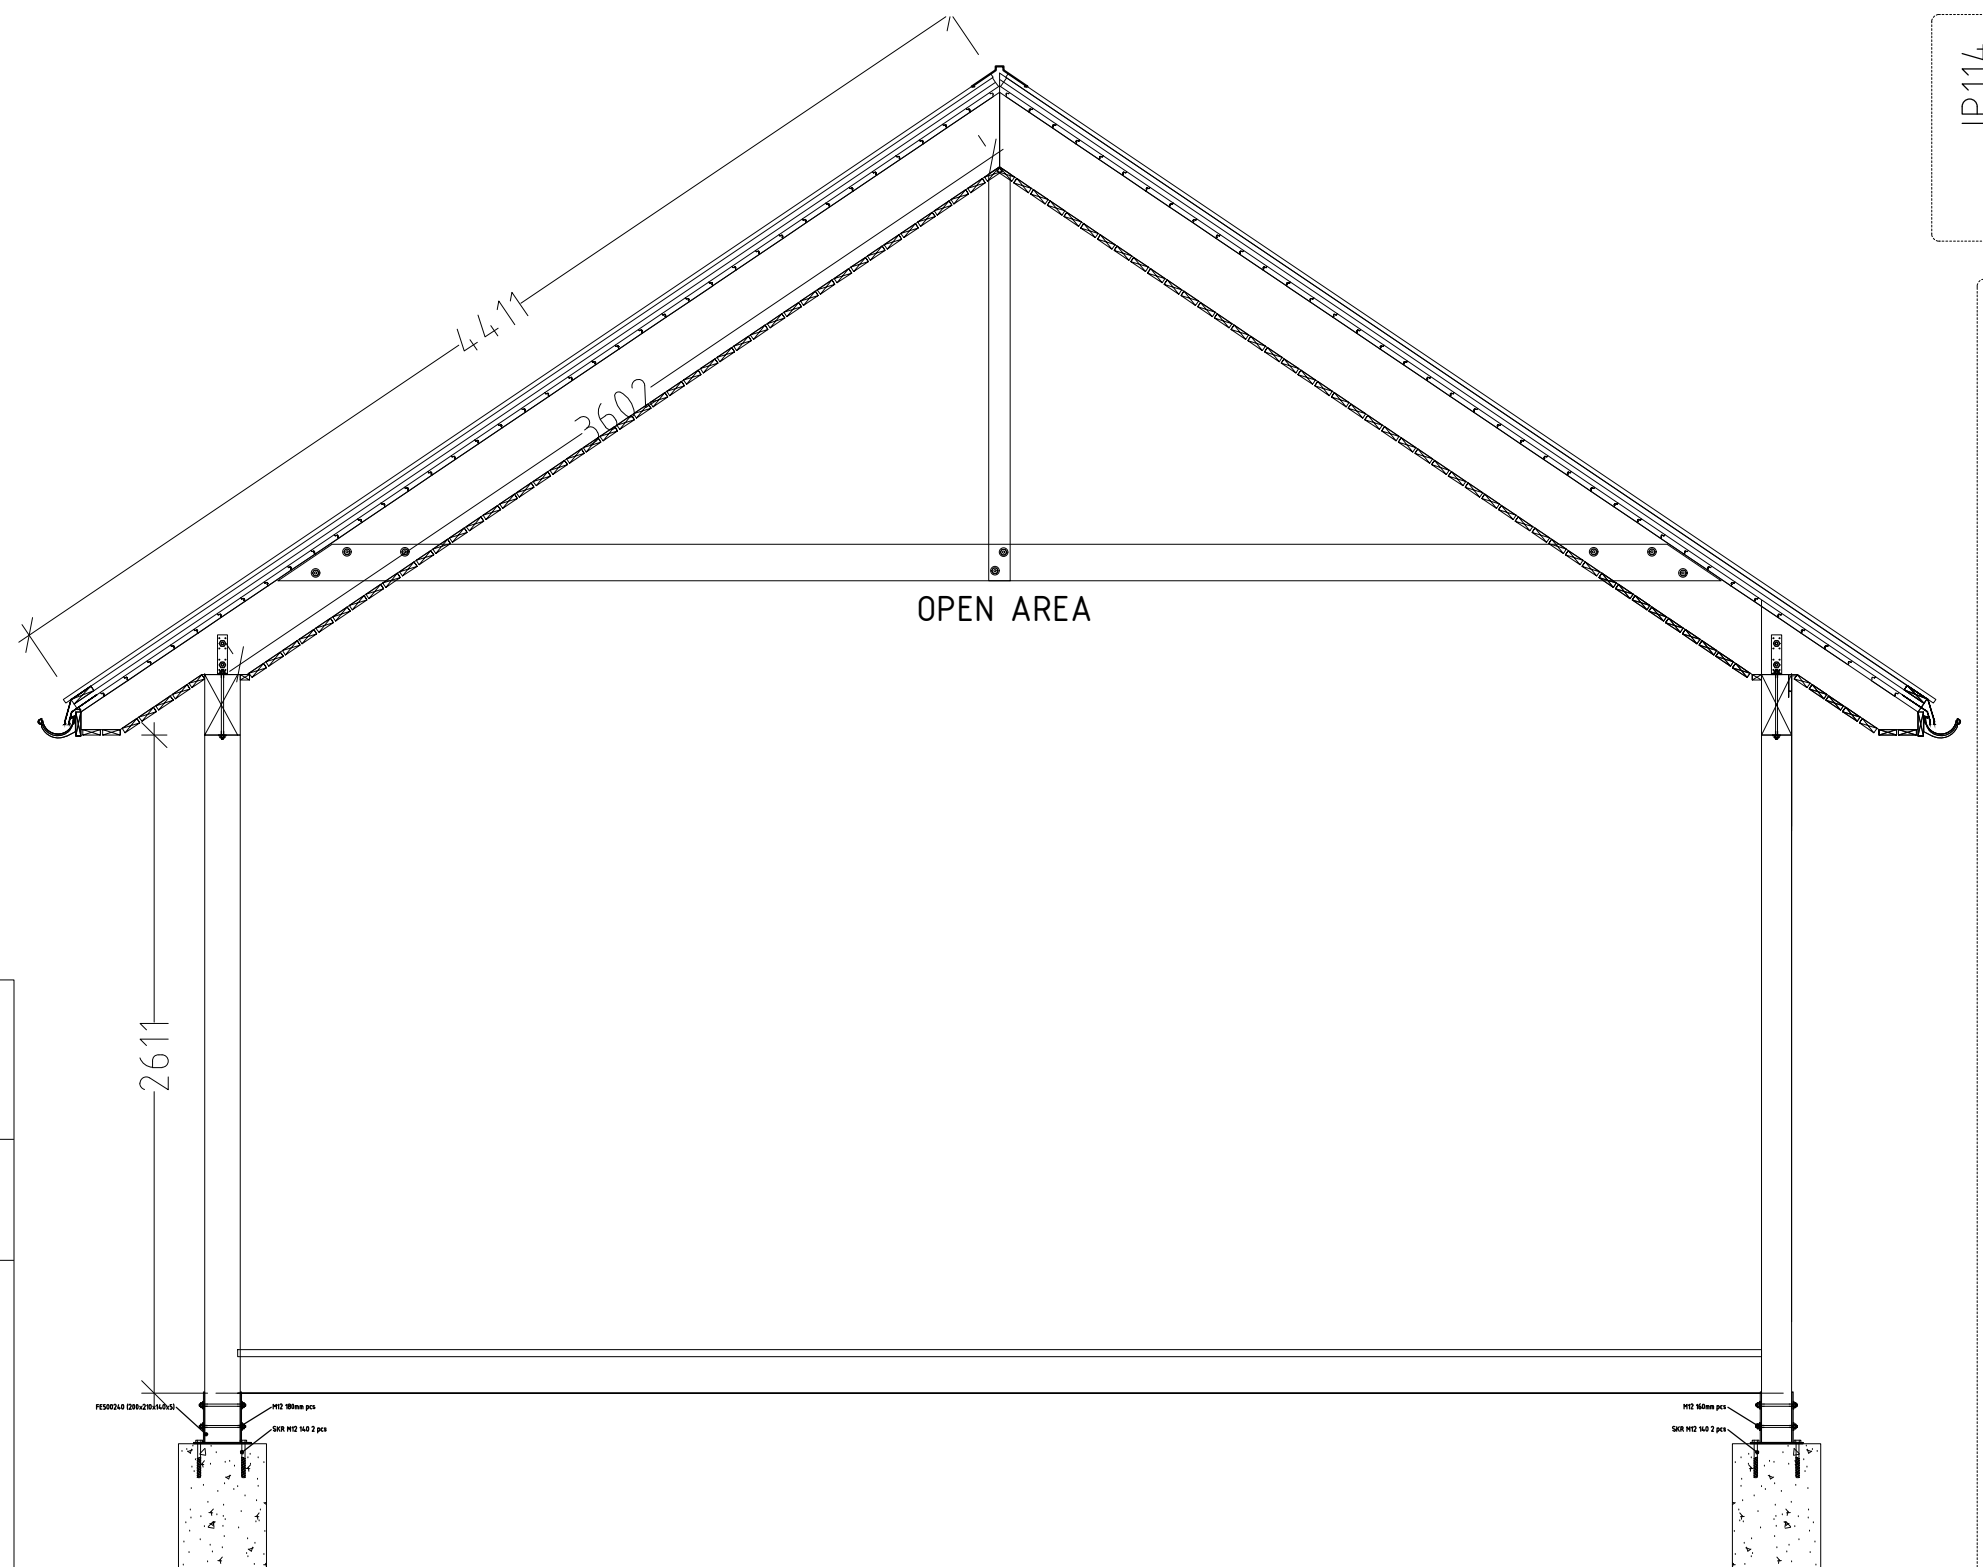

IP114


POST MOUNTING 08.07.2022 M 1:50 / A3L

ID:000-2018; project:Klettar 80m2; designer: M.K; Drawer: M.K

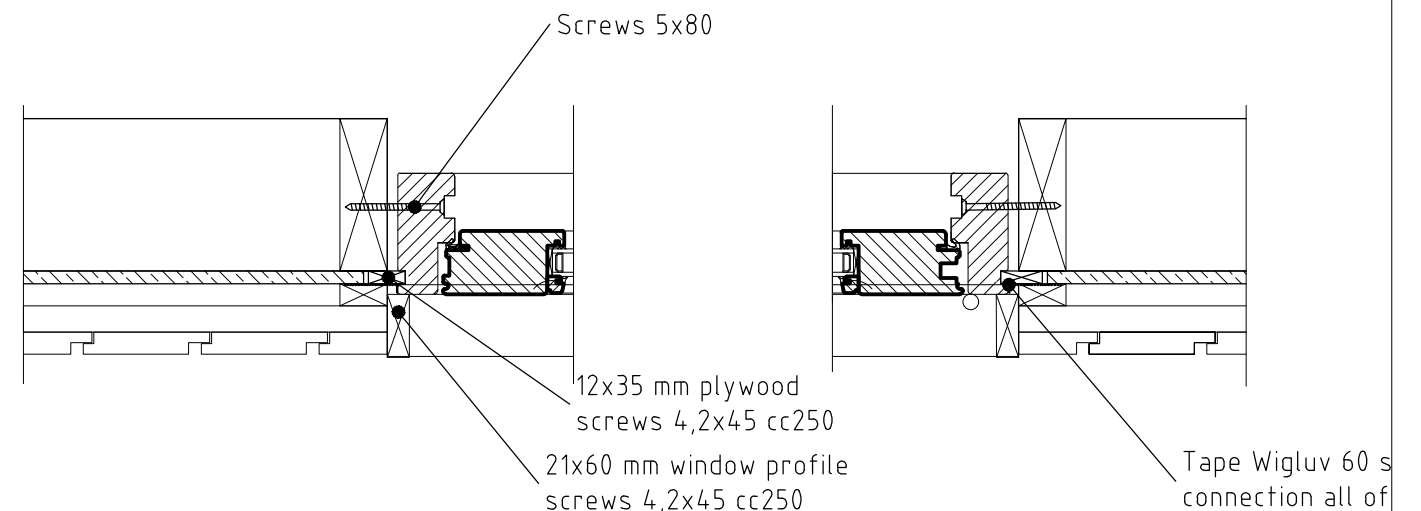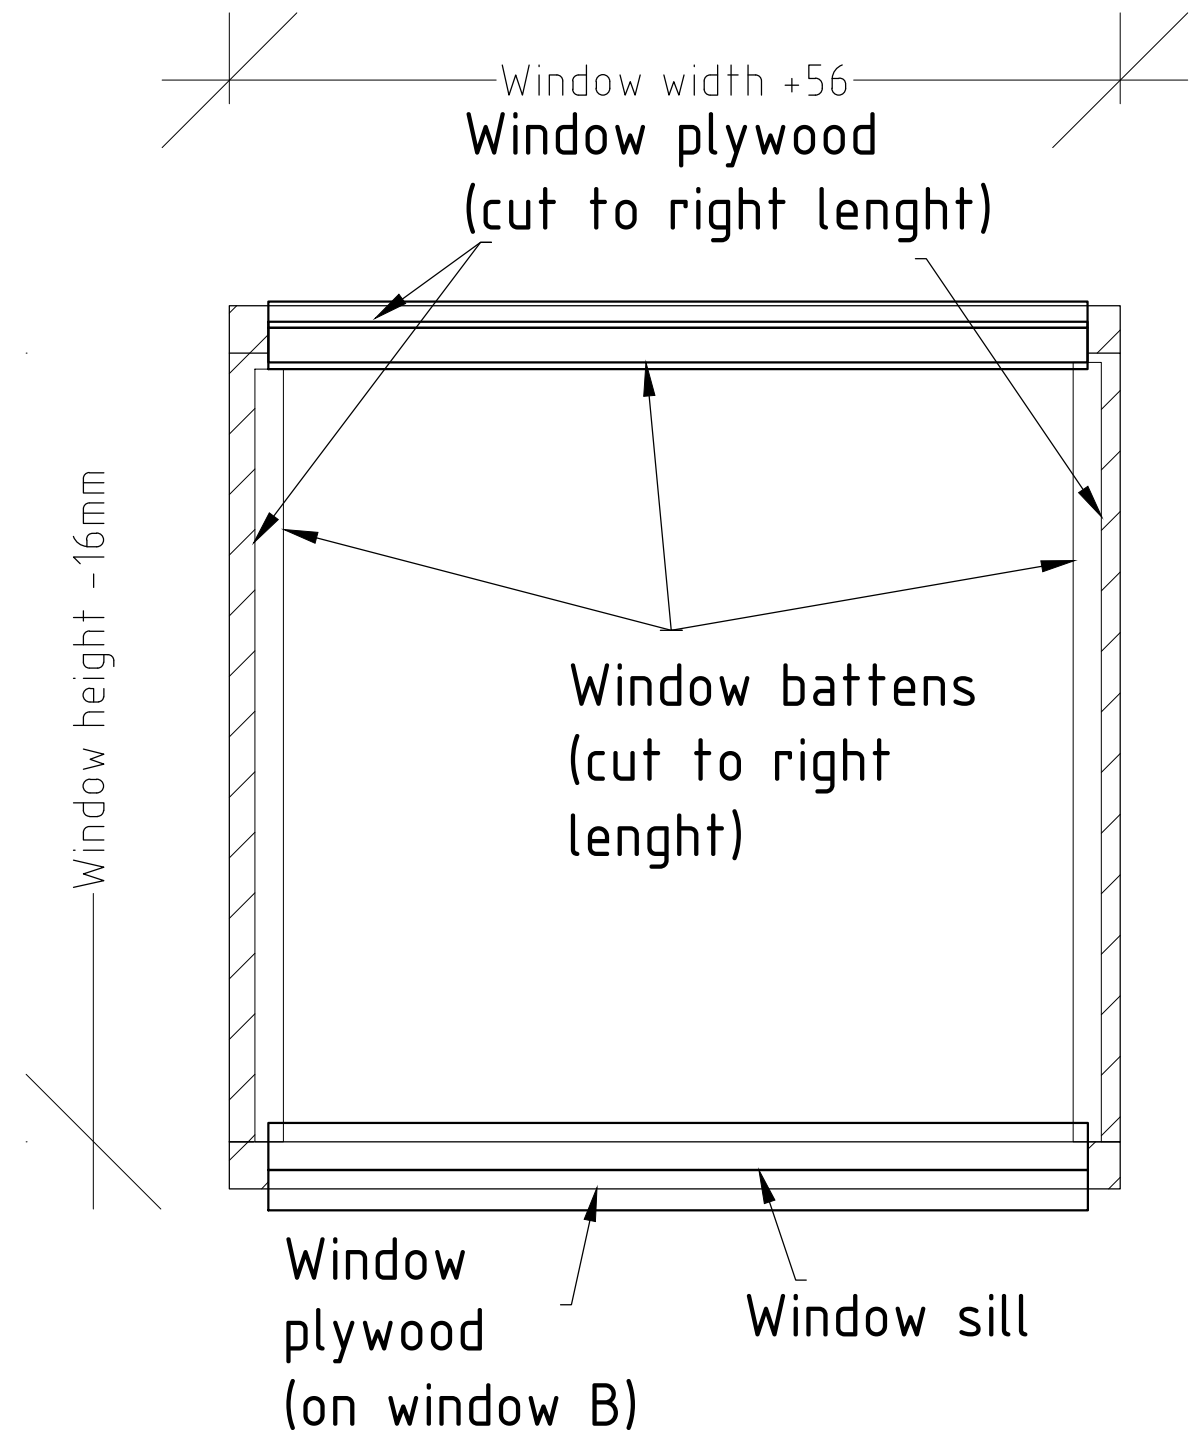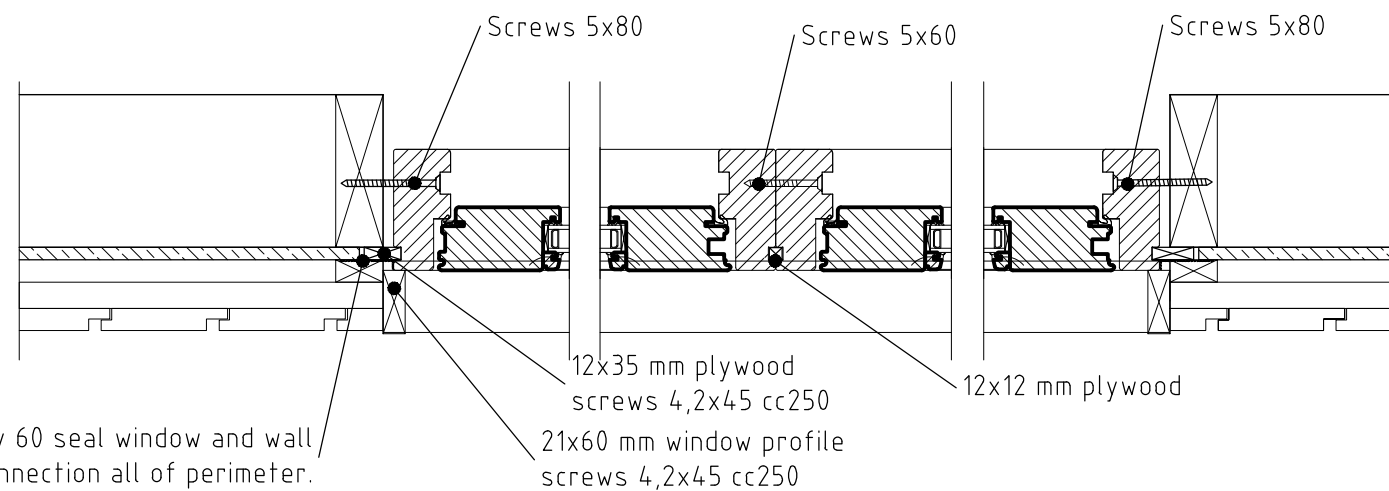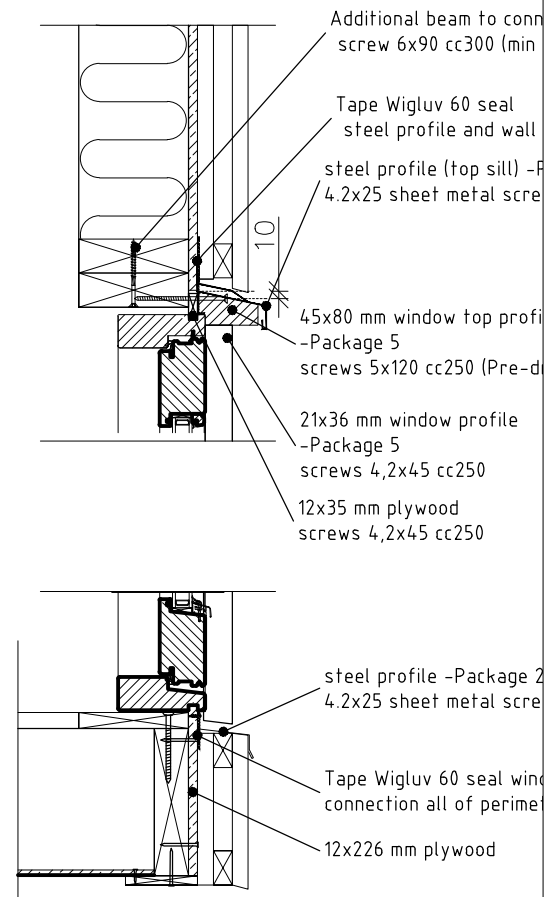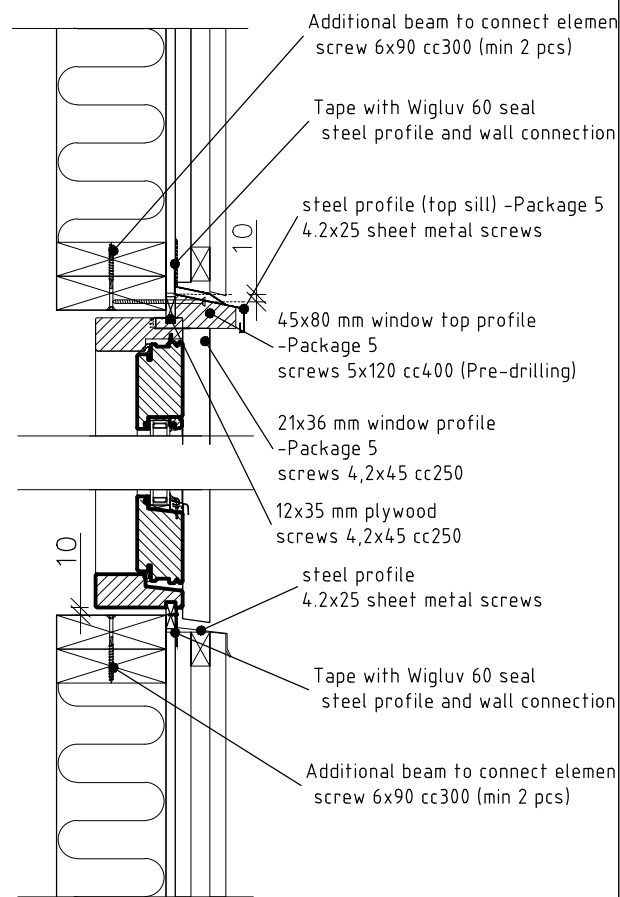

Notes:




1. Follow appropriate detail drawings to install windows.
2. Please ensure that stored doors and windows are before installing secured from moisture and rainwater.
3. Cut window profiles and plywoods in correct length.
4. Fix 12x35 plywood strips mm into the groove of window side and top jamb.
5. Fix 12x12 plywood strips and apply silicon sealant between jambs where two windows are together, secure jambs with clamp and fasten two windows with screws. Ensure that fixing screws are 90° to jamb.
6. Lift windows on top of the plywood fixed on sides of the floor.
7. Fix windows with wedges and screws. Make sure windows opens and closes properly.
8. Fasten plywood strips to the wall element with nails 2.5x50.
9. Seal windows with foam. Cover with a seal windows form outside so that window jamb is covered min 10 mm.
10. Install window profile and steel profile according to drawings.
11. Installation plans and fastening materials are recommended by factory and are not mandatory.
12. Factory is not responsible for this project statics and stability.

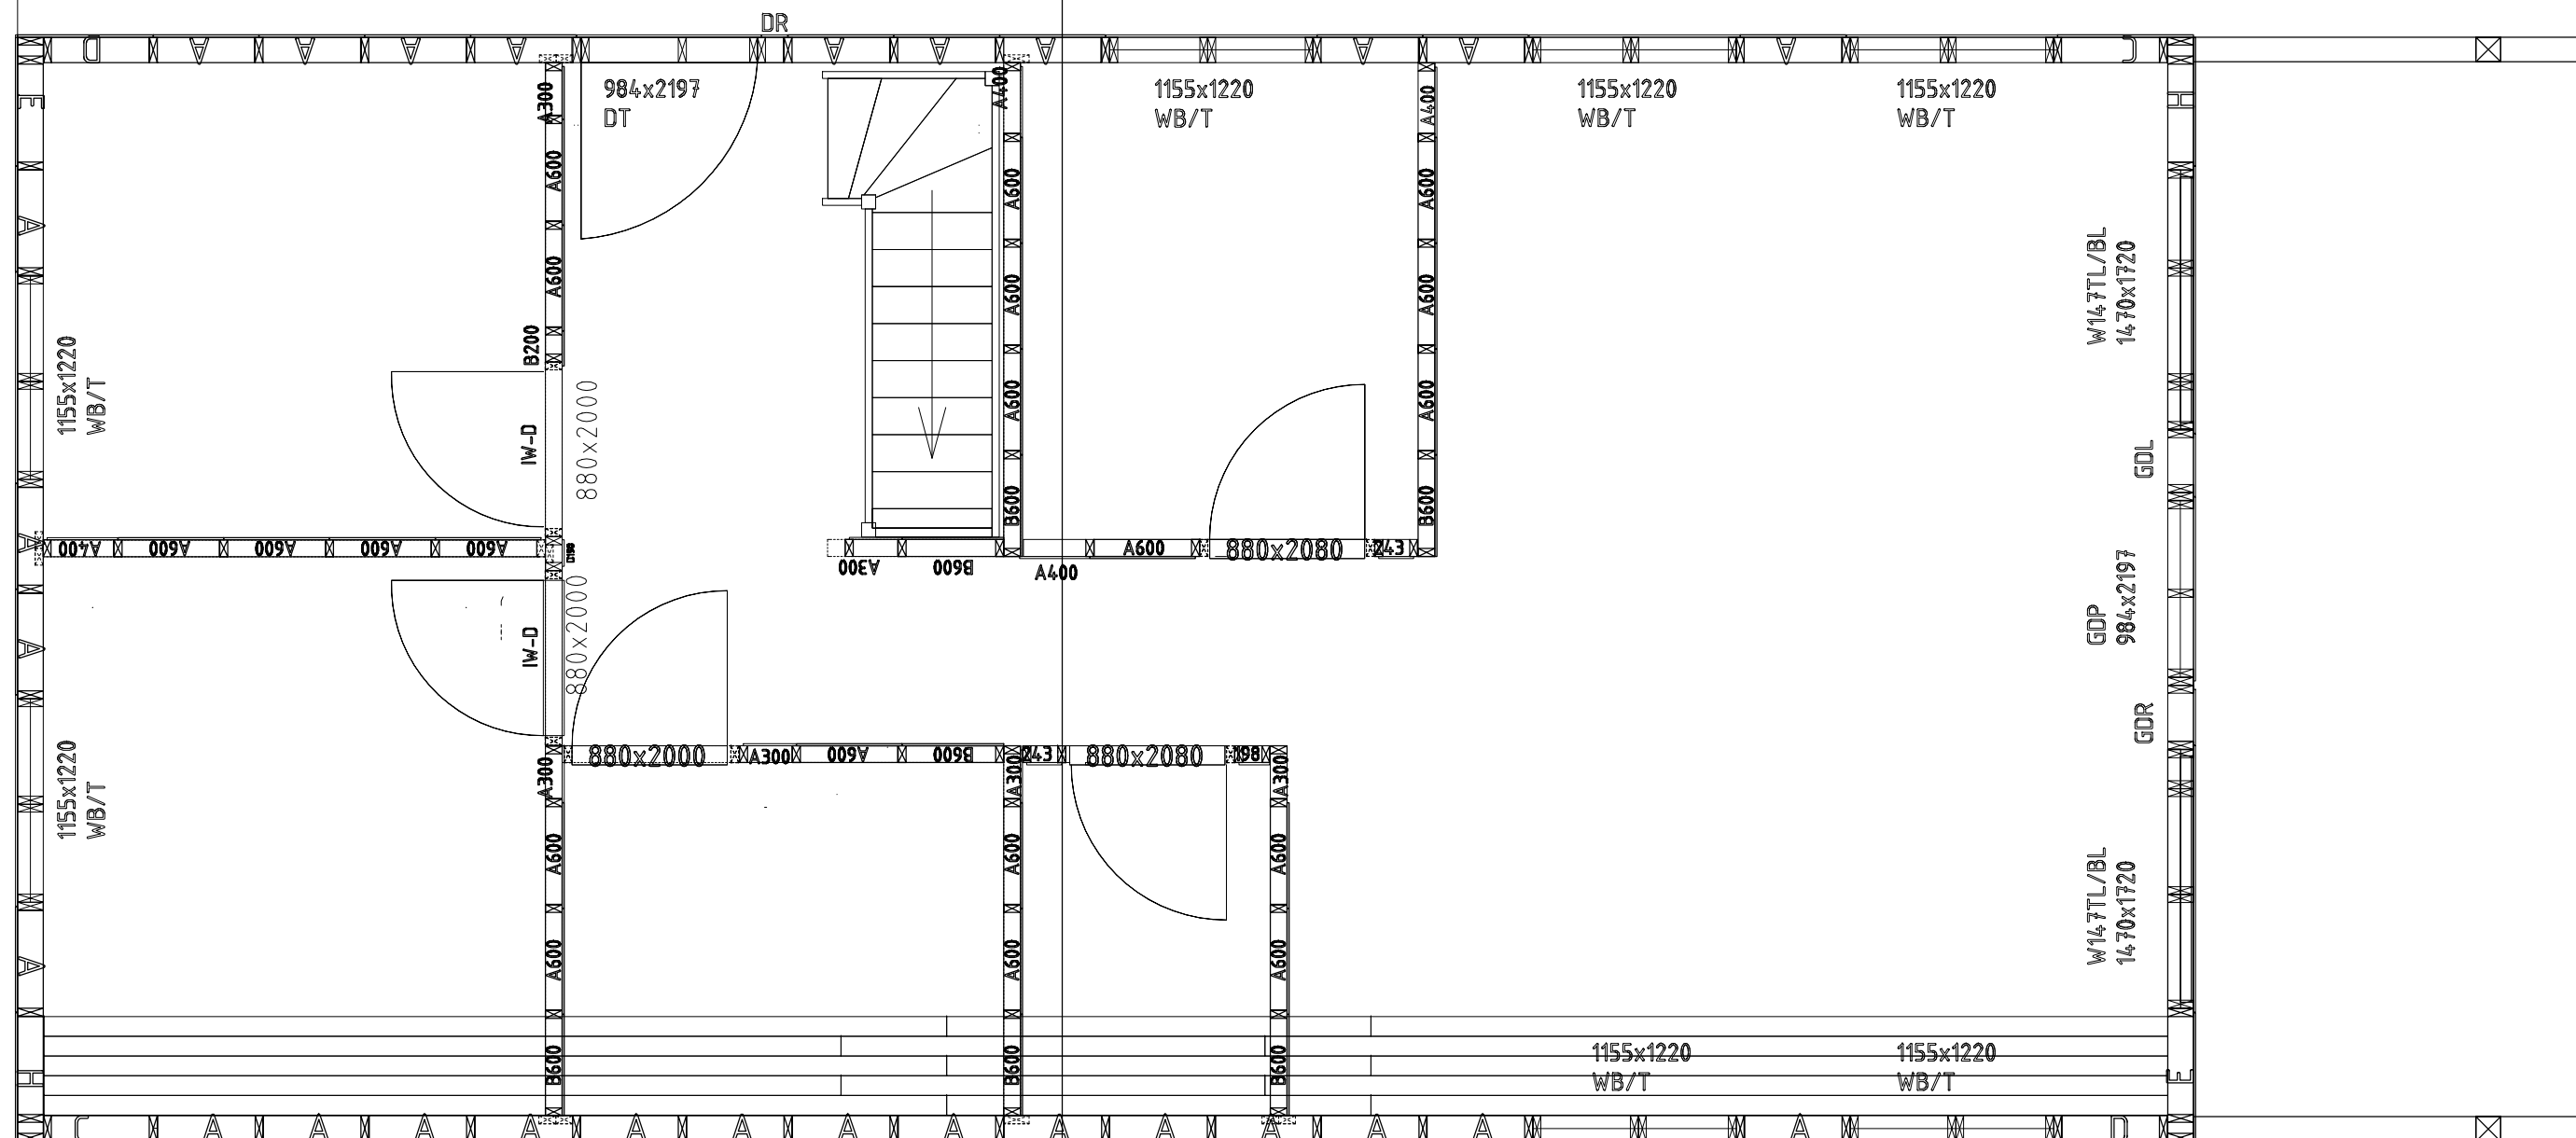


Board material amount is sent in meter amount
 Board connection must be dispersed.
 Board connection on the same bearing support is allowed over 2 boards
 Internal walls will be assembled after floor board placement

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

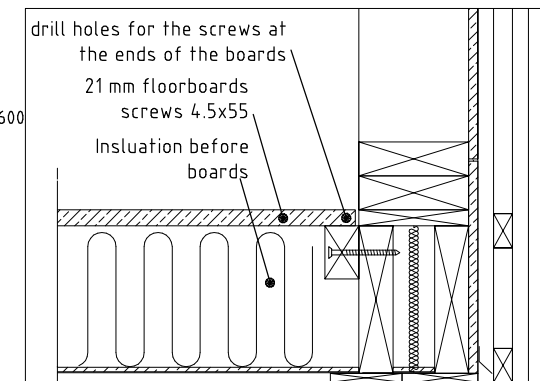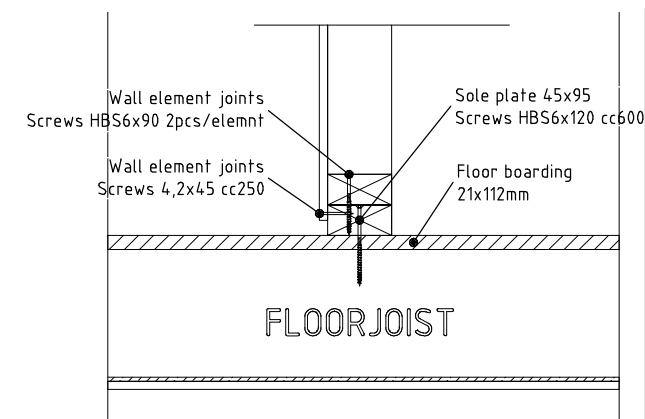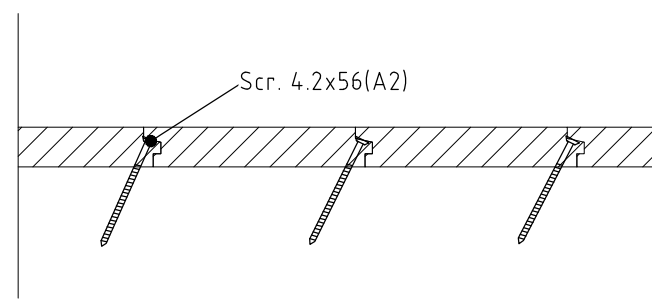


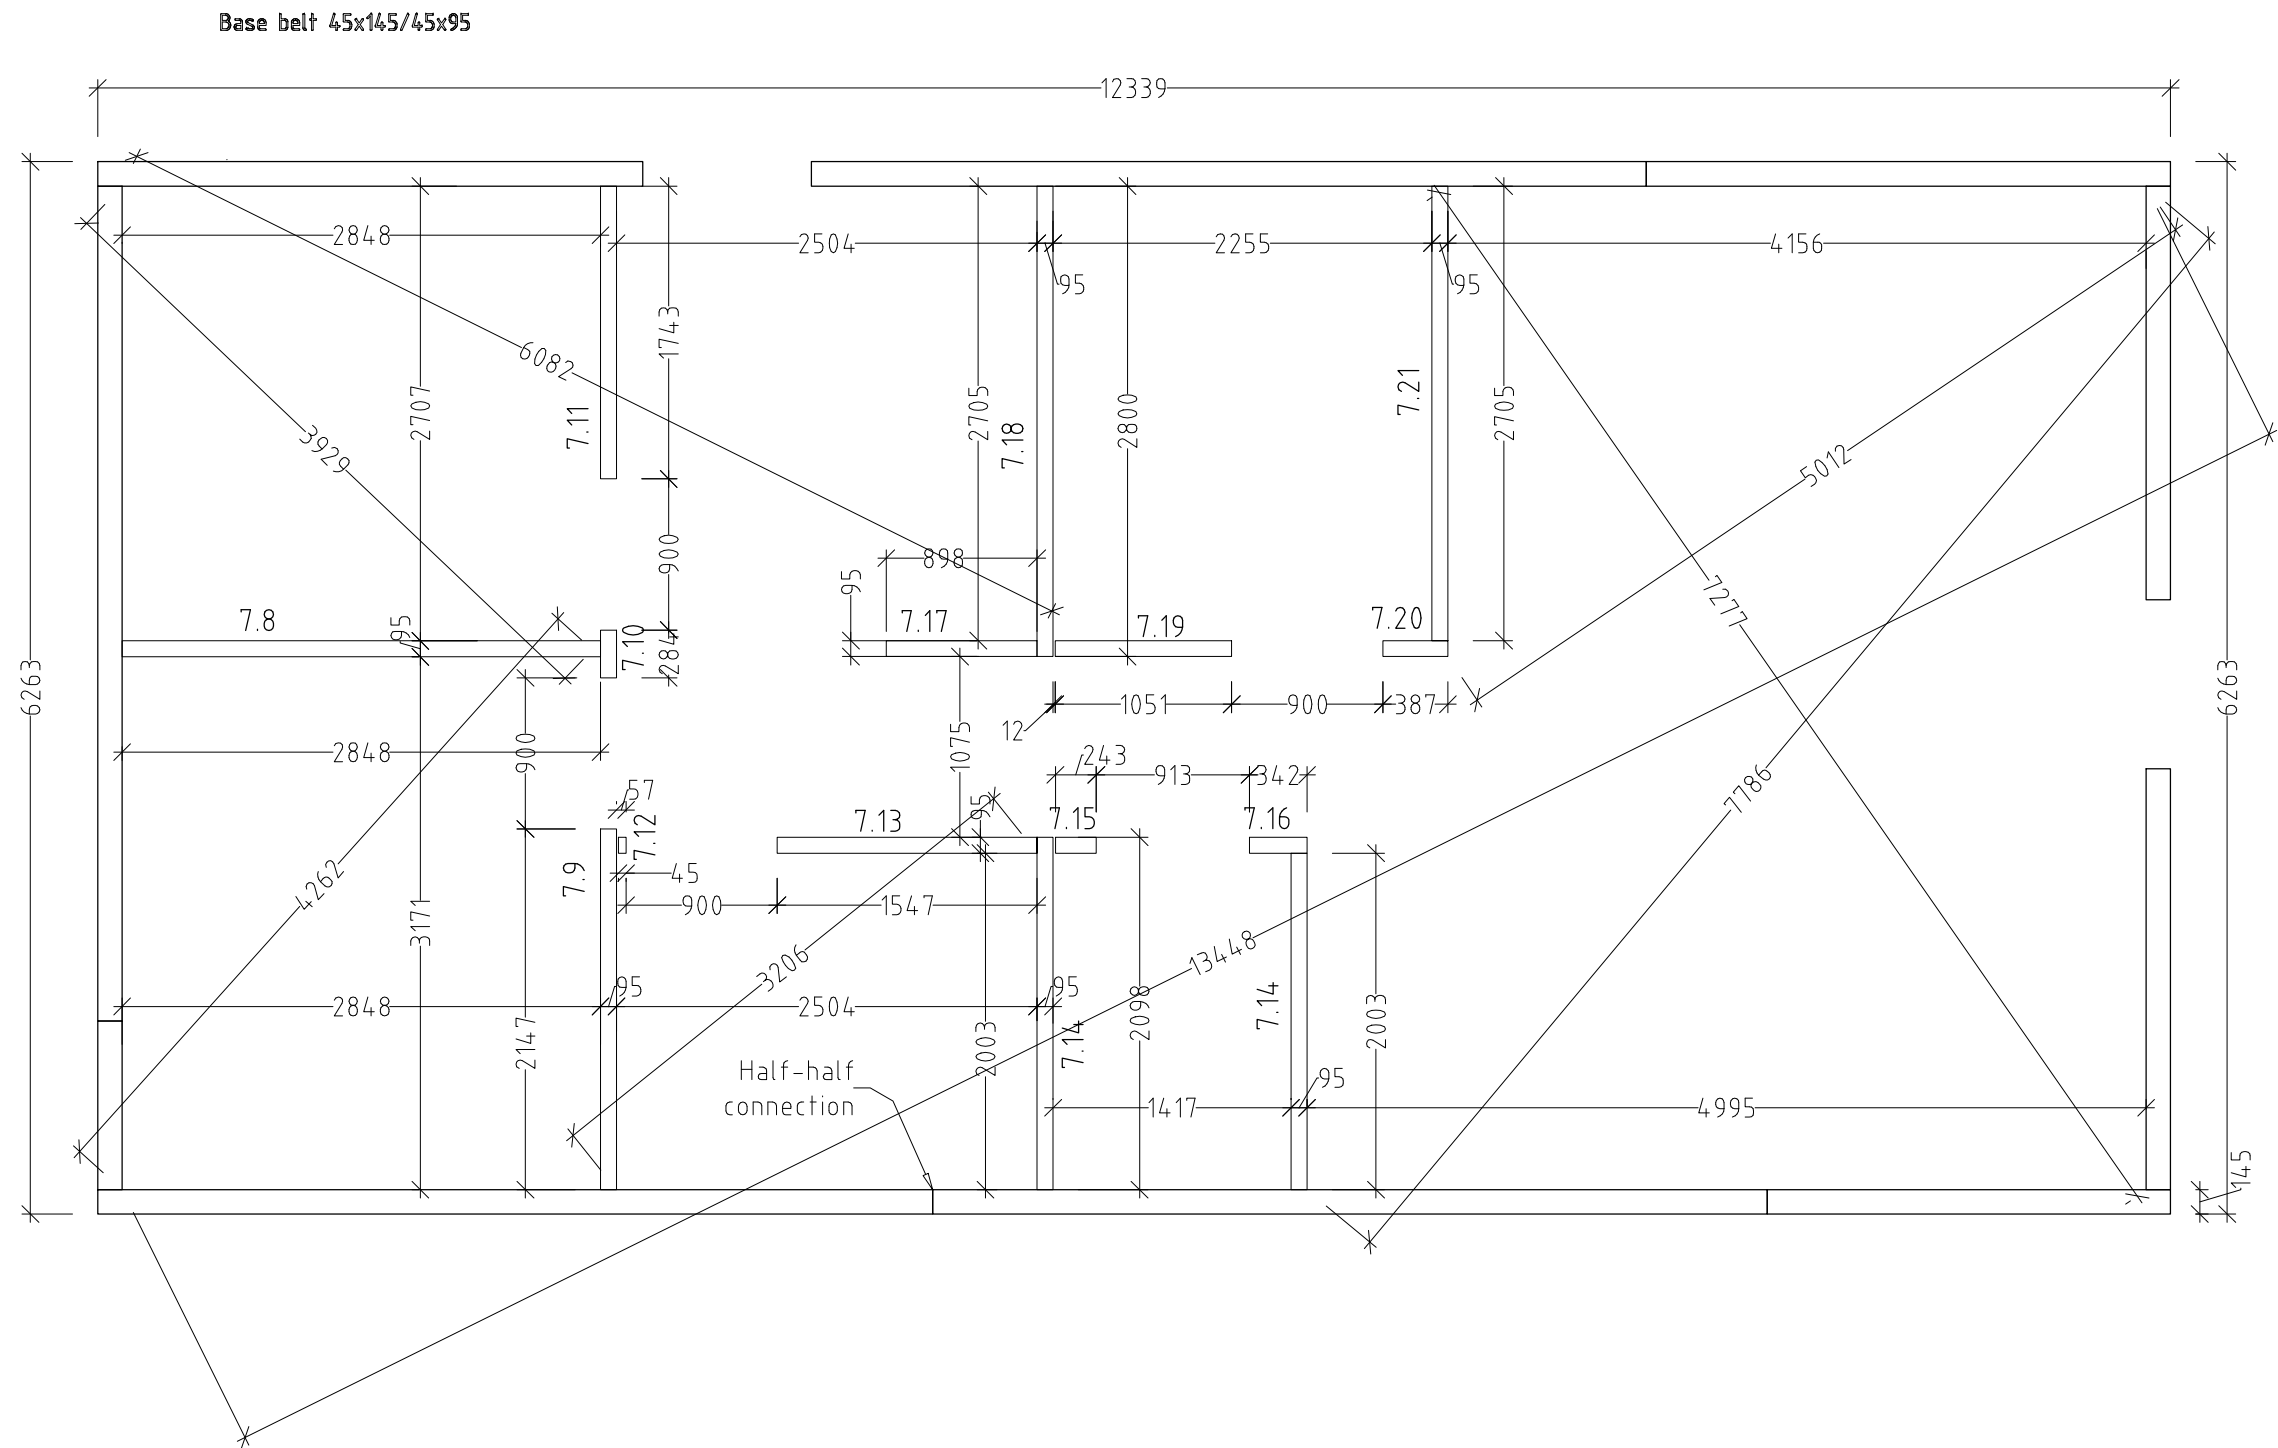

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.



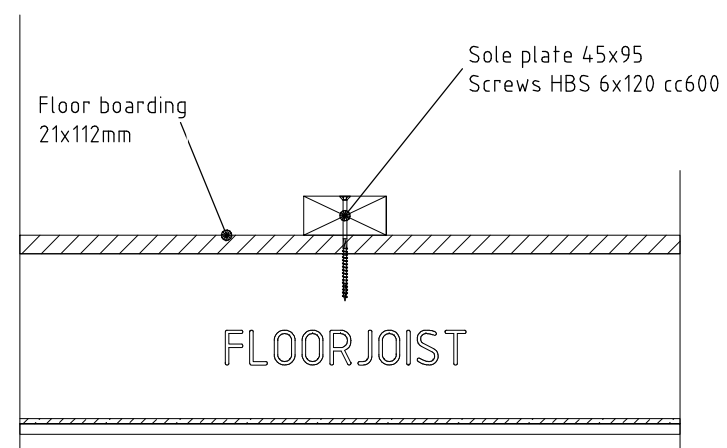


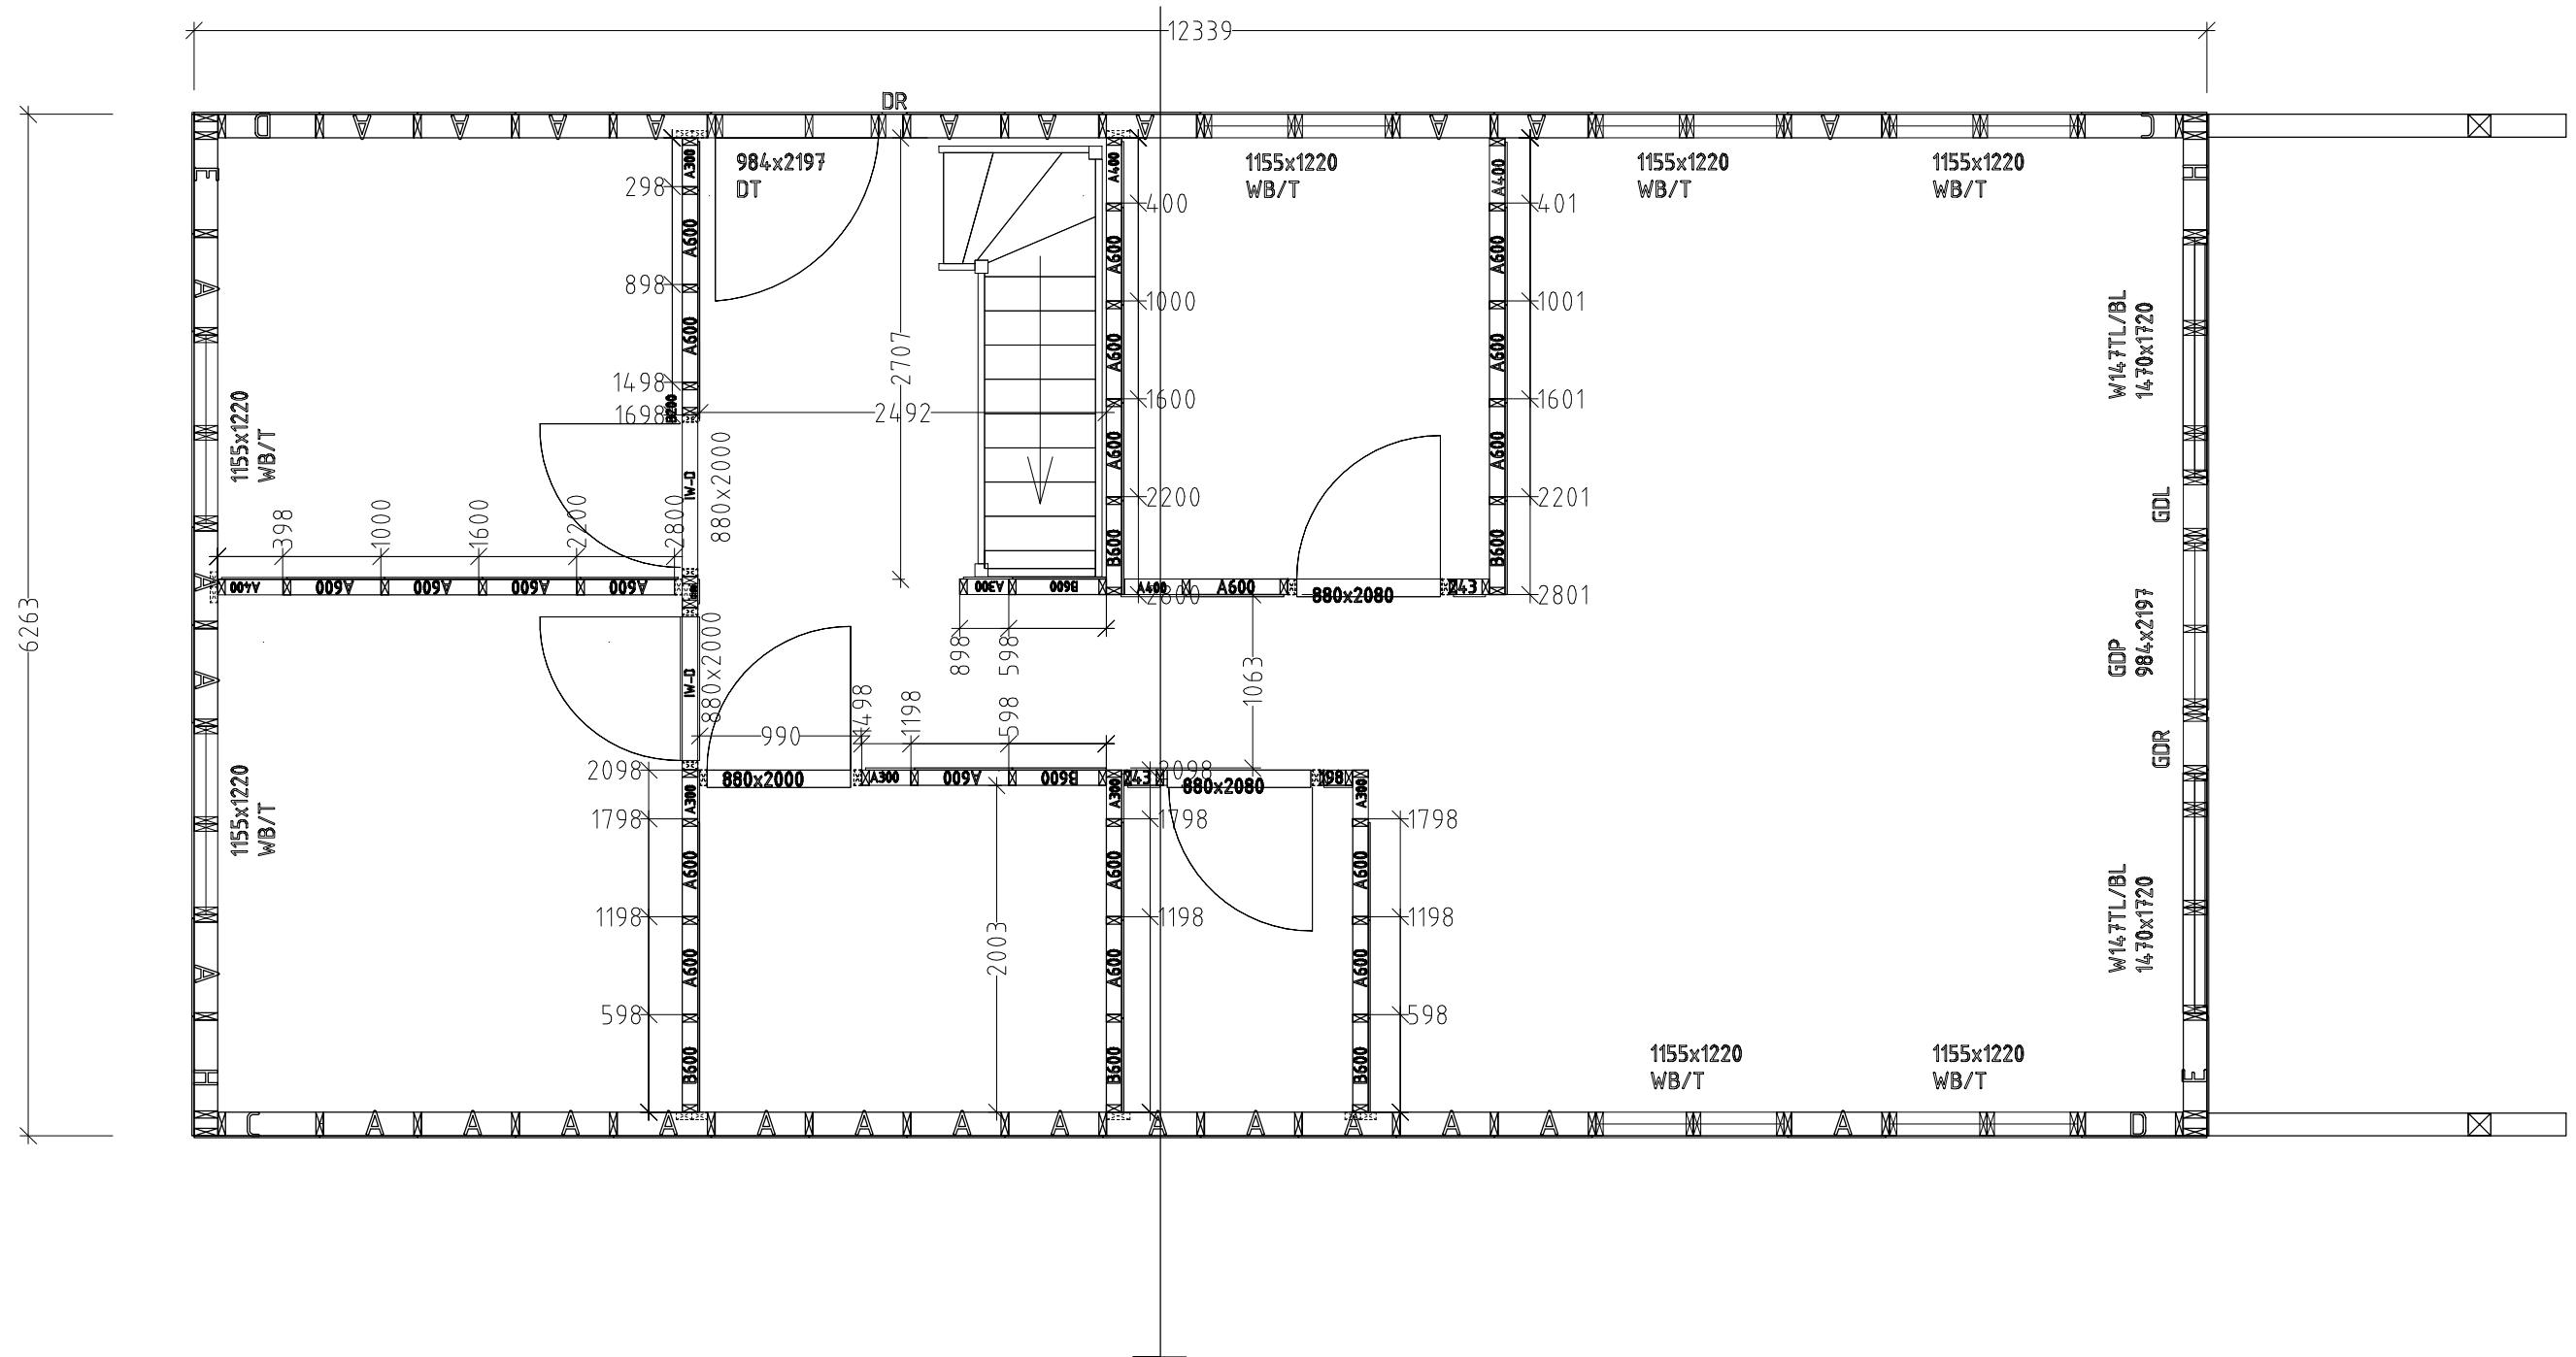

Notes:



1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

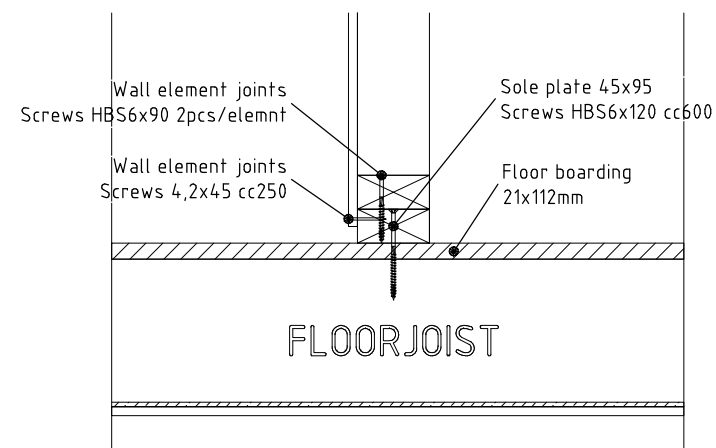

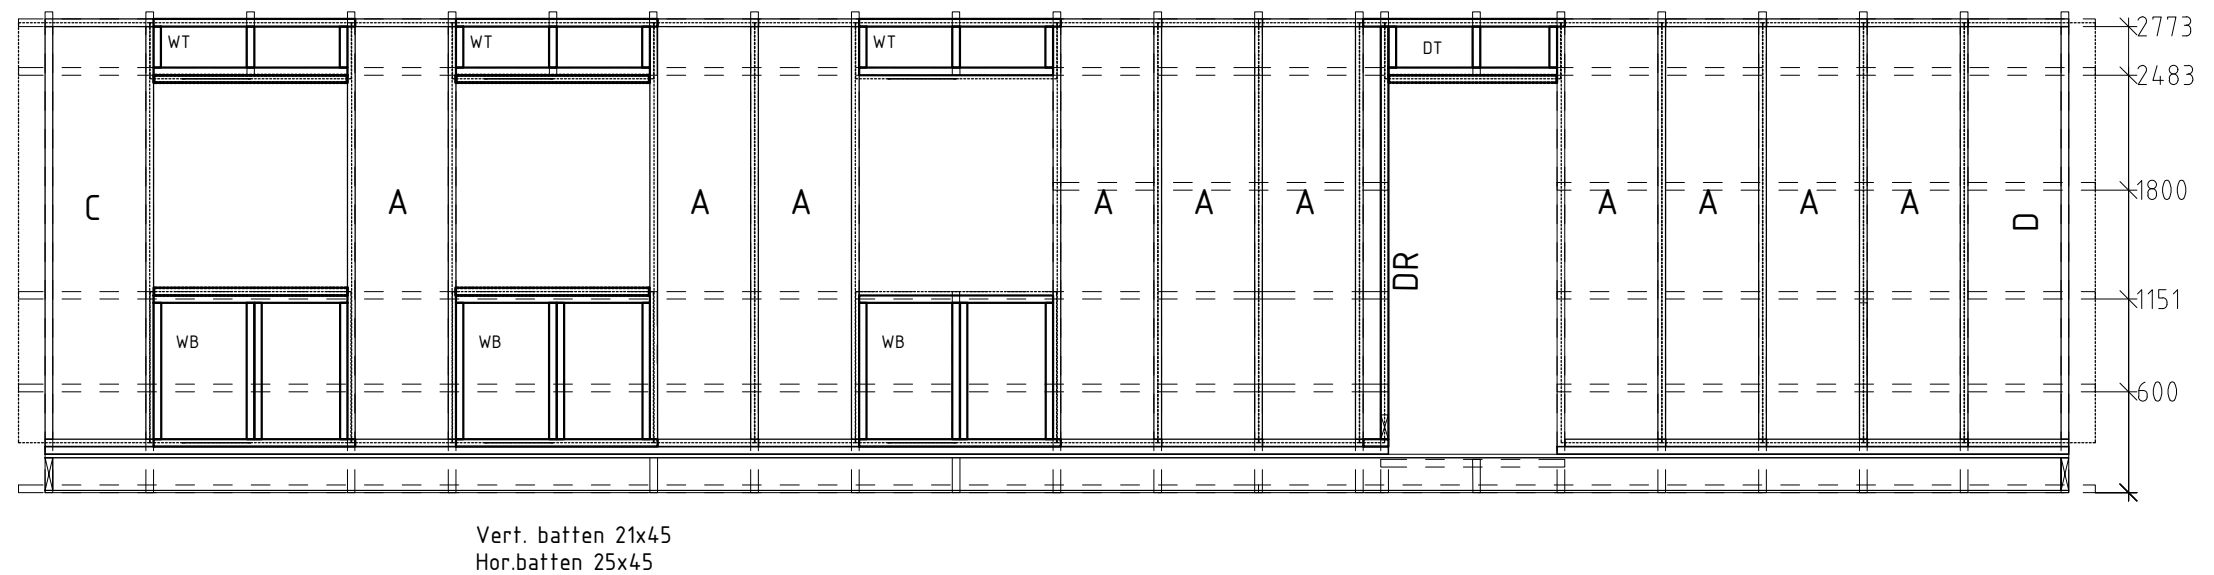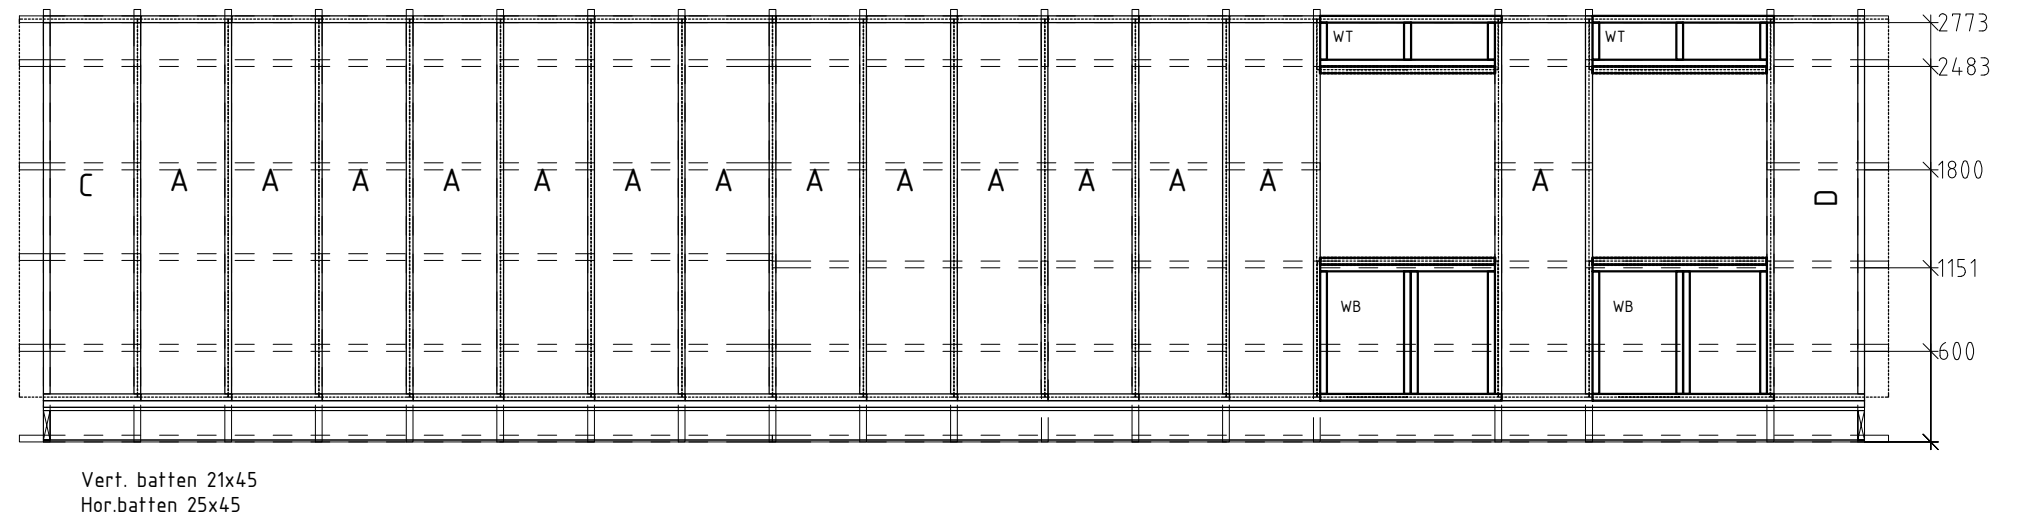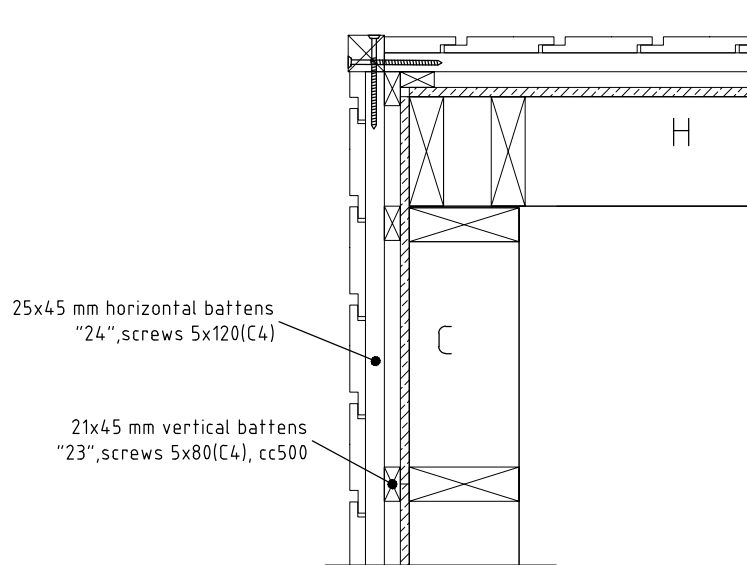







Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

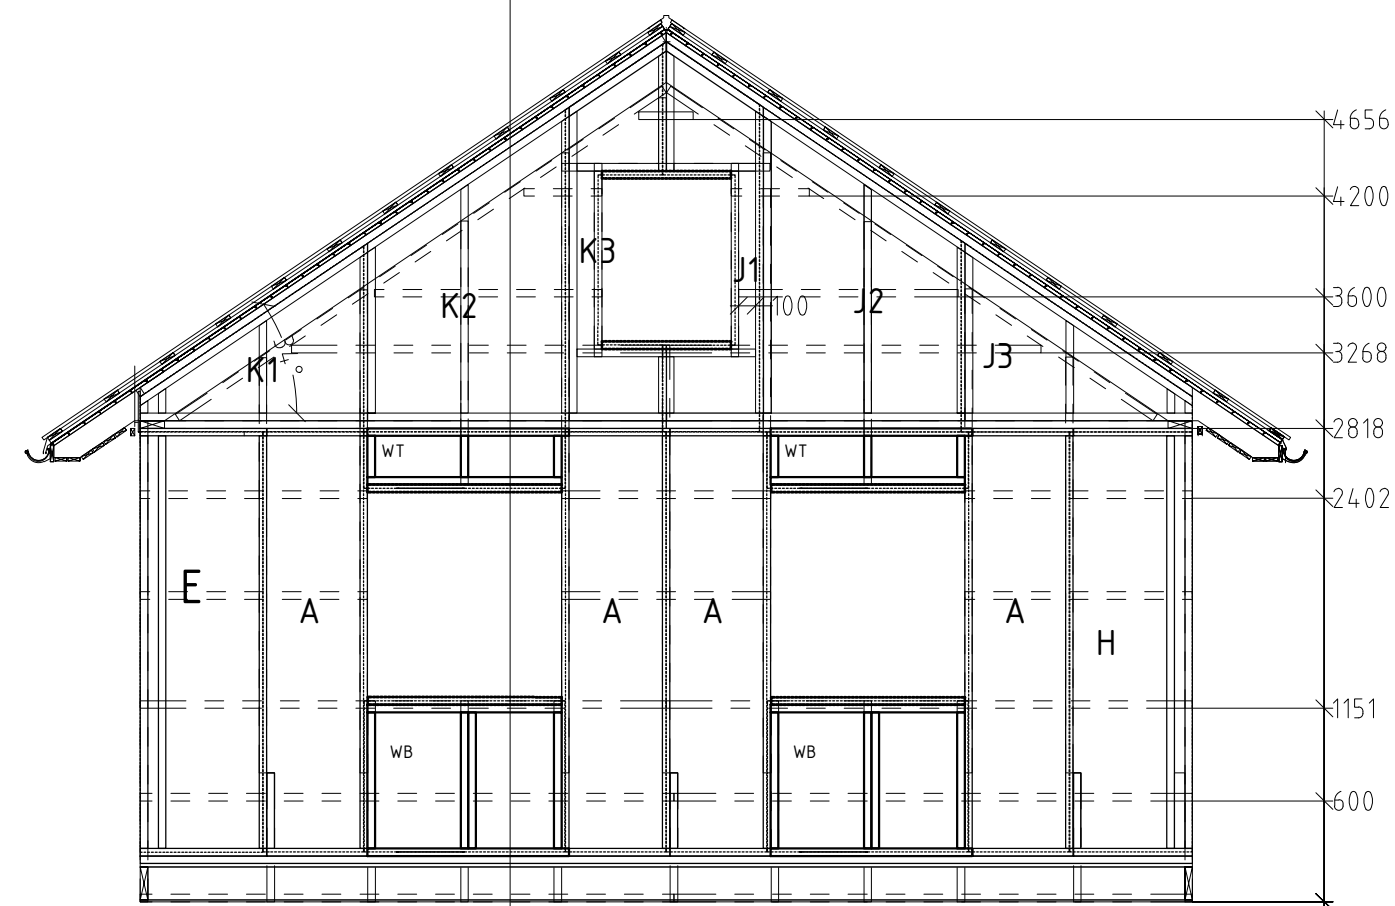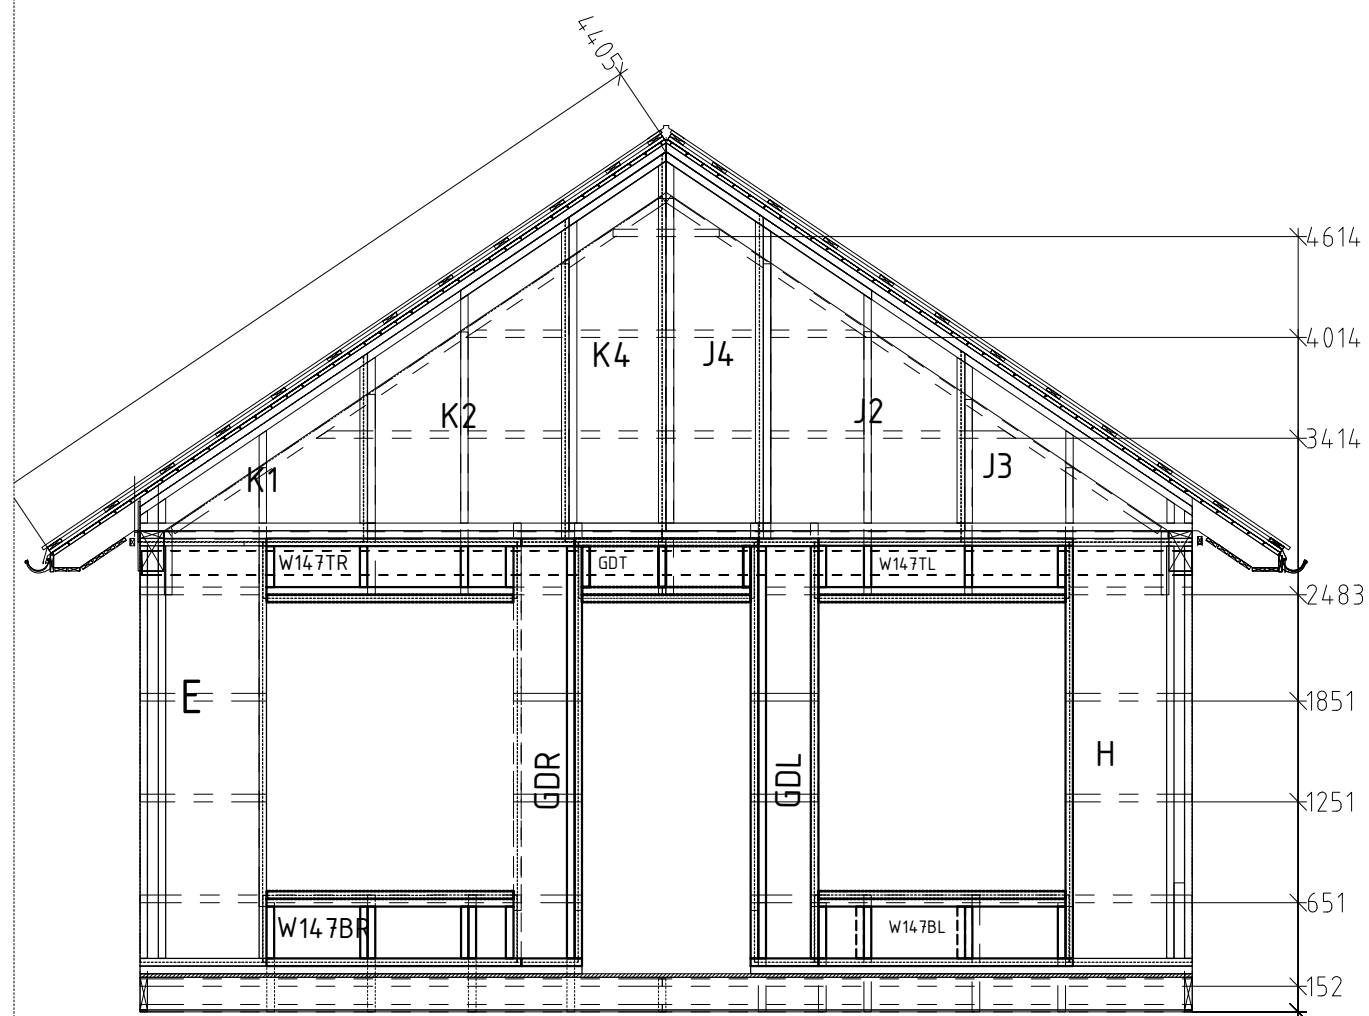


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

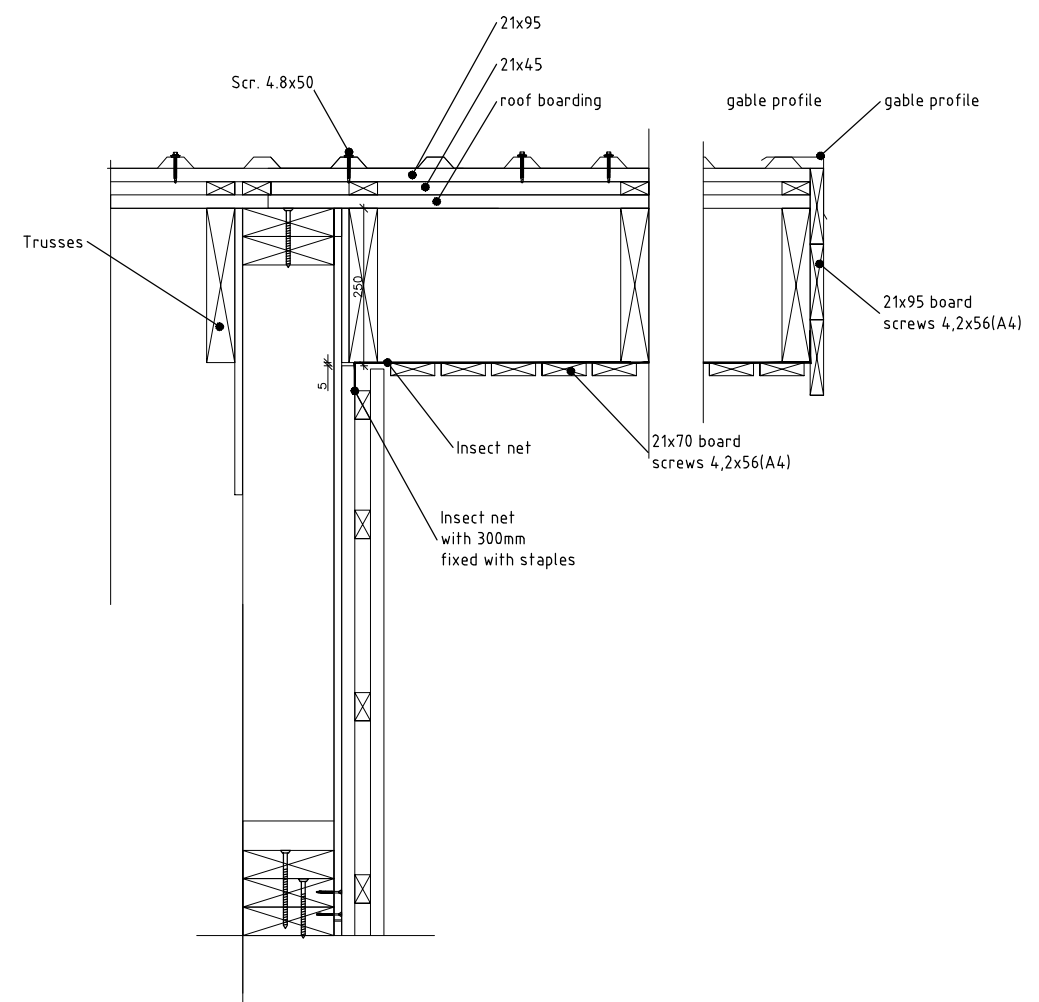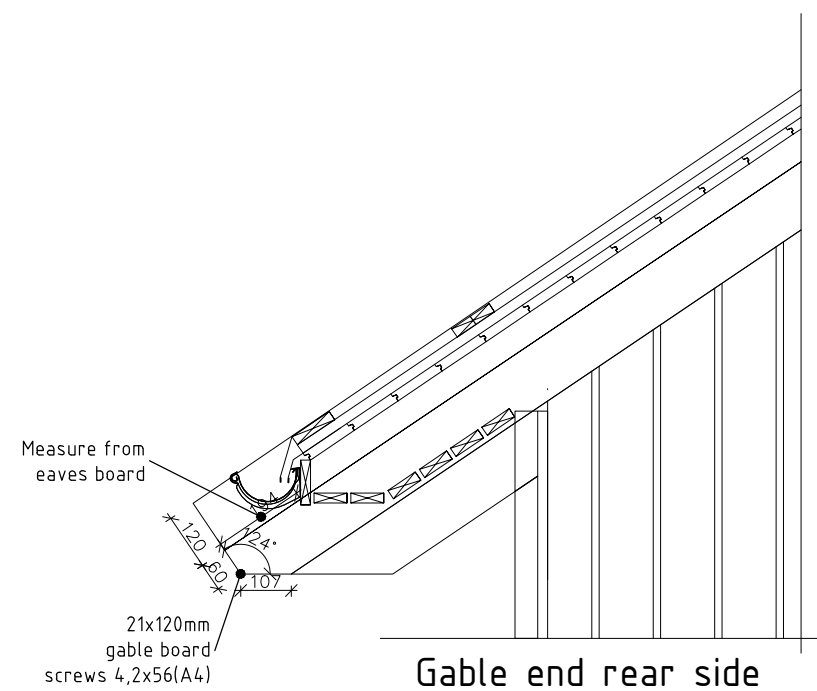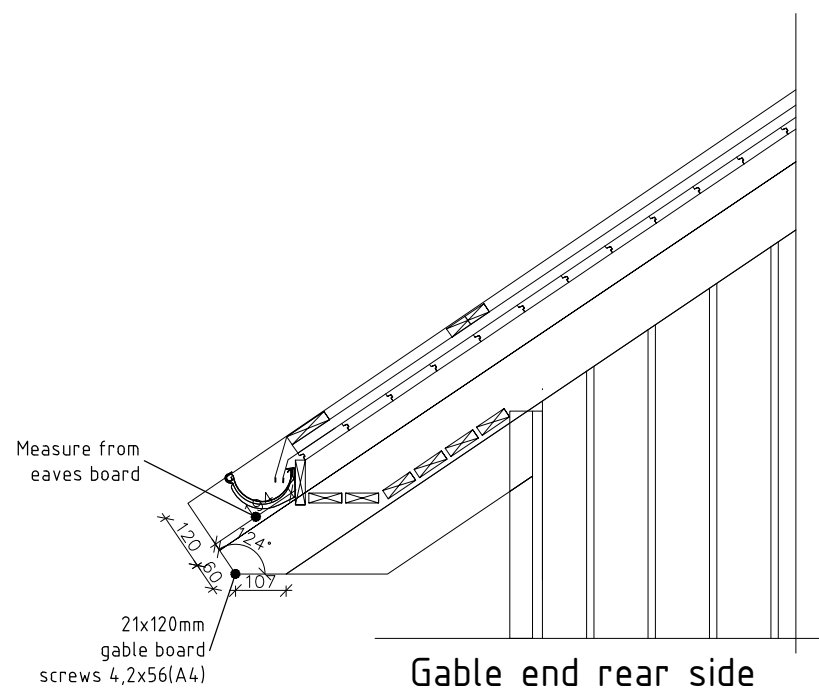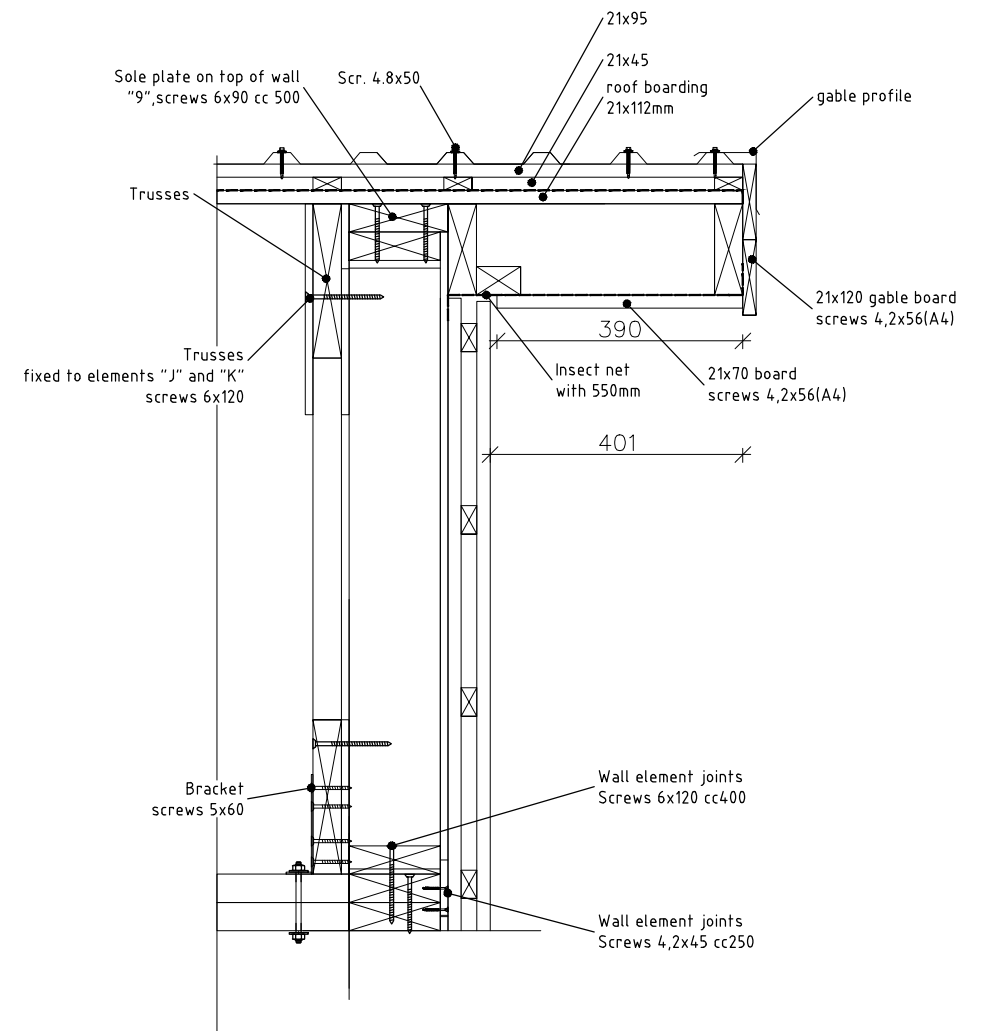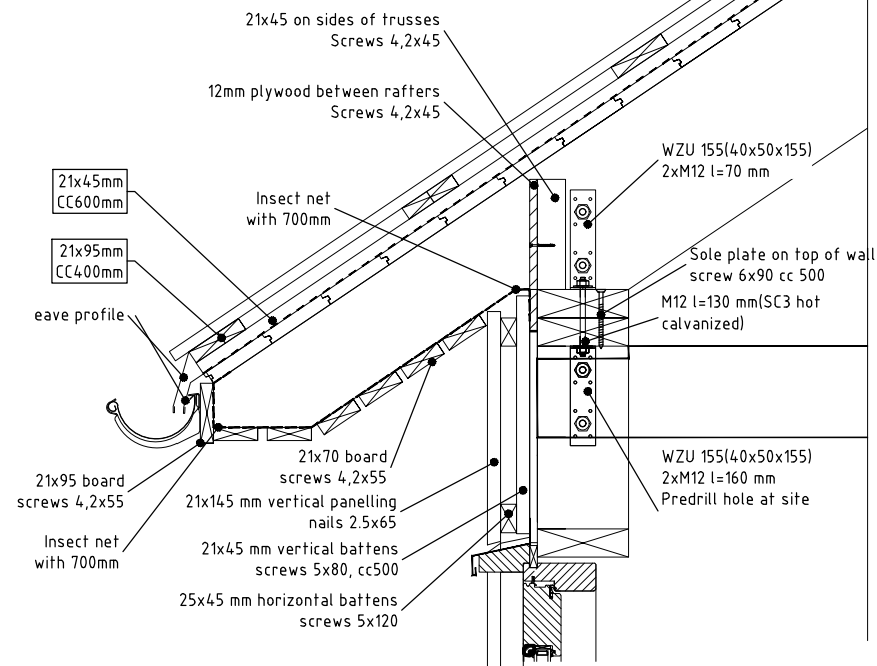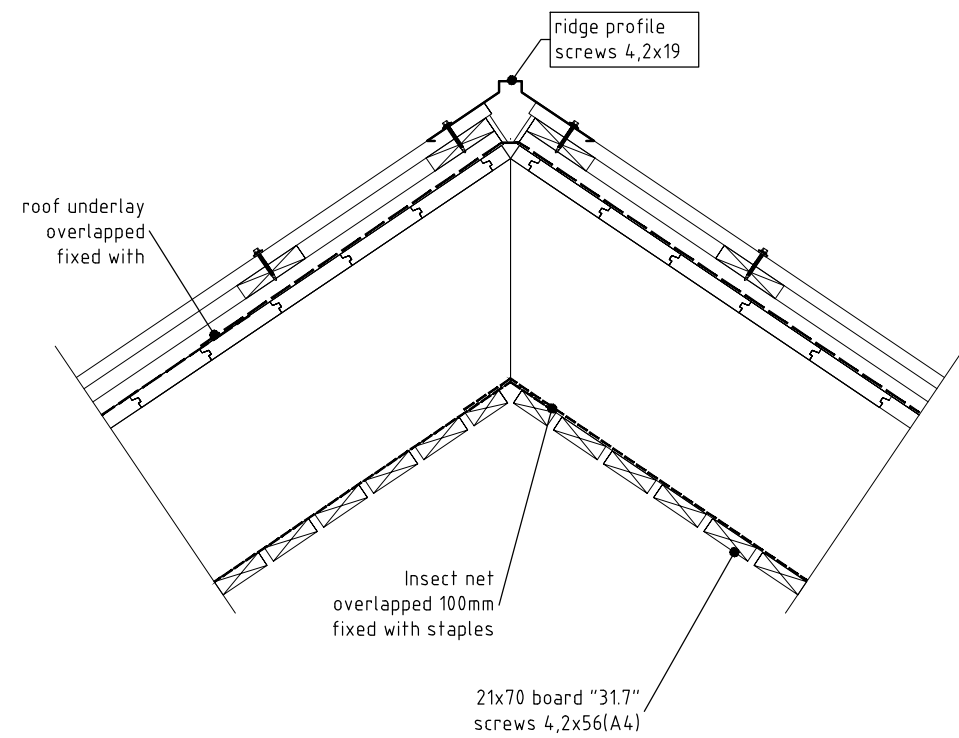


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Parapet steel profile installation order: corner profile and end profile, parapet profile.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

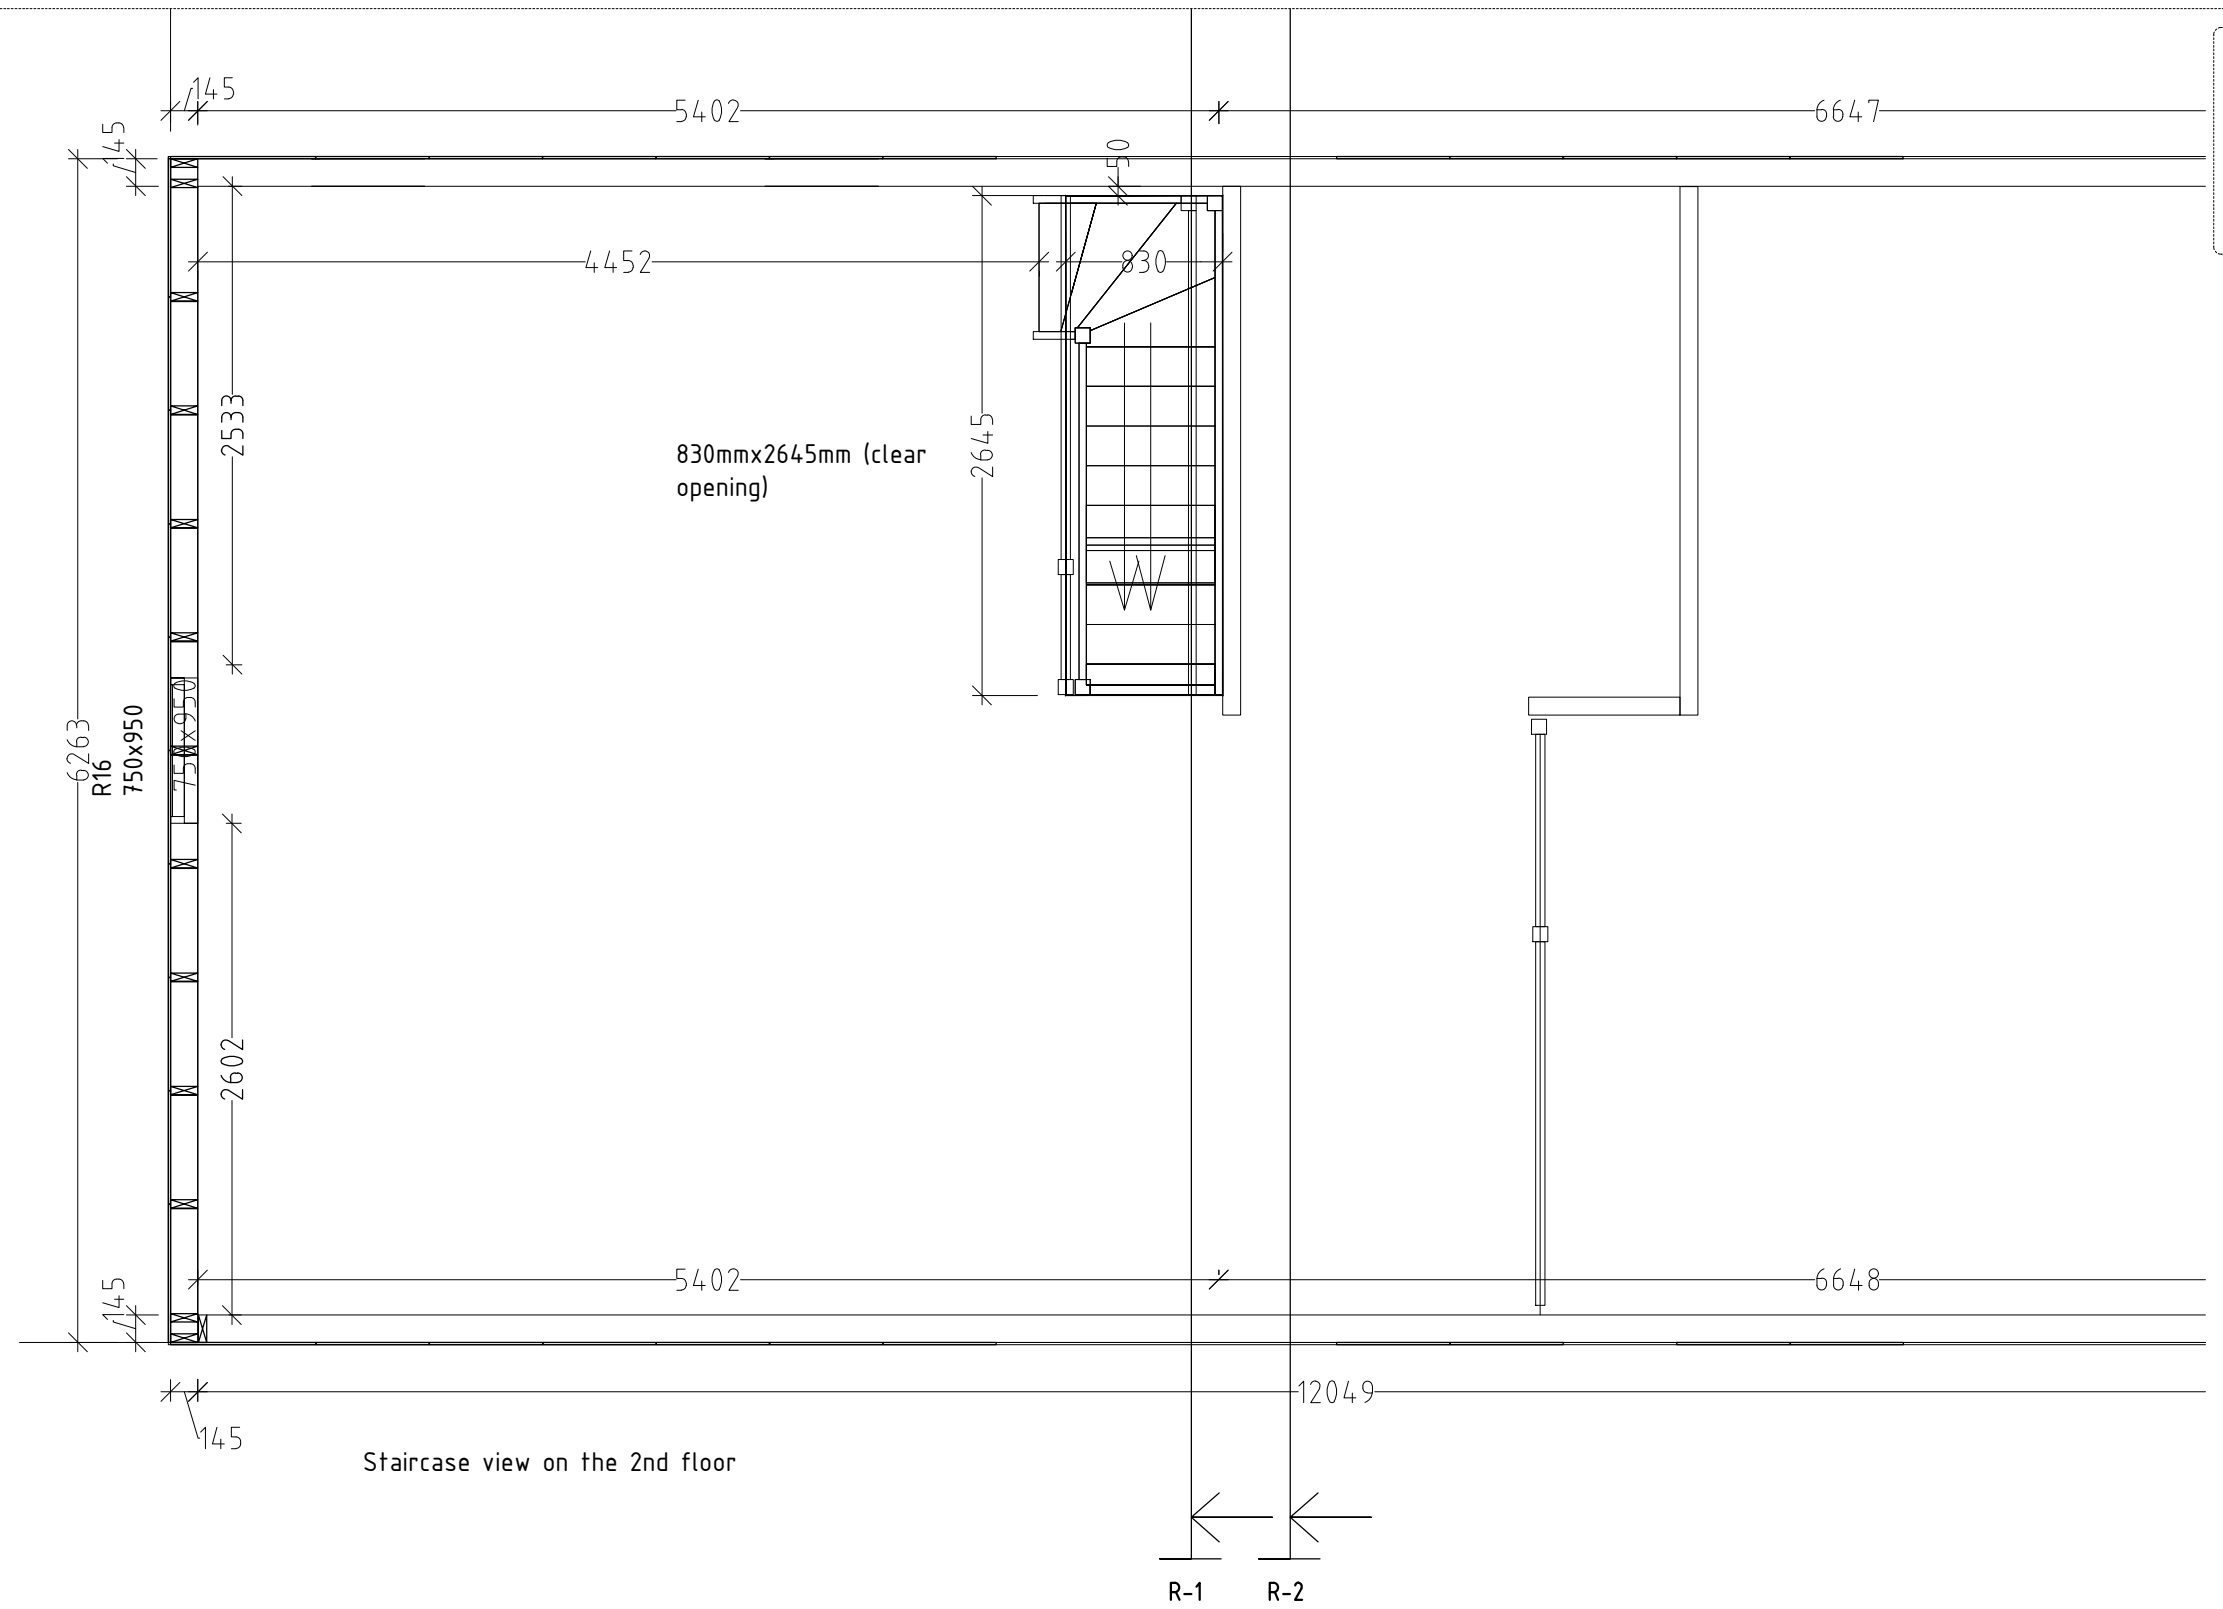

Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

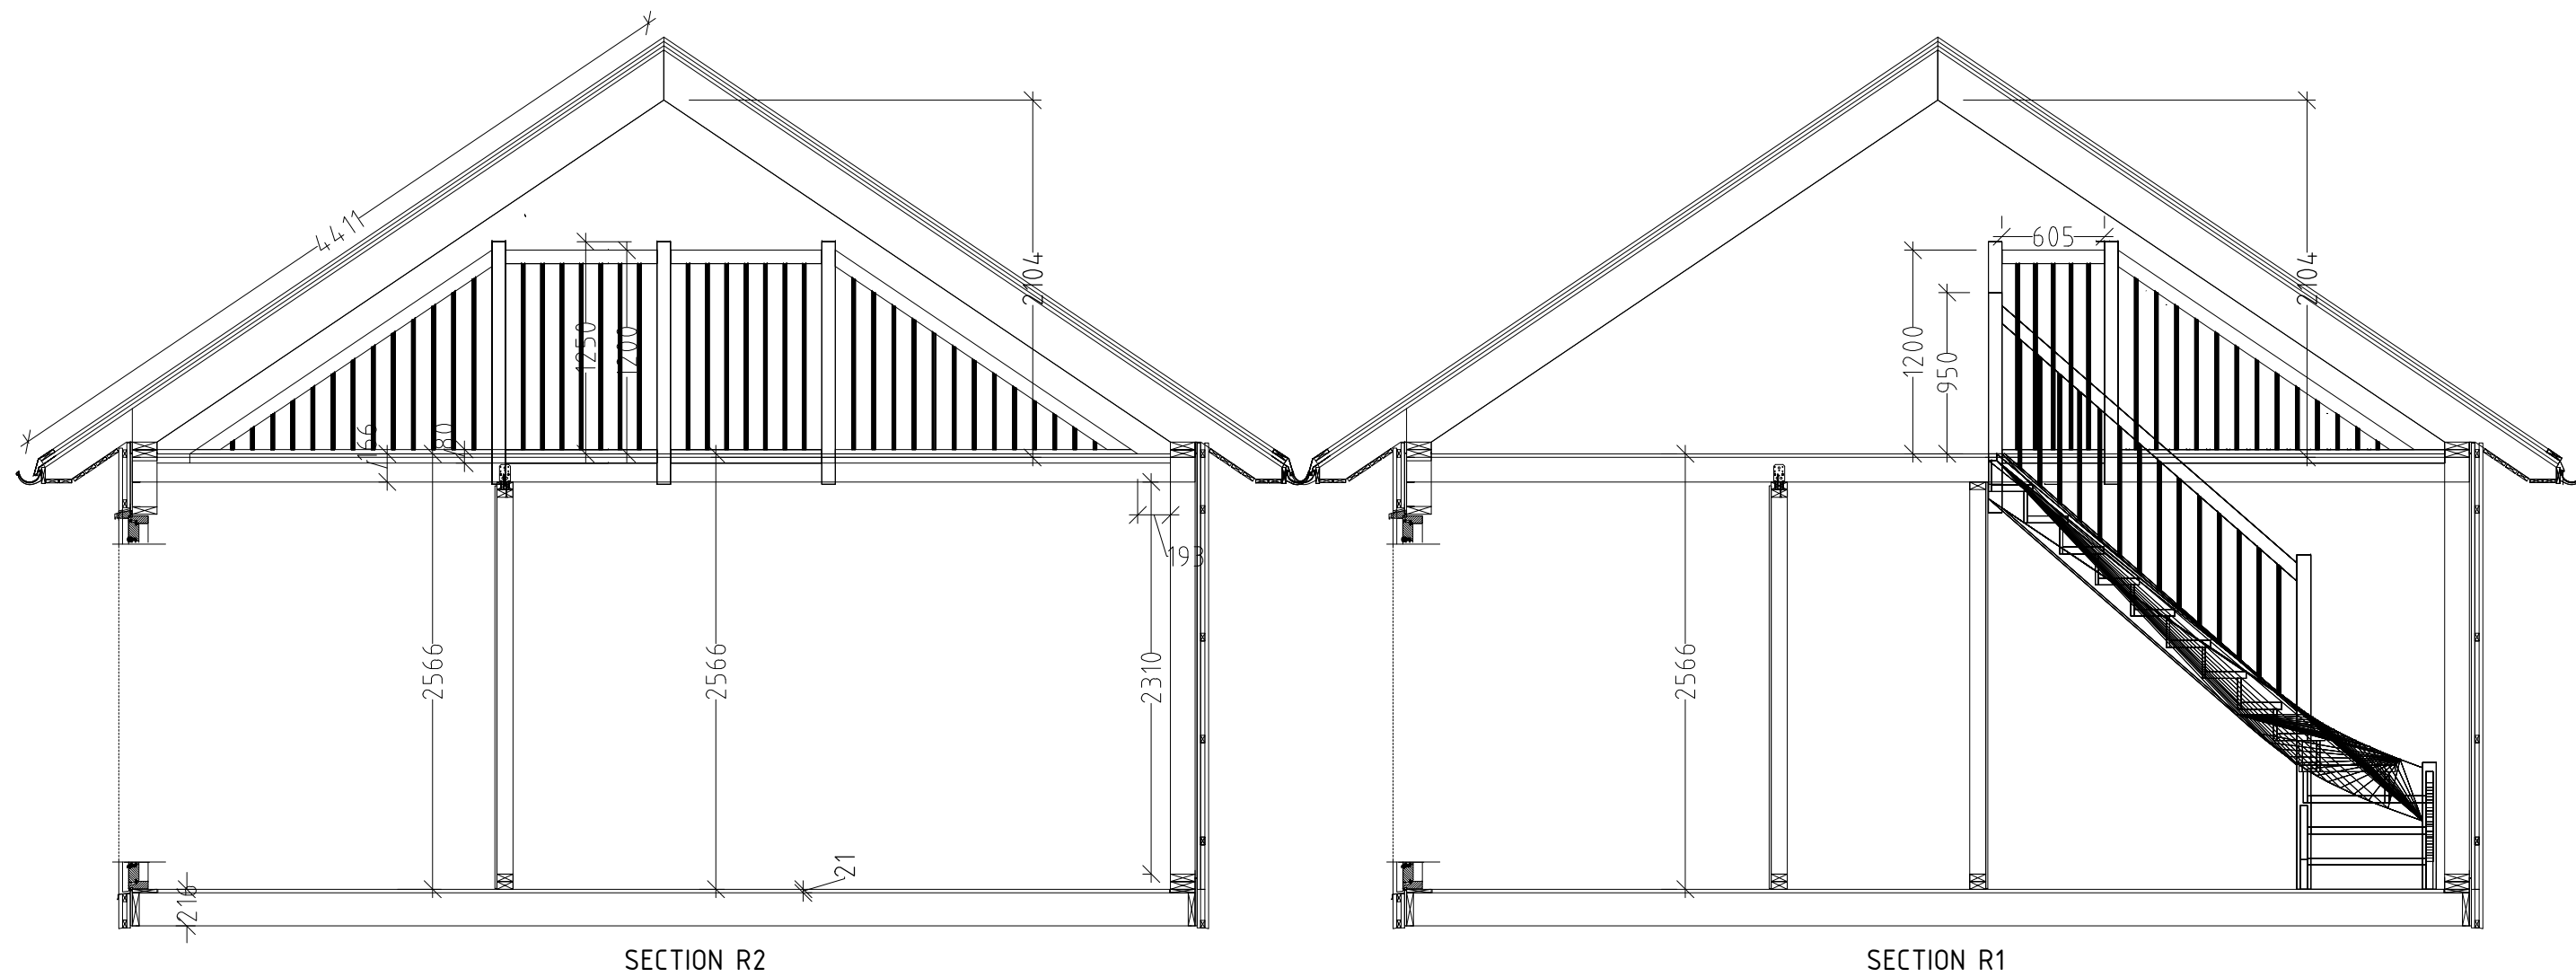


Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

16220


Eave profile
on top of eave

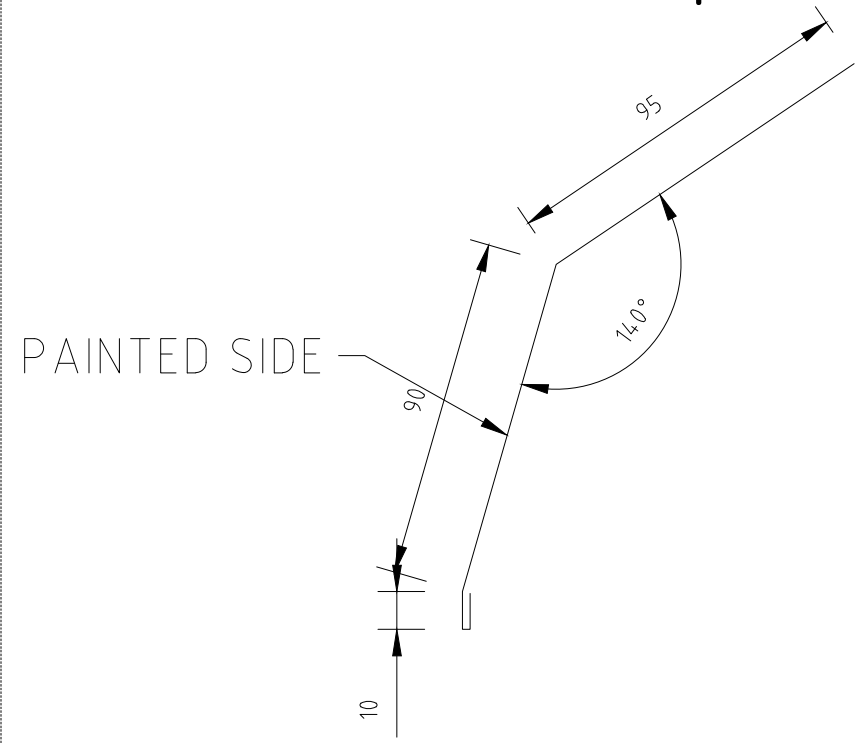


Eave profile
below of eave

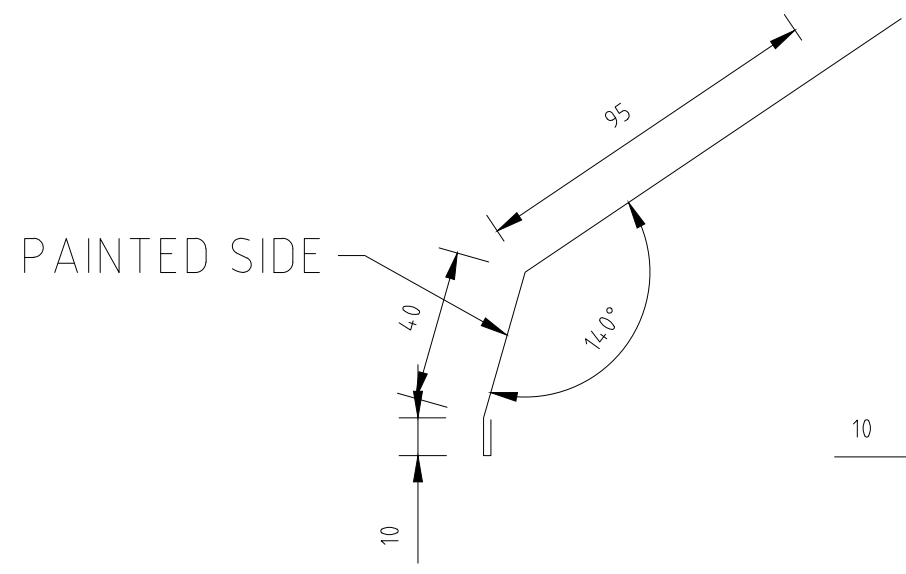


Ridge profile

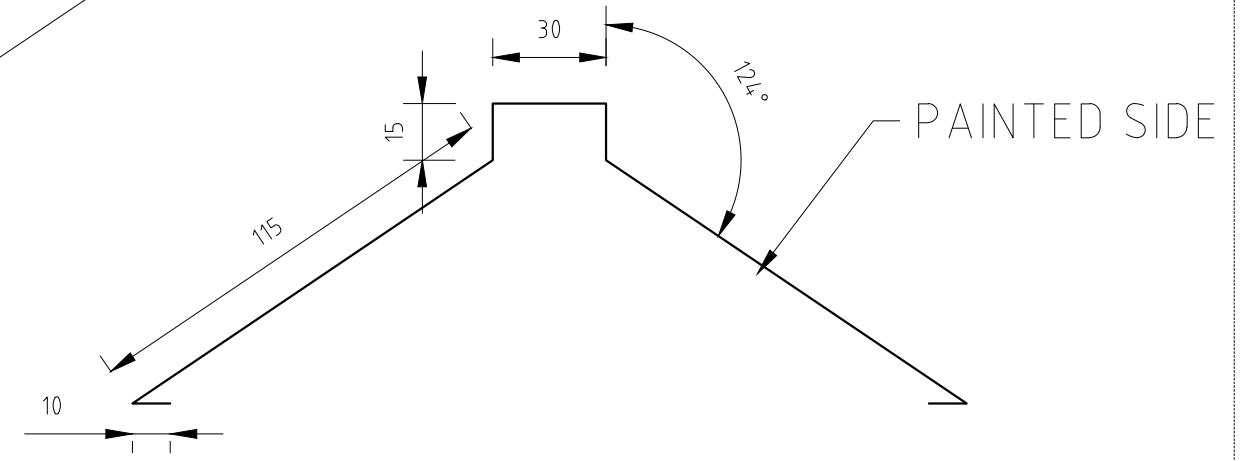


Door&window top sill
profile

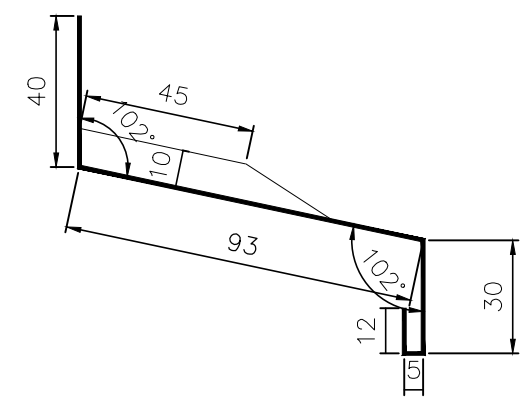


Gable profile

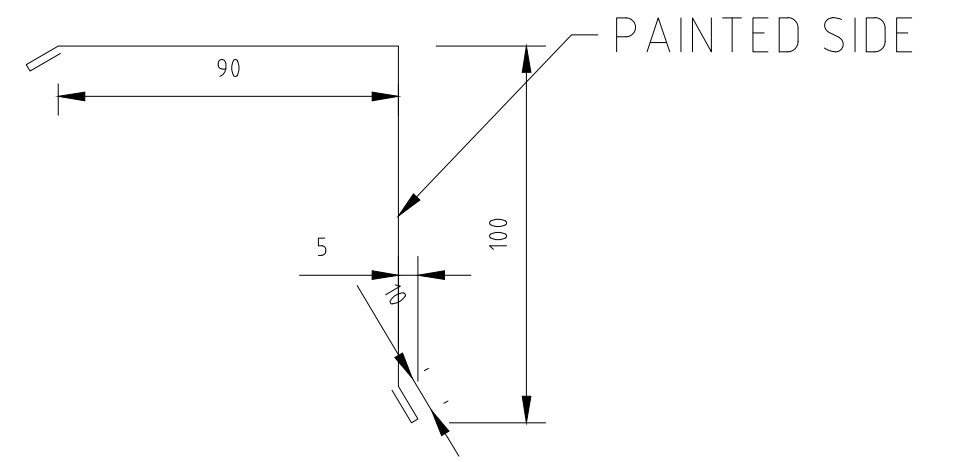

Door&window low sill
profile

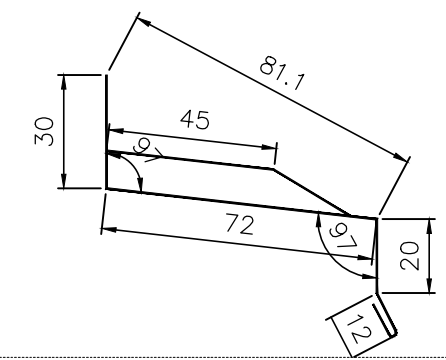


- Notes:
1. Follow appropriate detail drawings to fasten elements.
 2. Installation plans and fastening materials are recommended by factory and are not mandatory.
 3. Factory is not responsible for this project statics and stability.

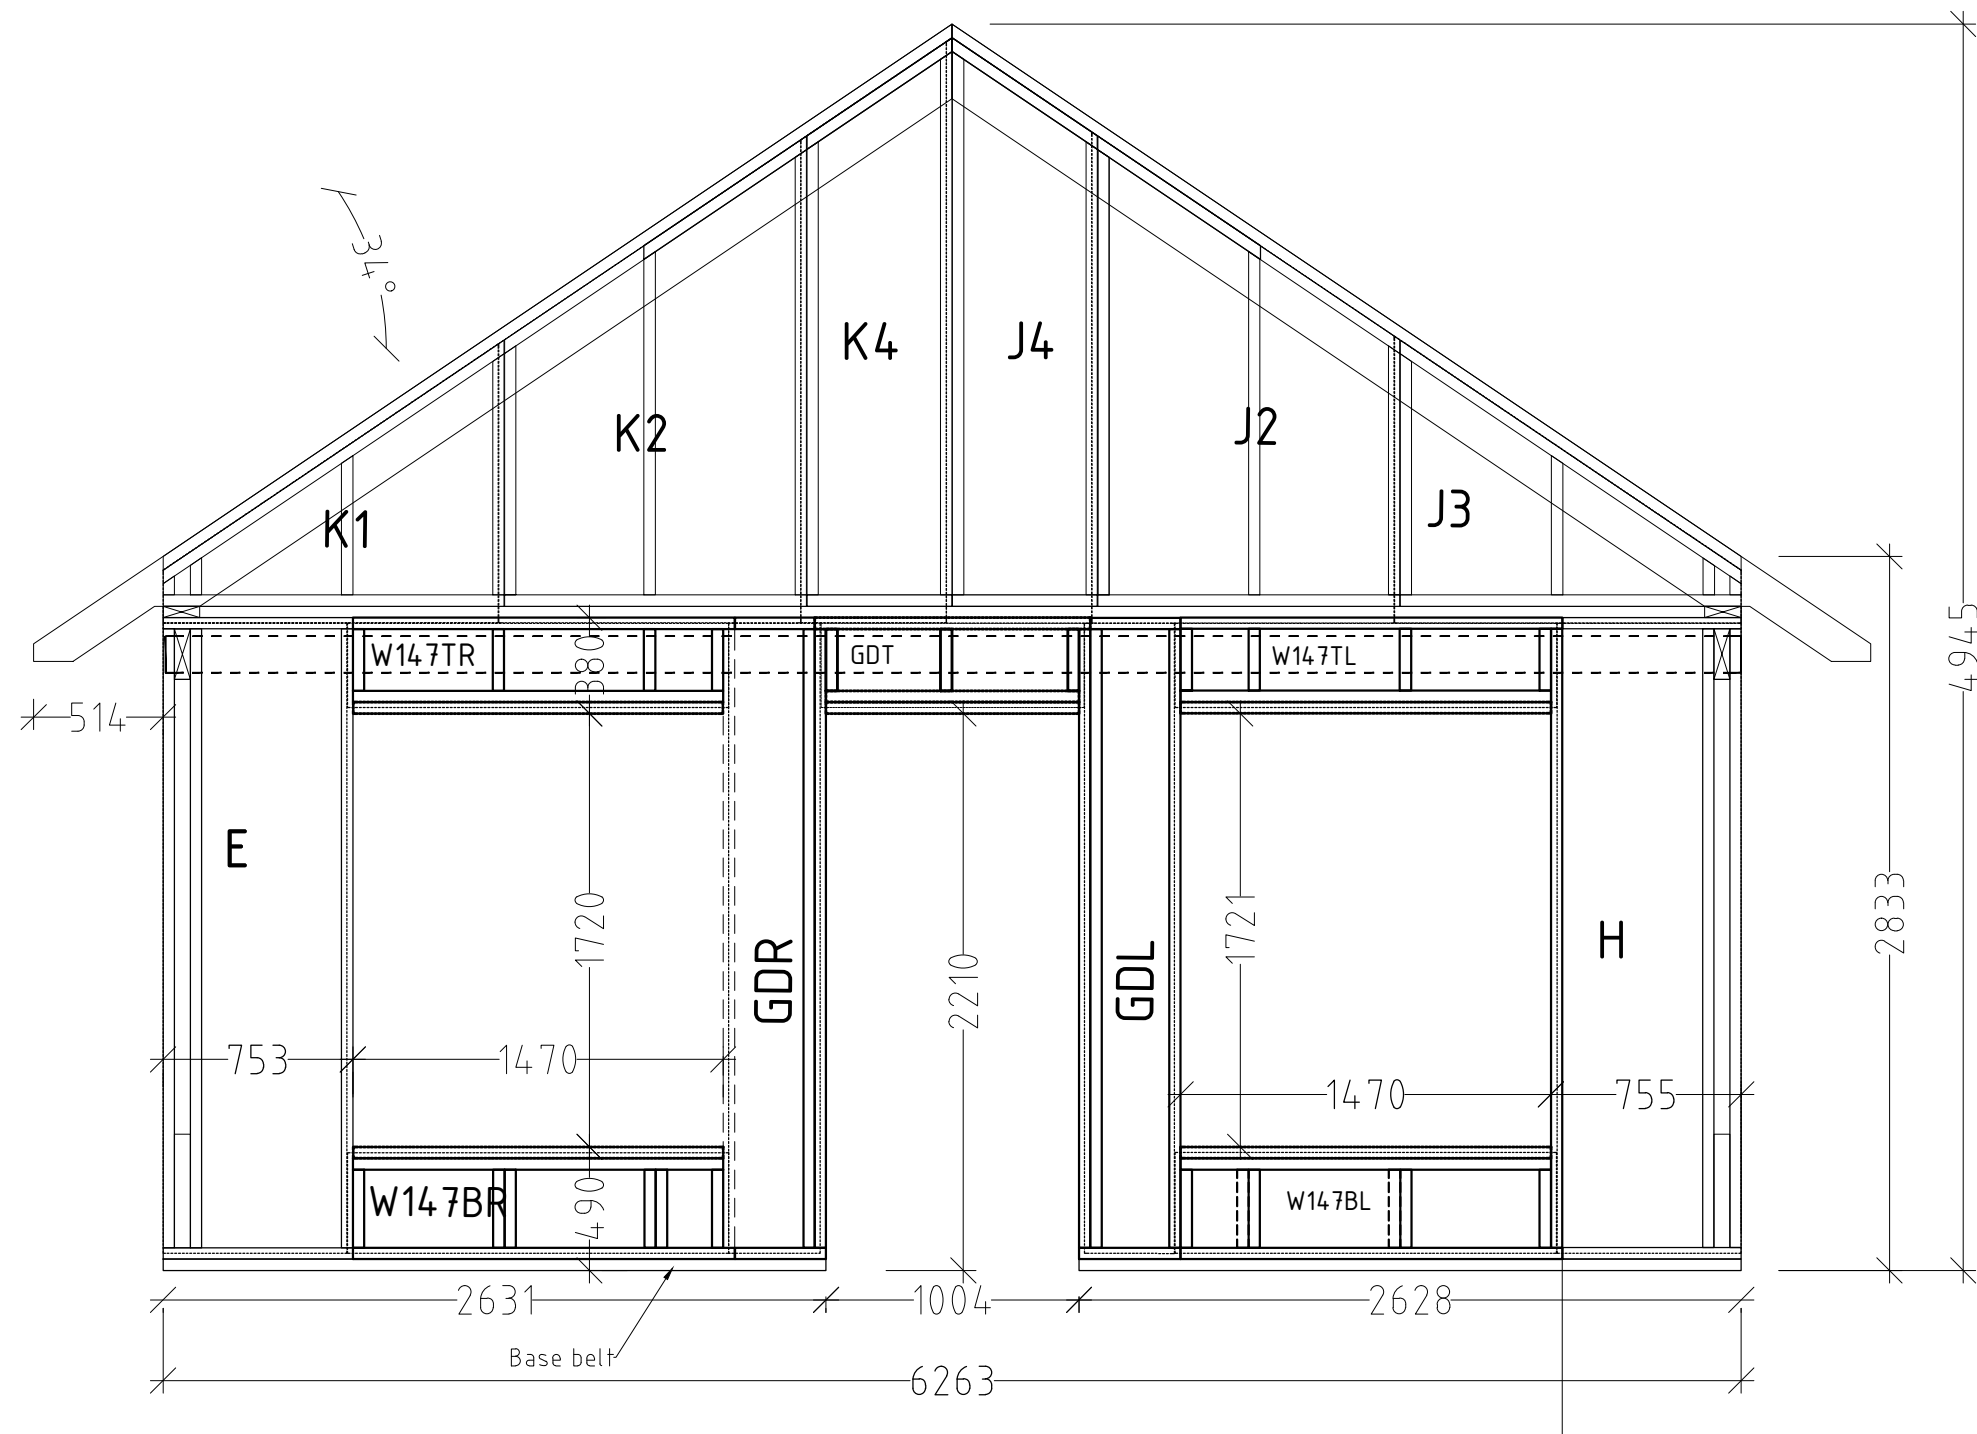



Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

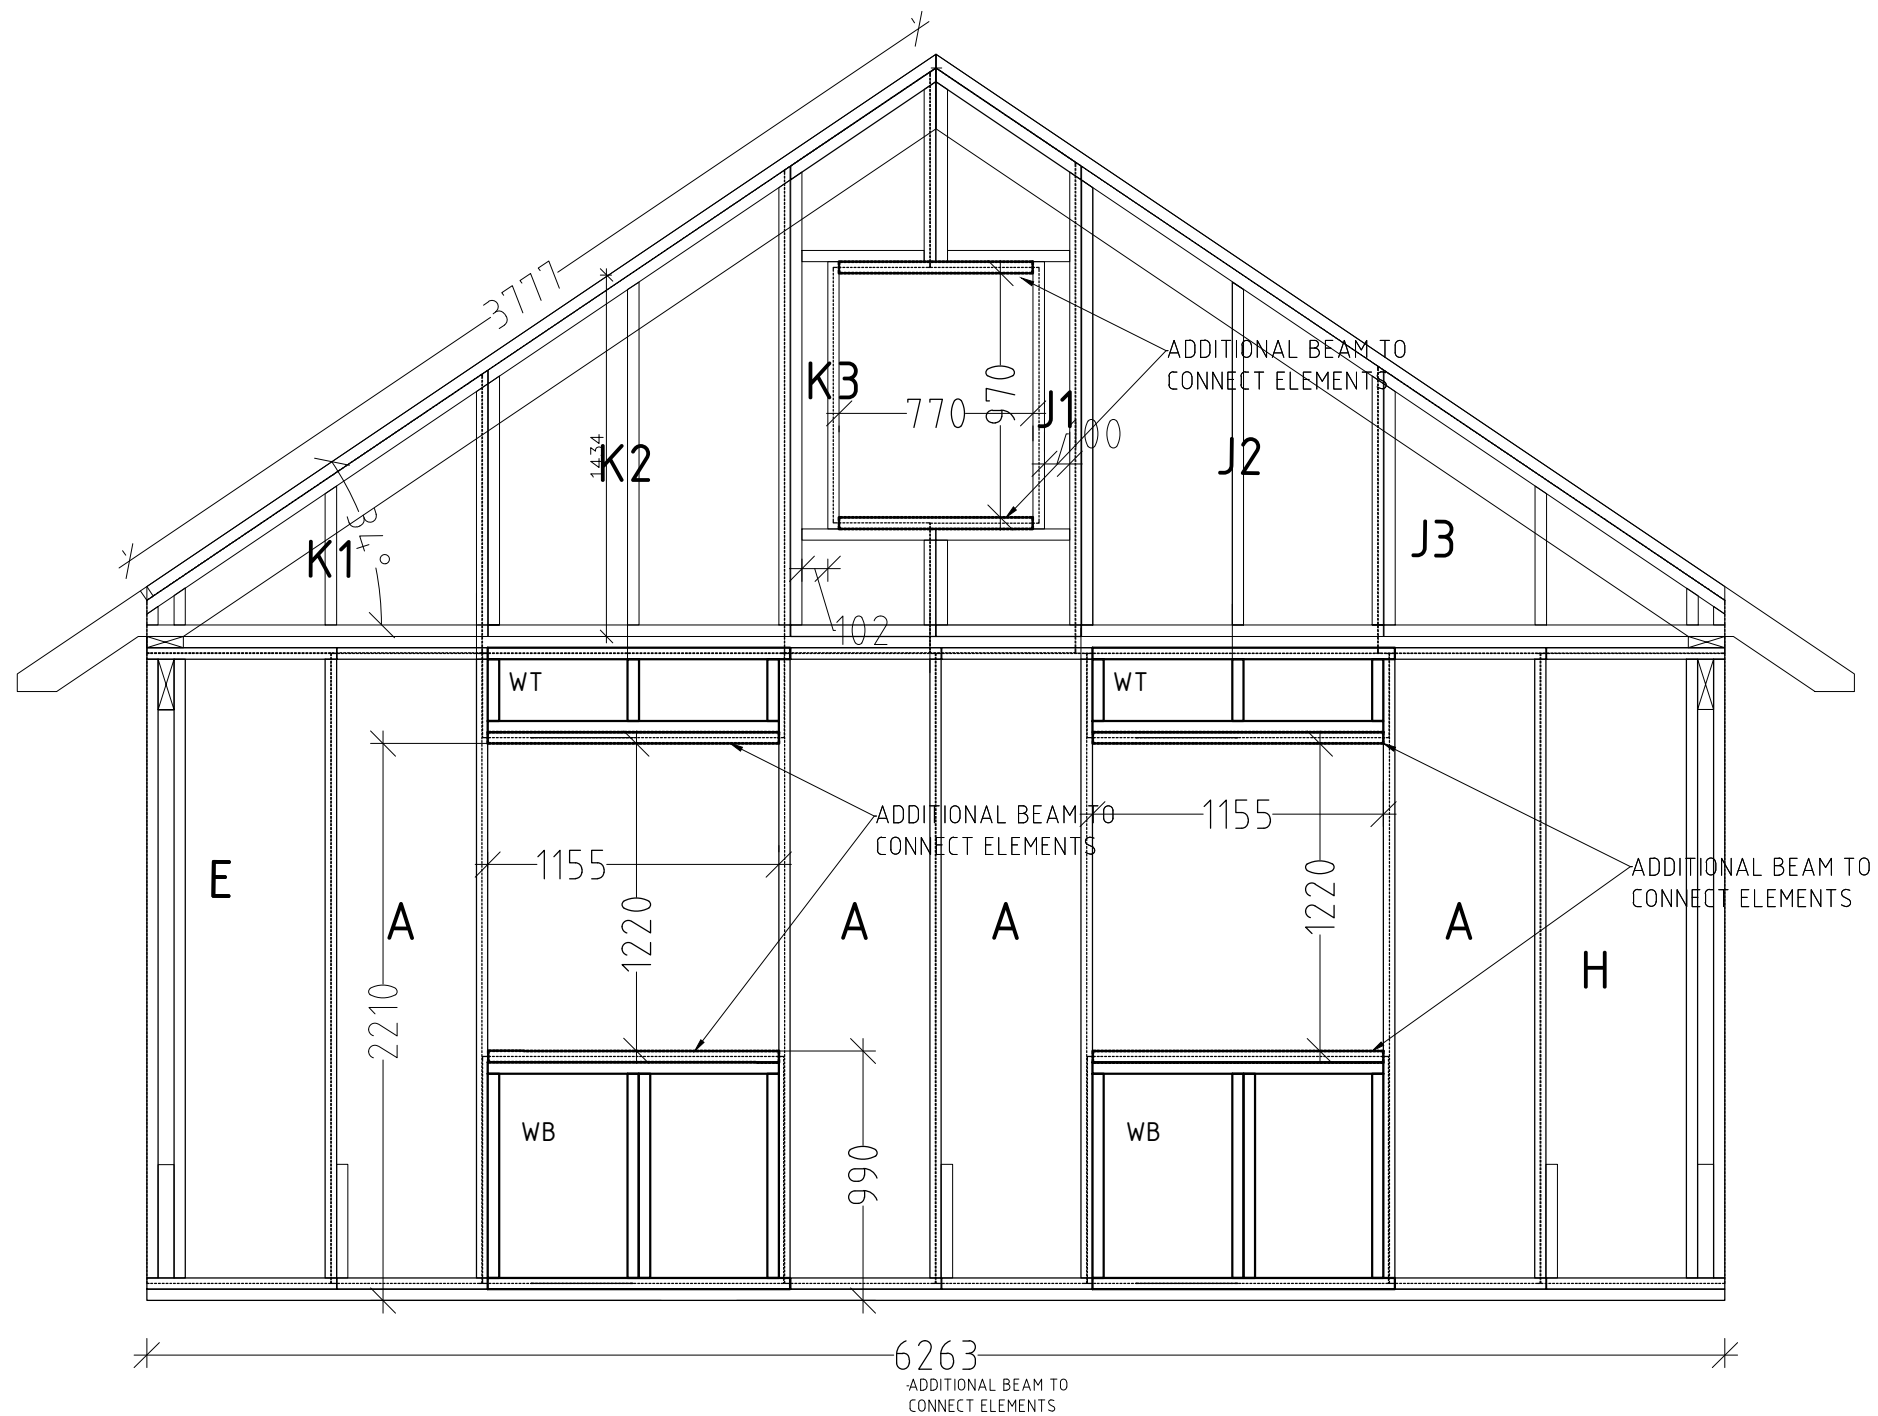

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.


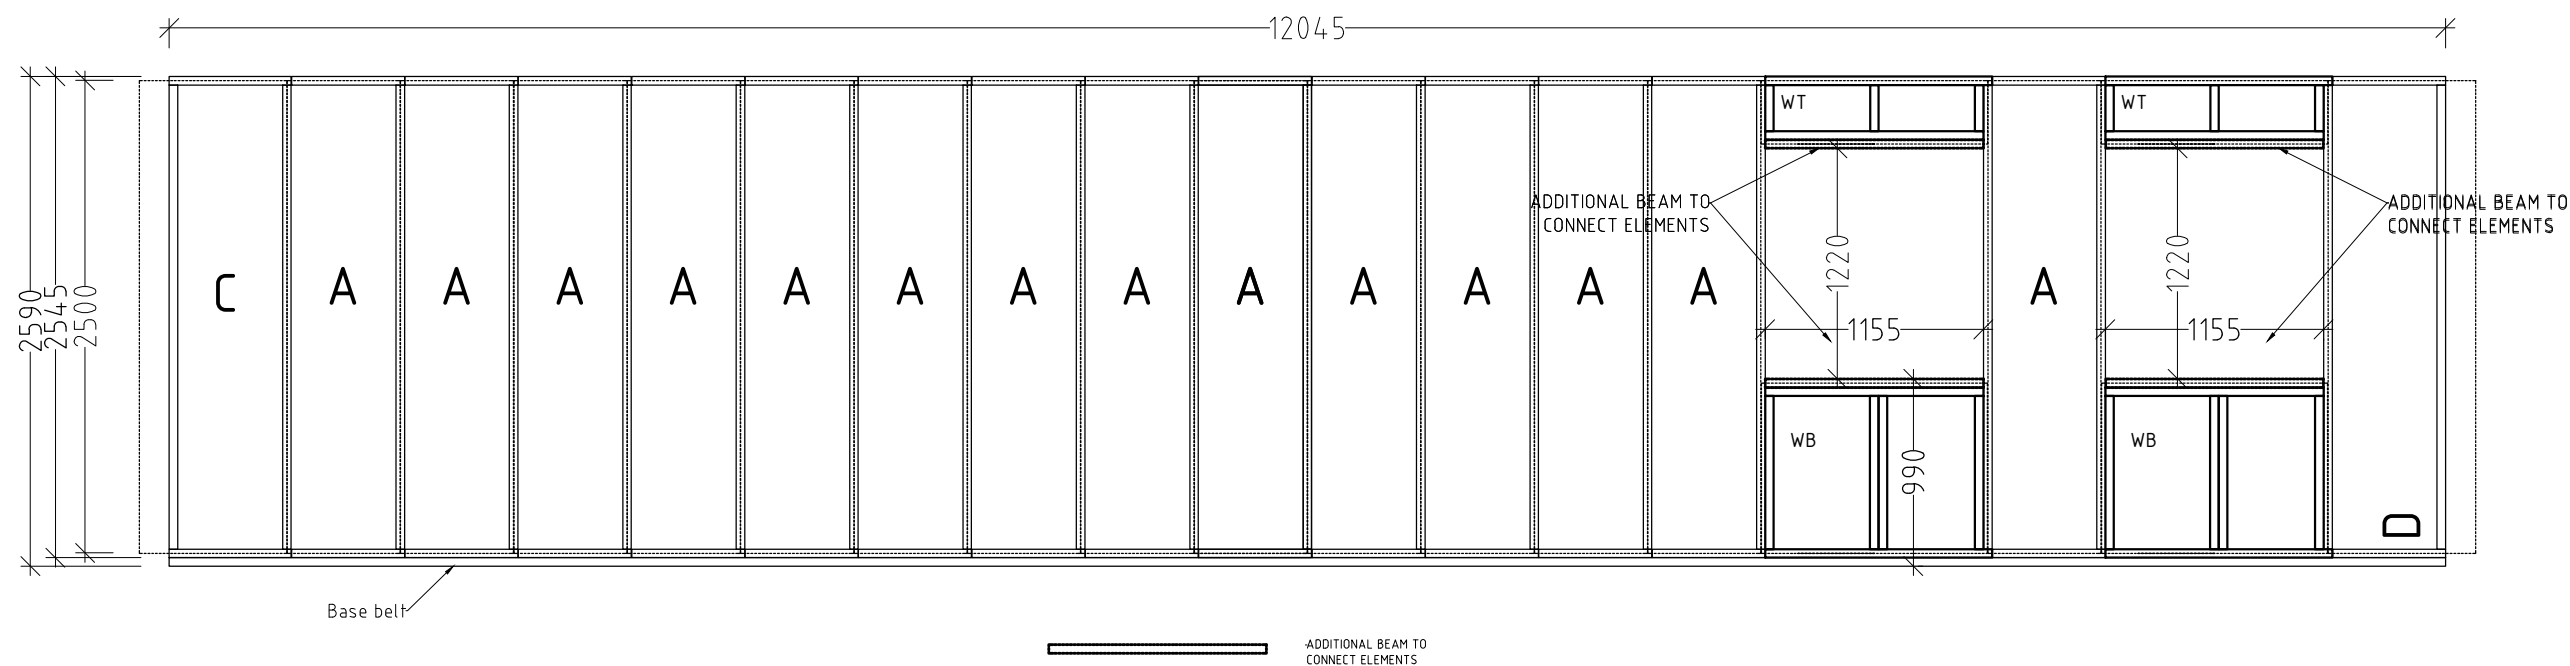
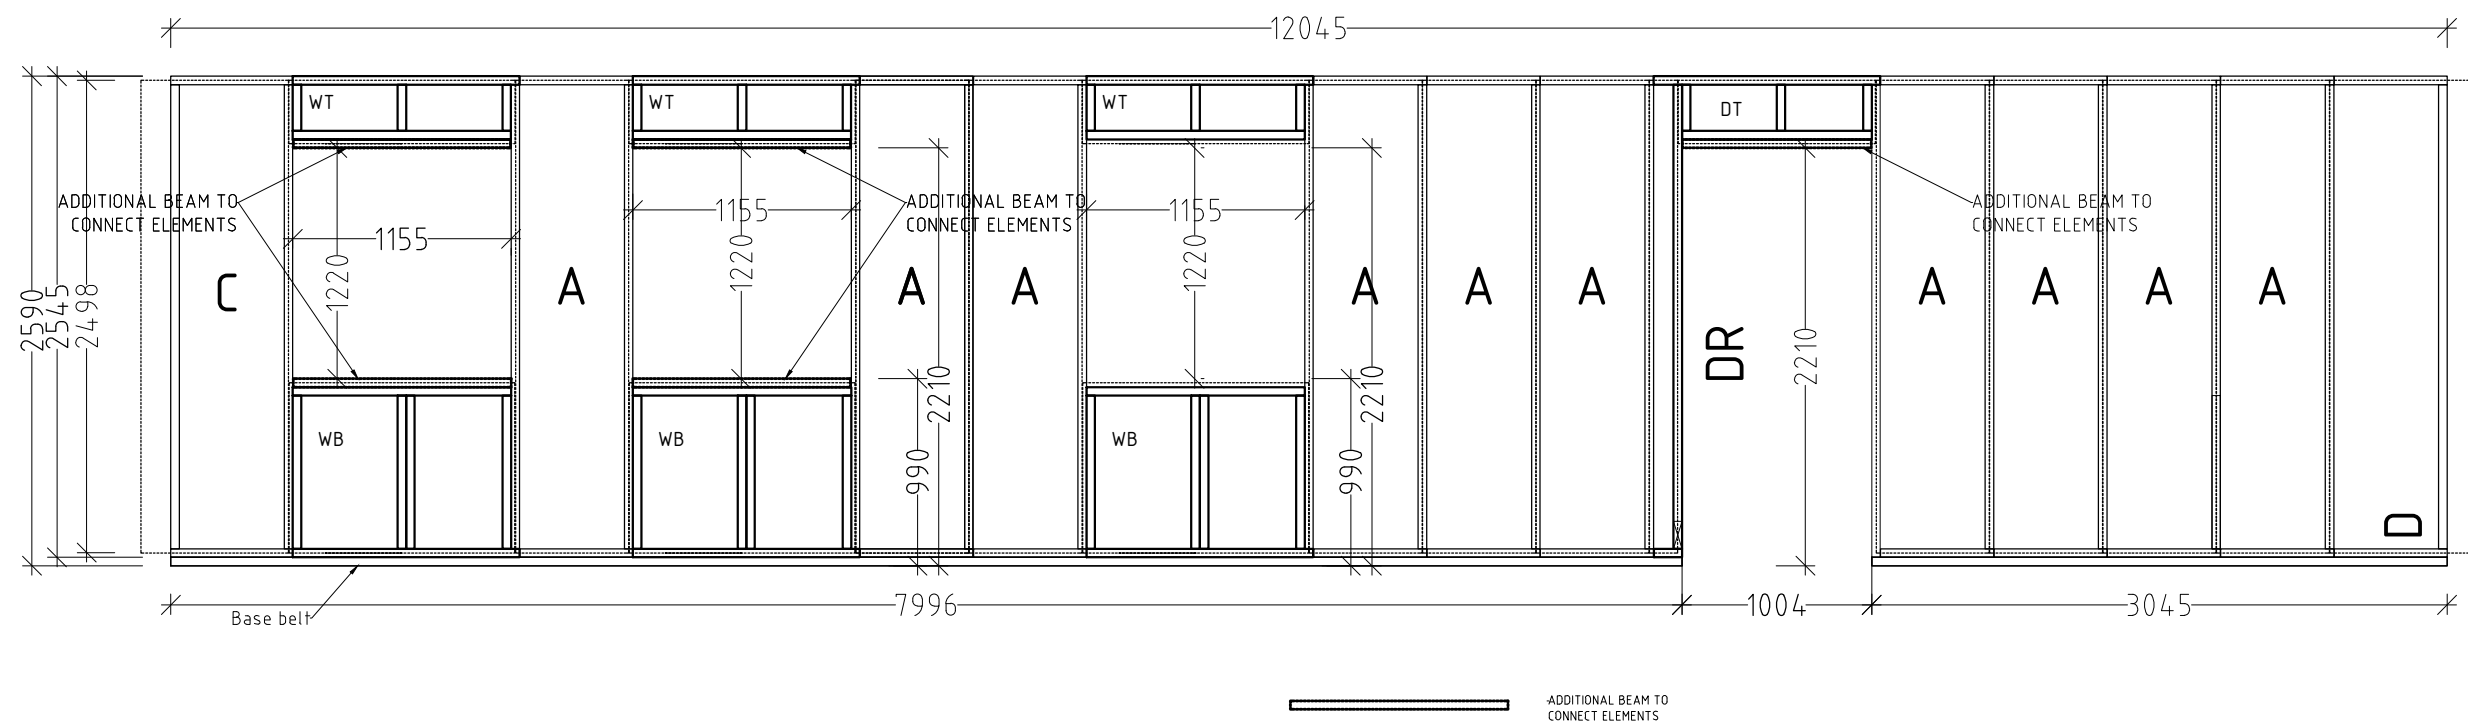


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

Roof metal cover principal connection scheme:
Scr. 4.8x50
I: Every second high point cc.400 mm
J: Every high point cc200
K: Every high pint cc400

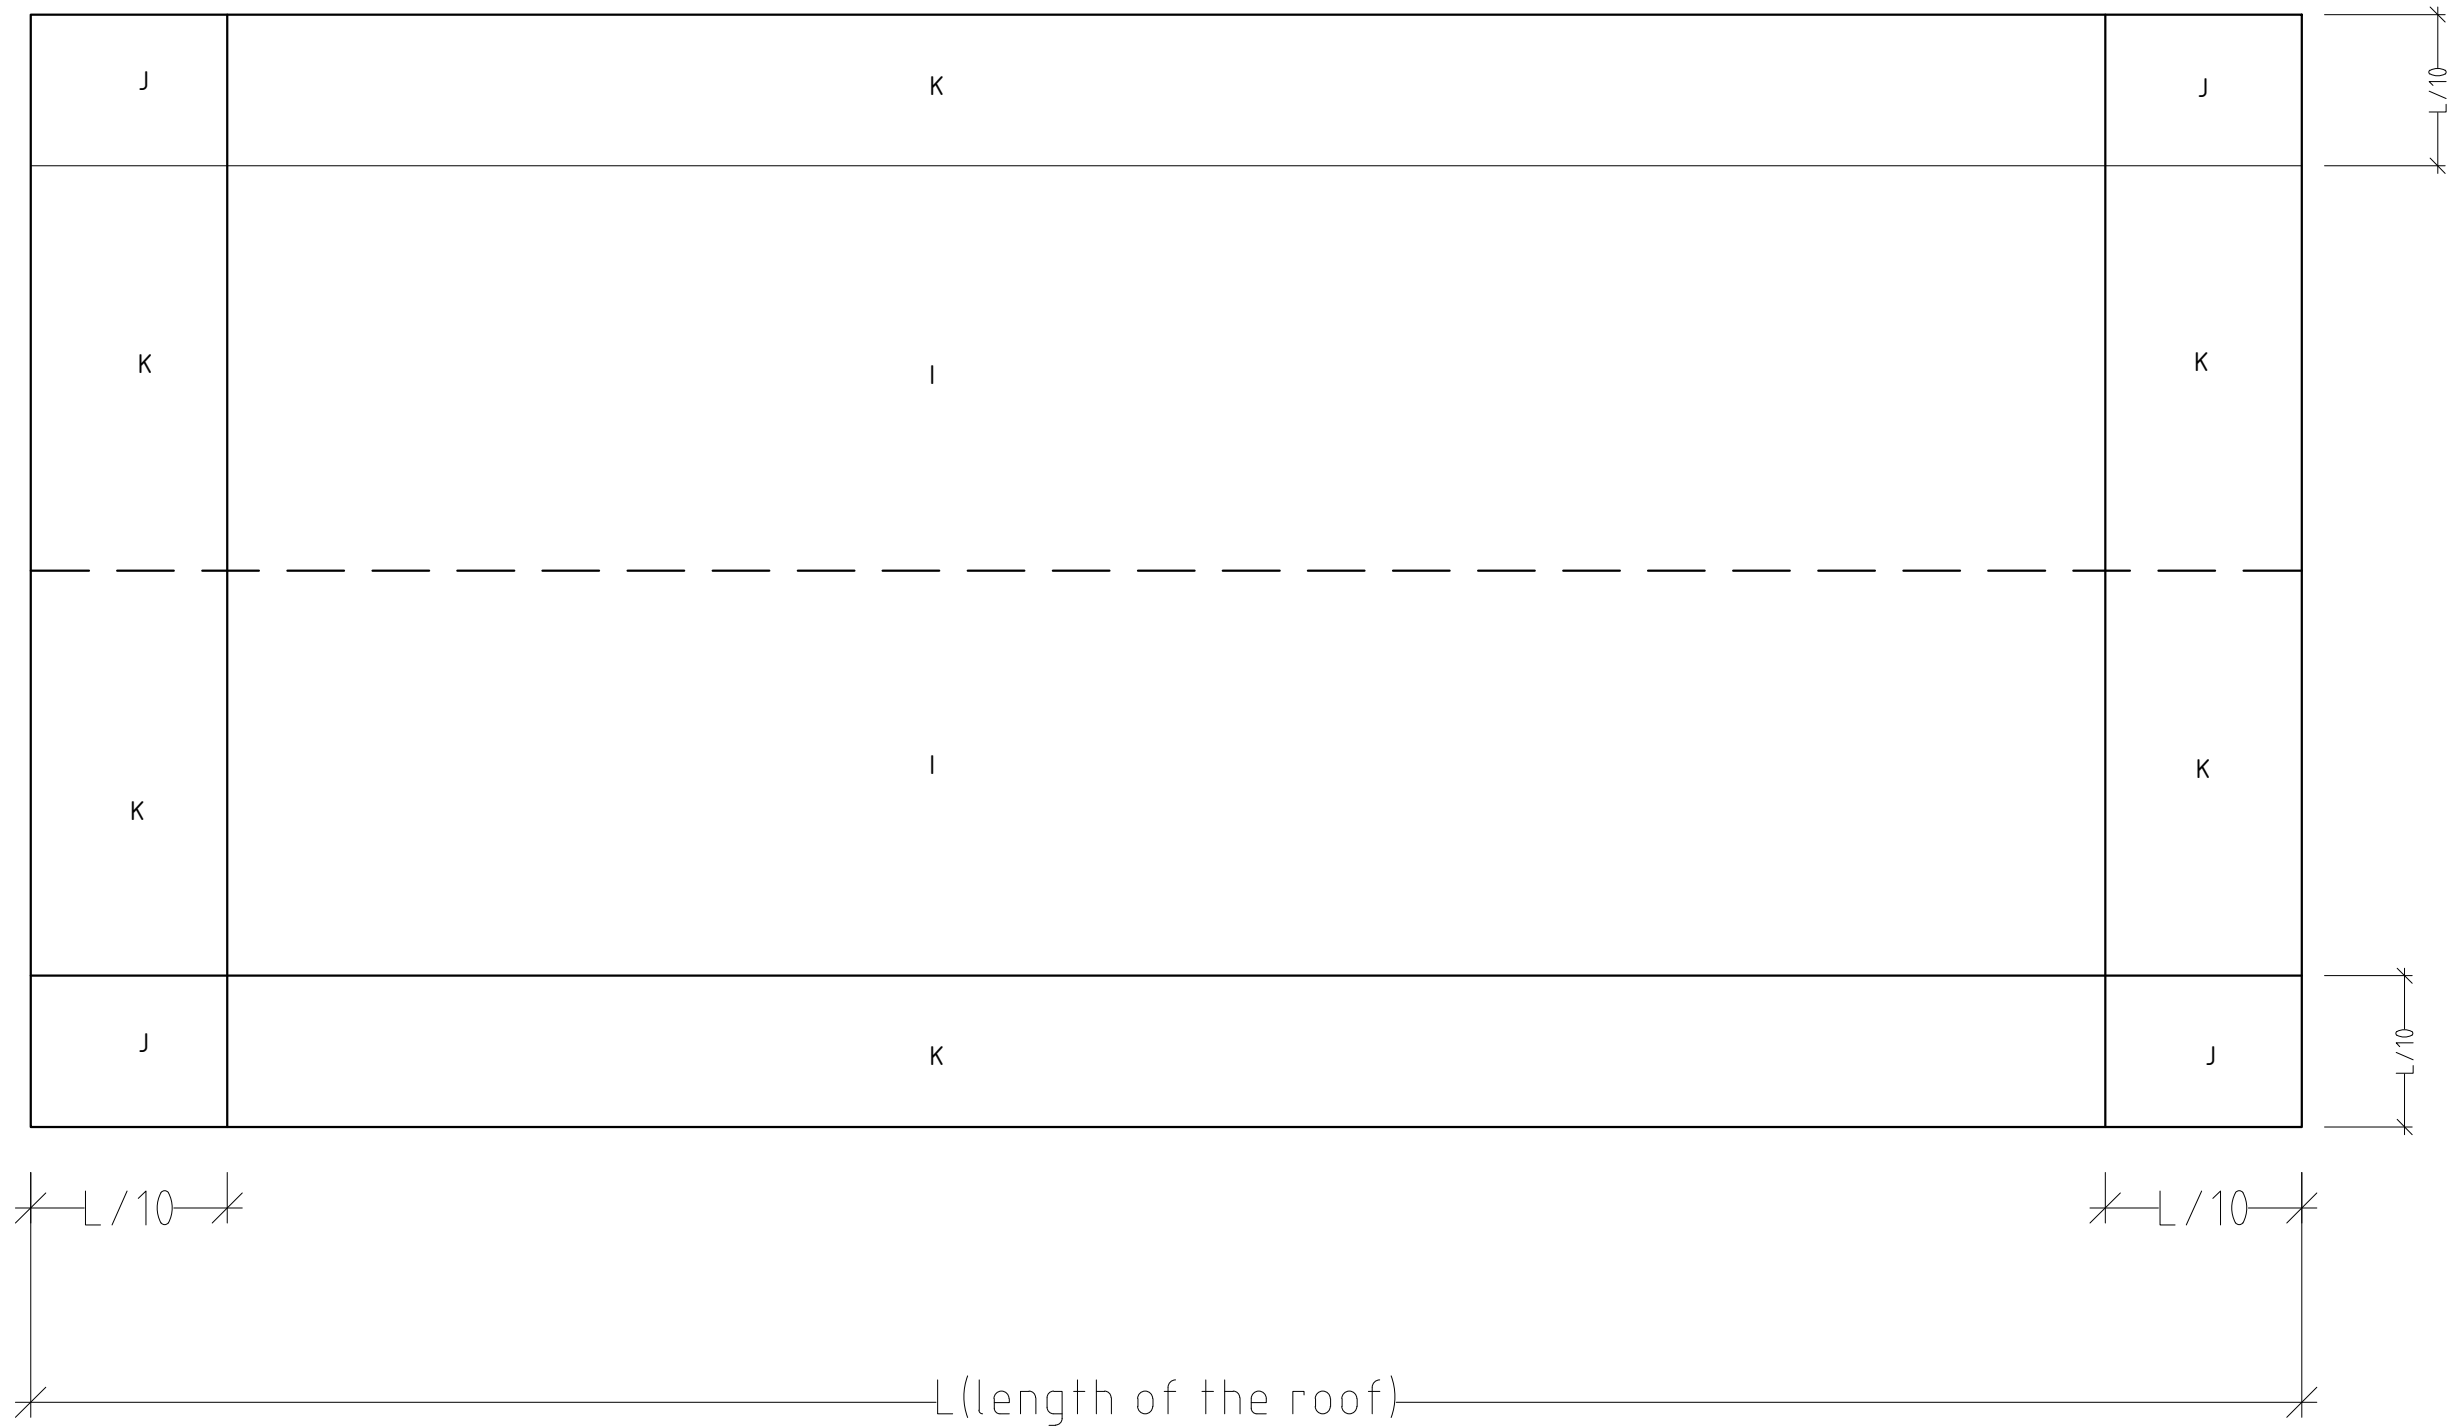


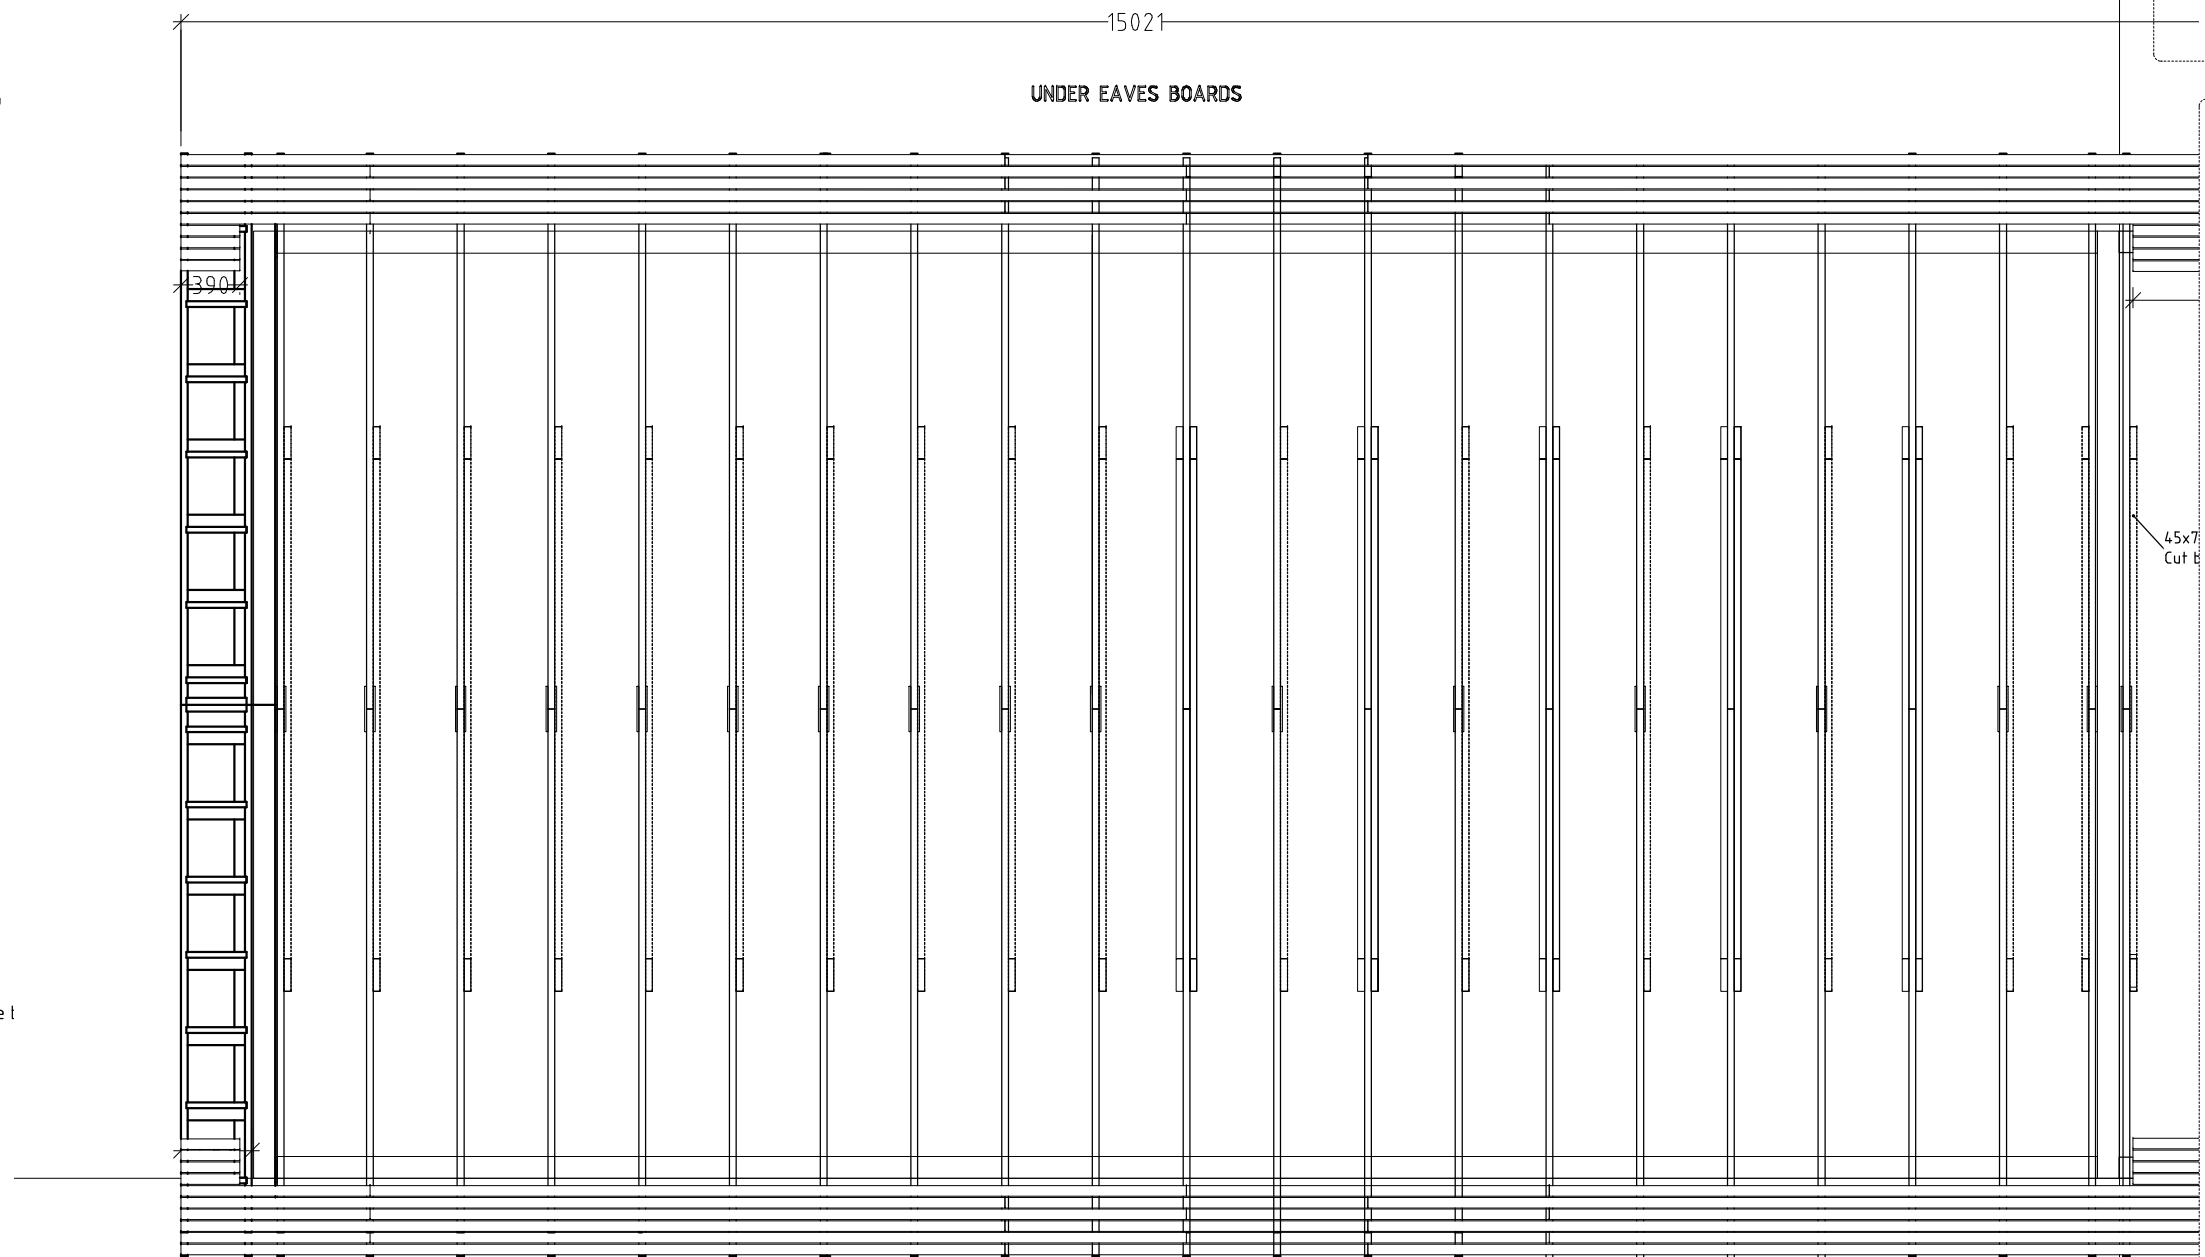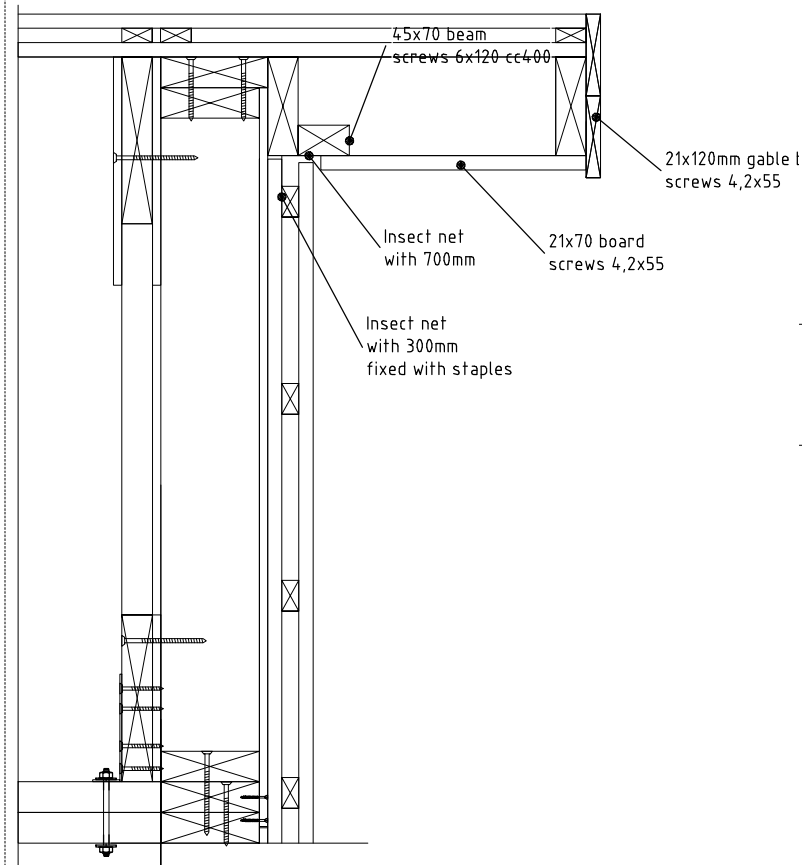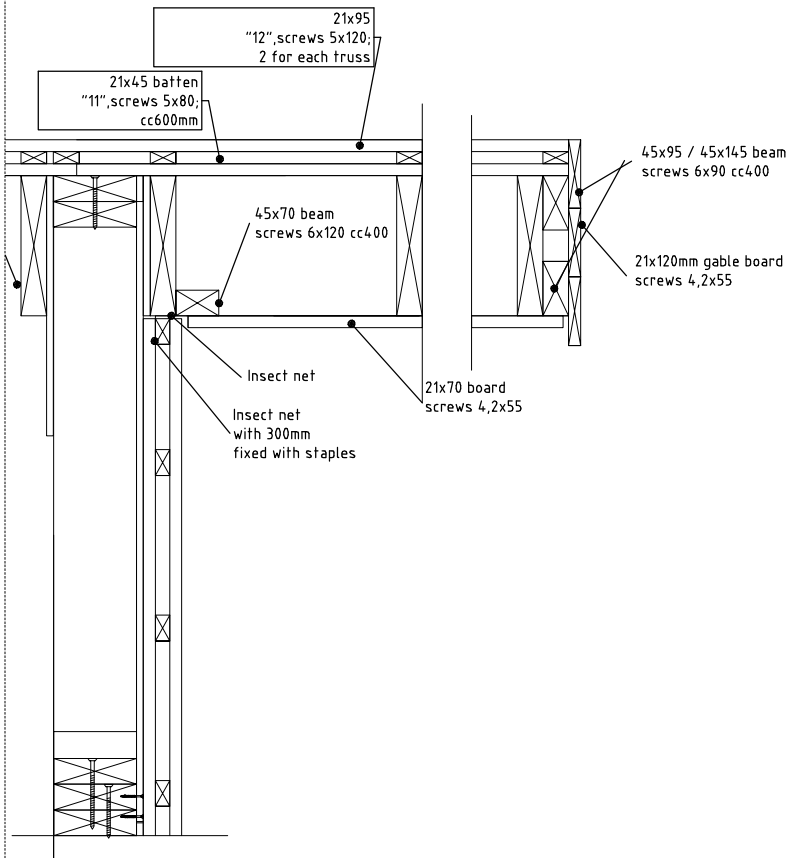

Measurements 390mm and 2112 mm are in exact measure.
All other board material is sent in meter amount
Board connection must be dispersed.
Board connection on the same bearing support is allowed over 2 boards


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

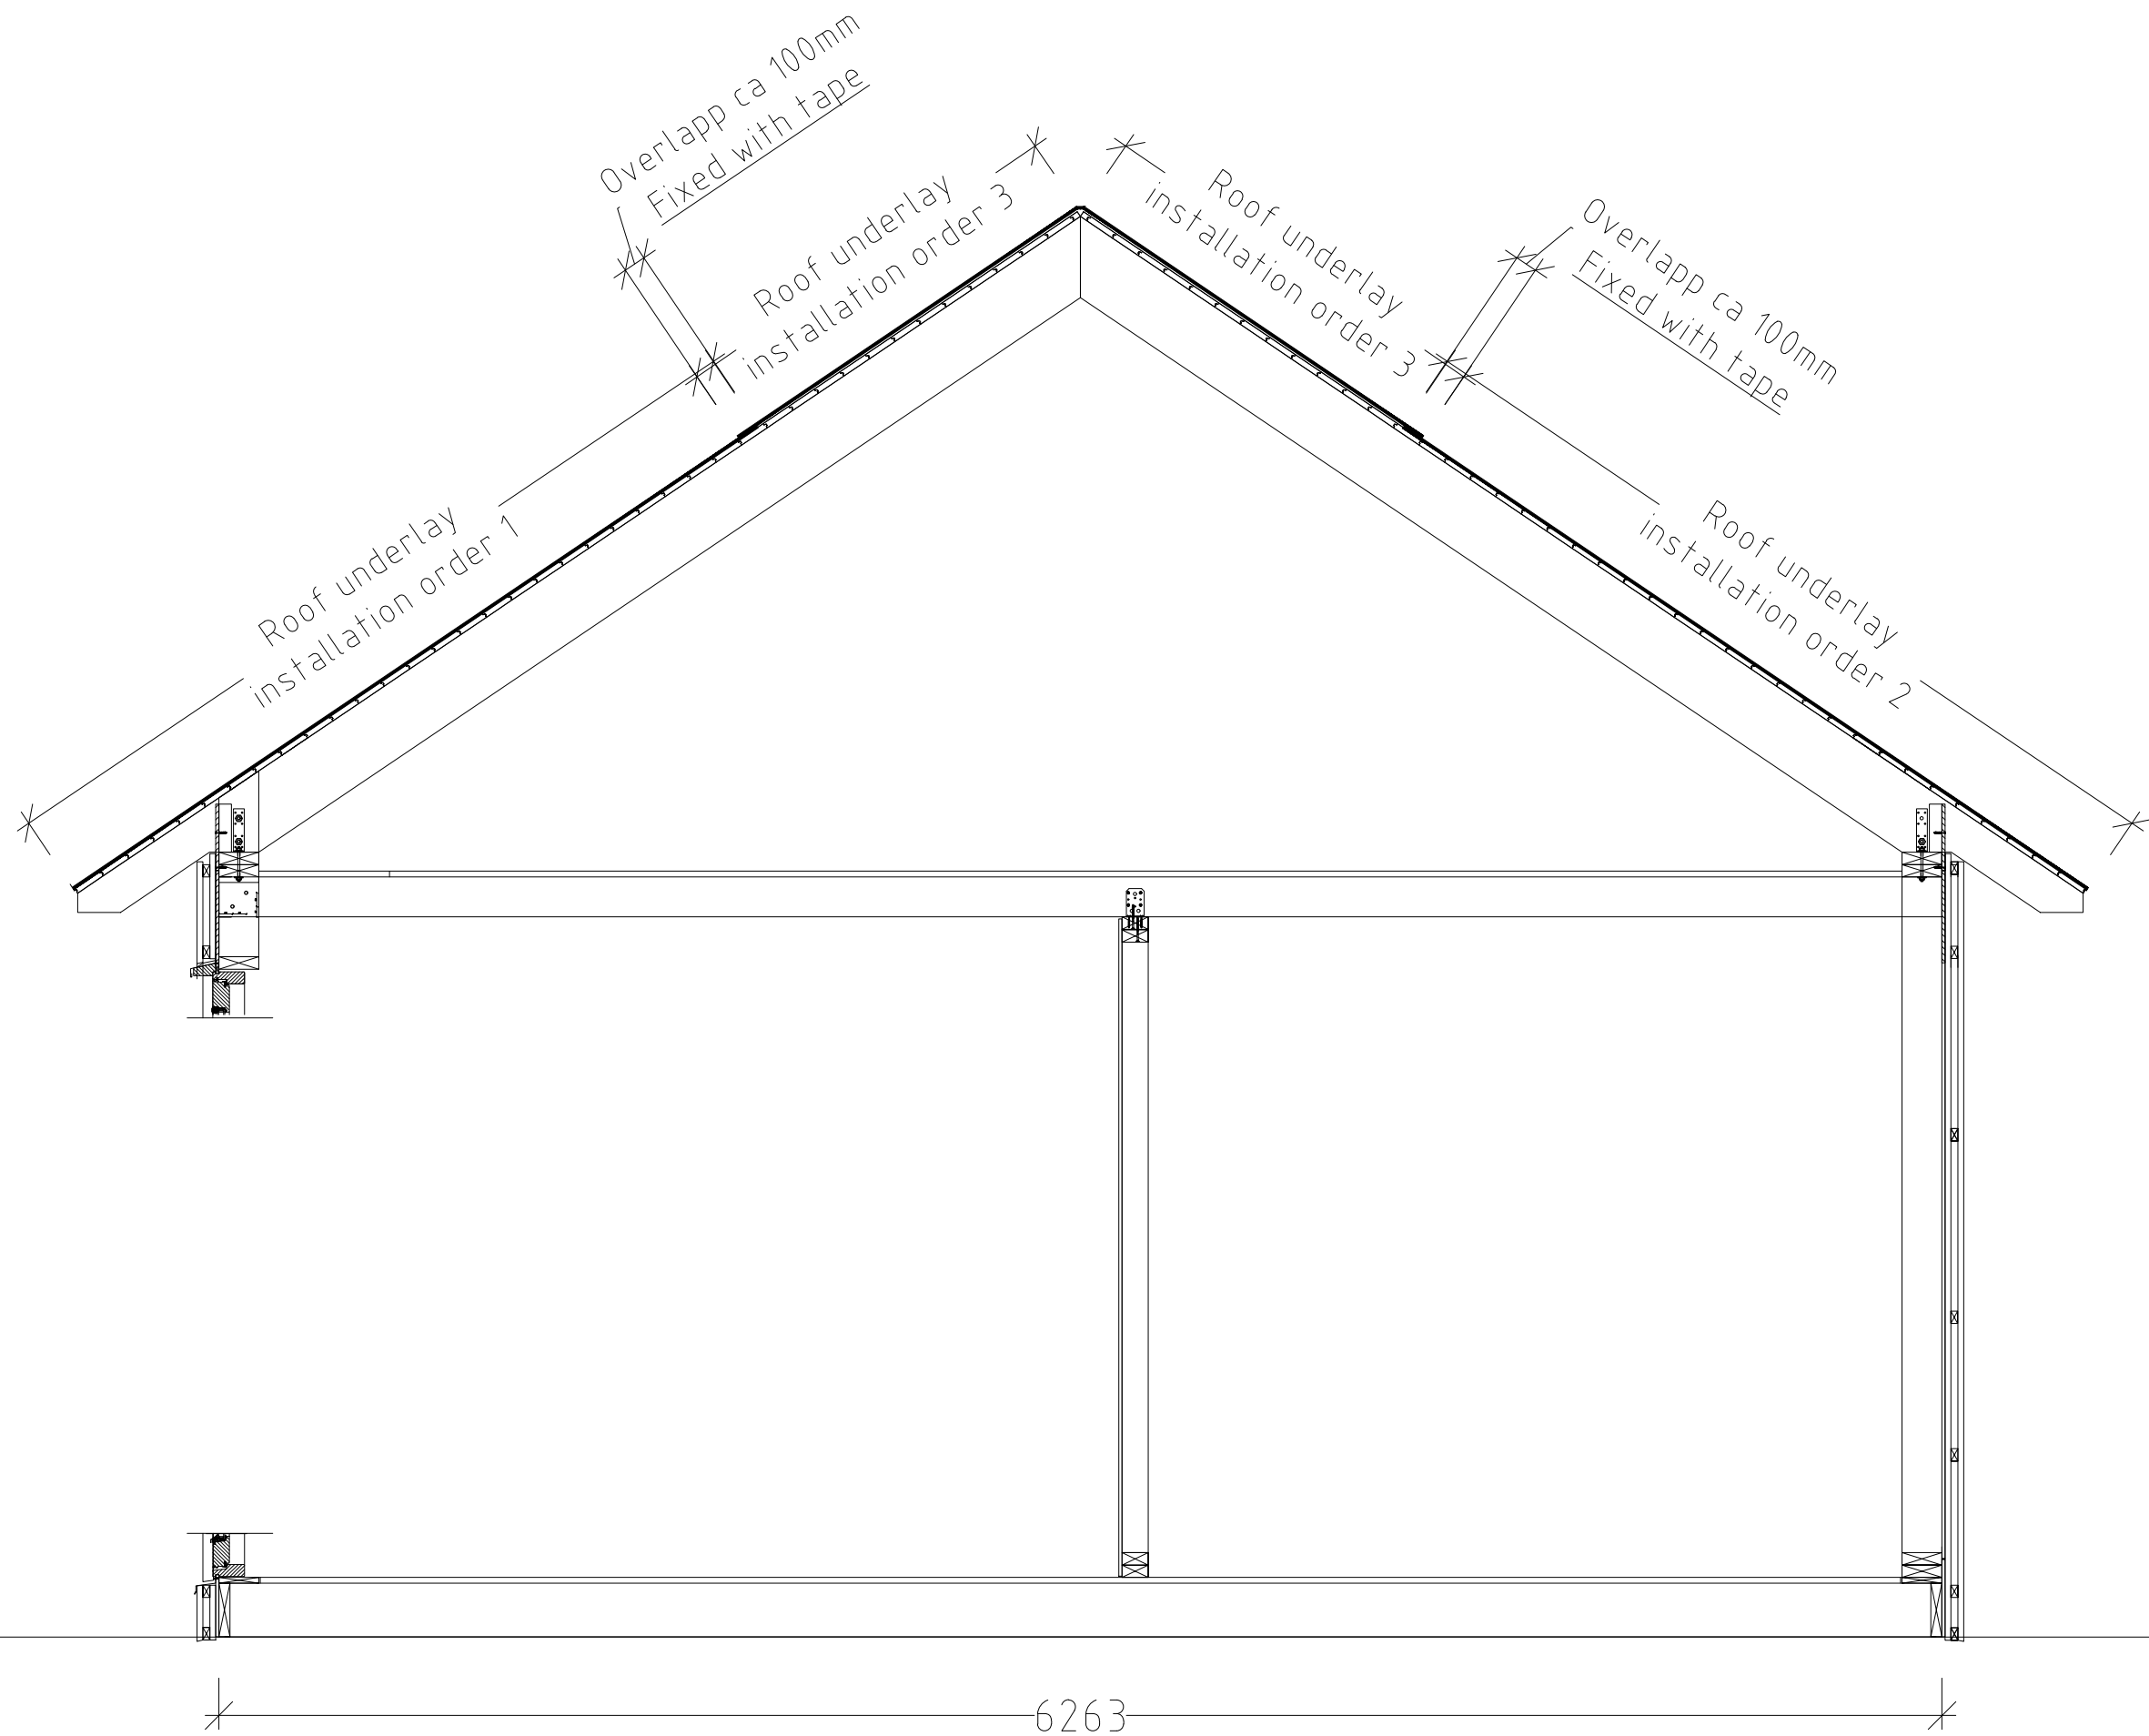




Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

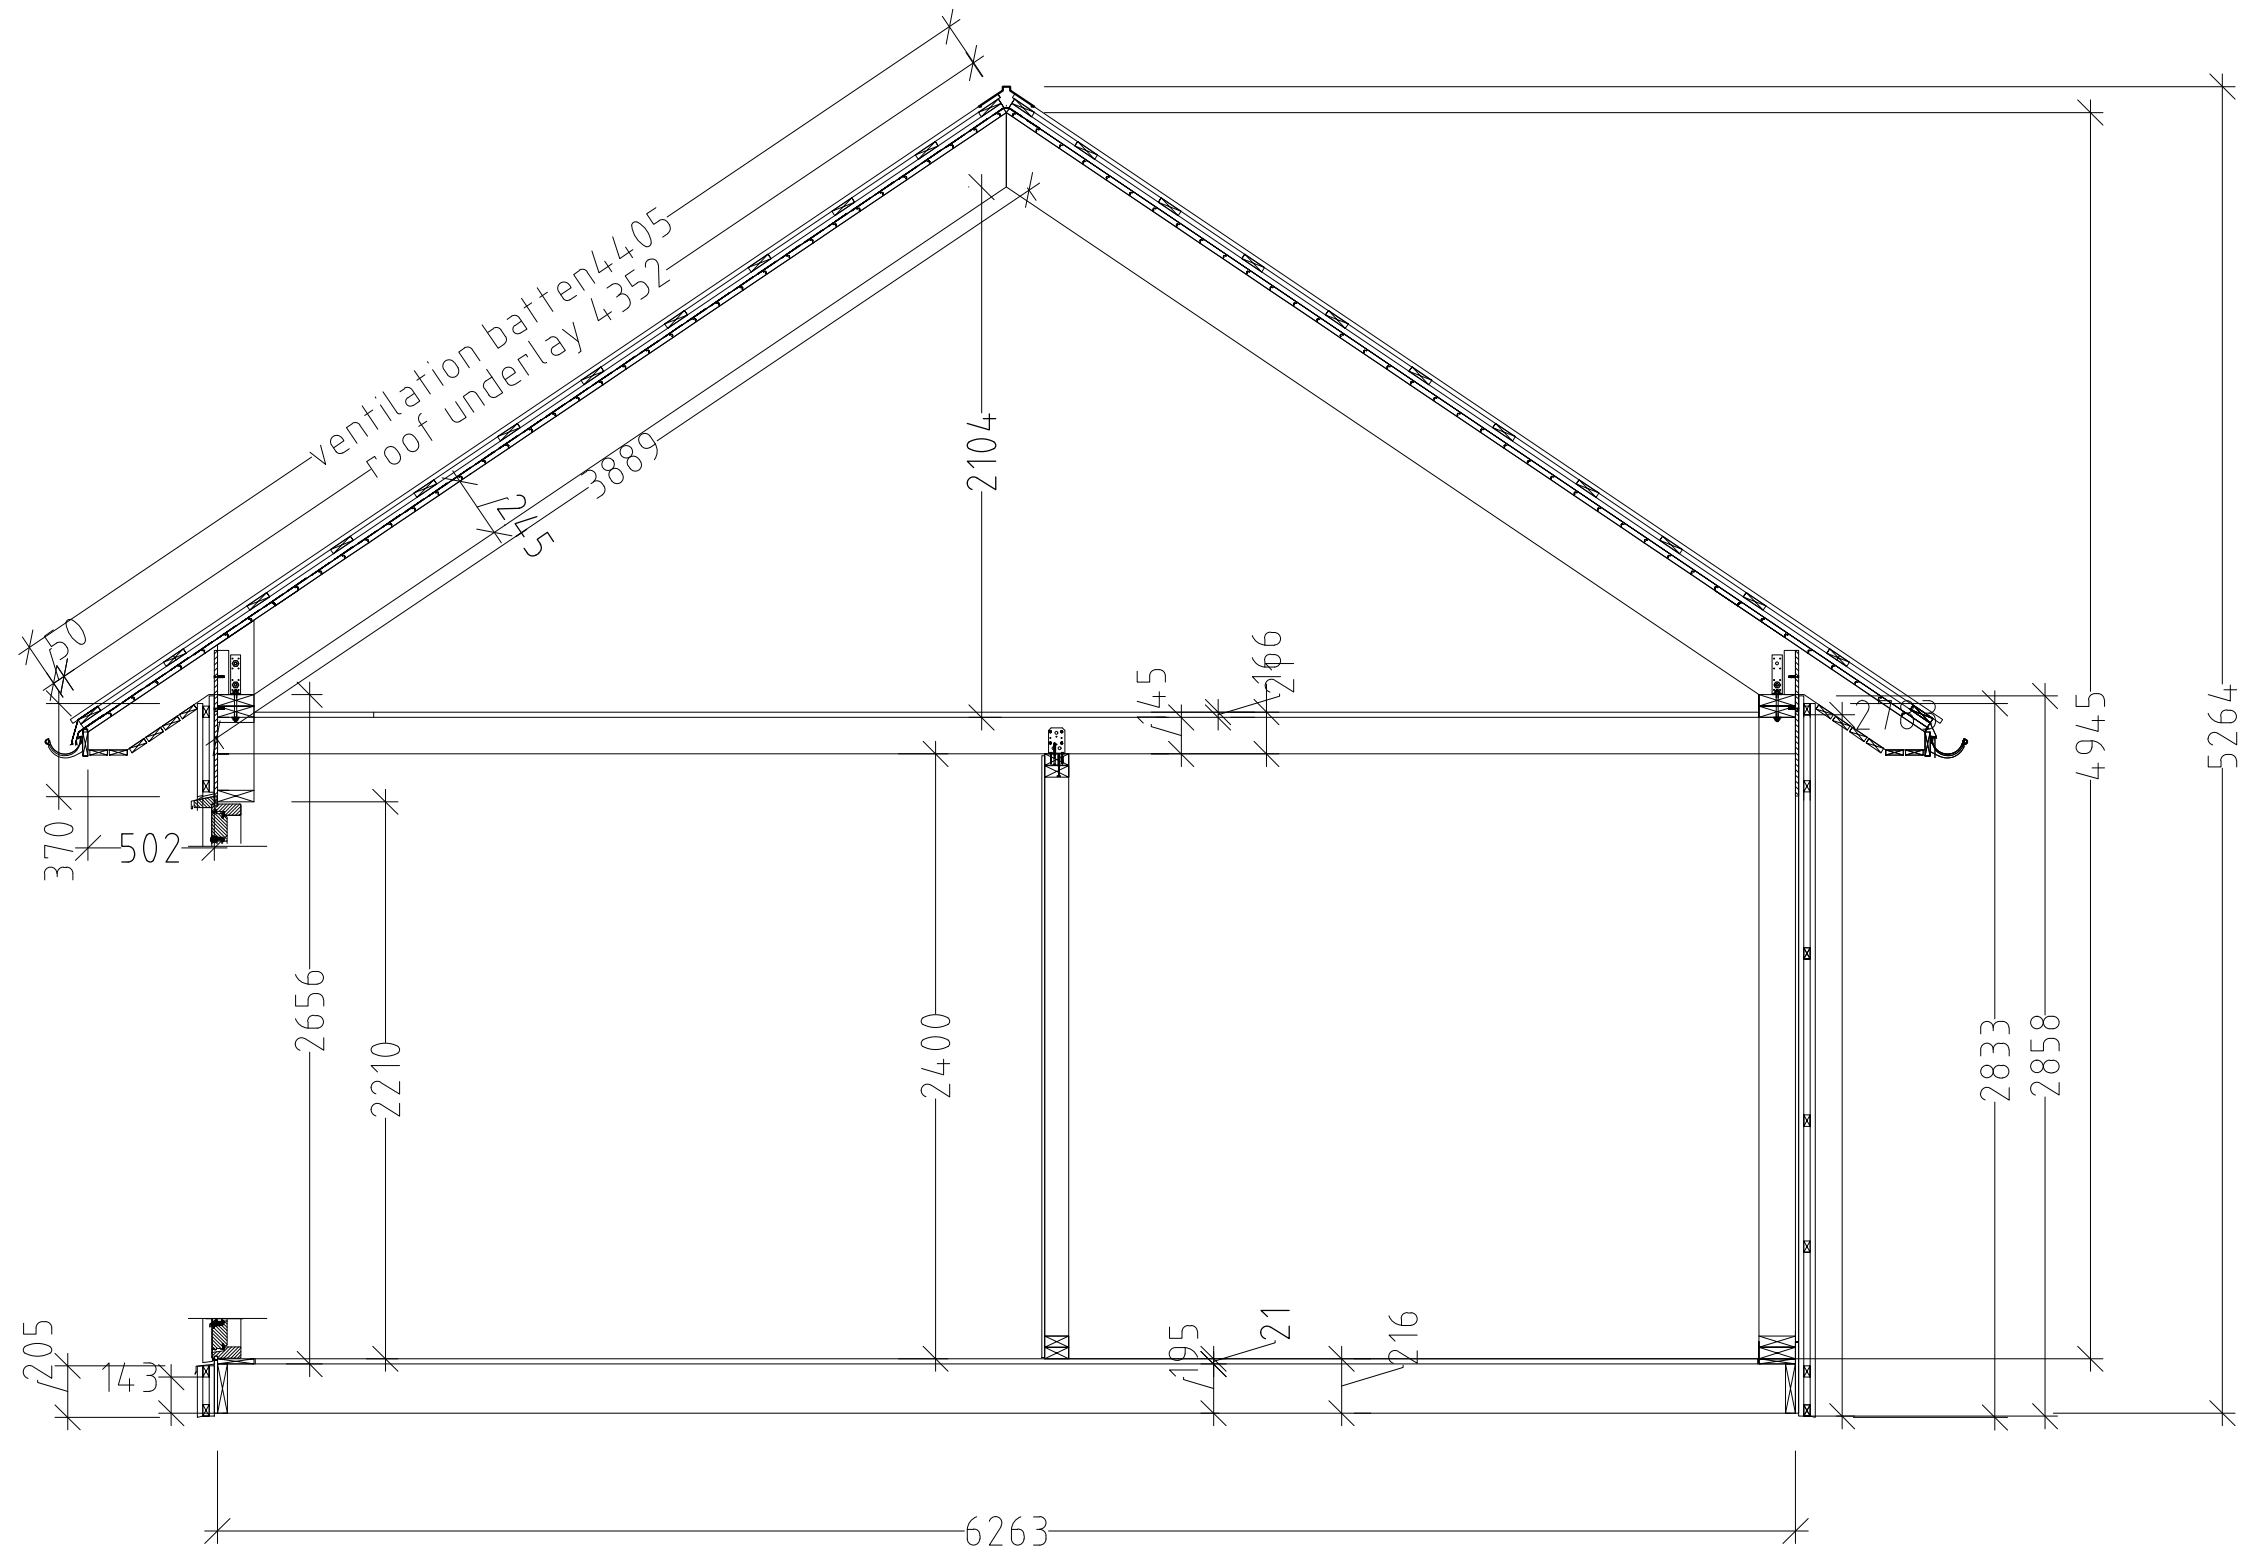


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

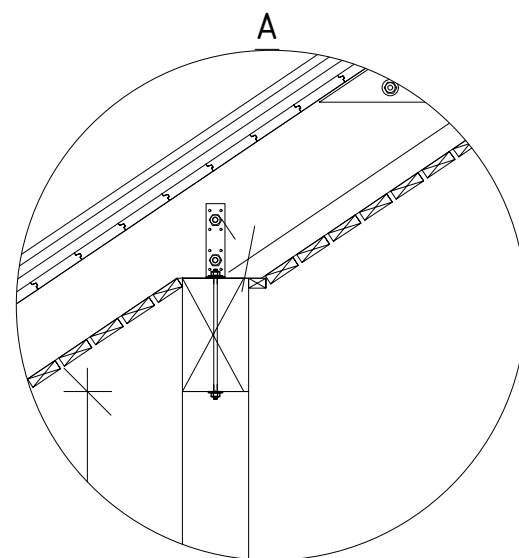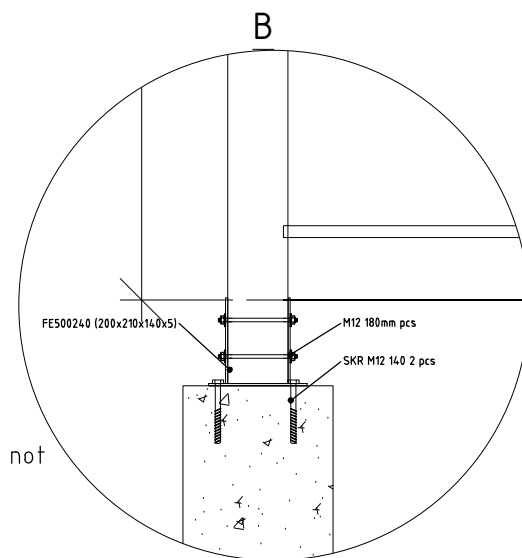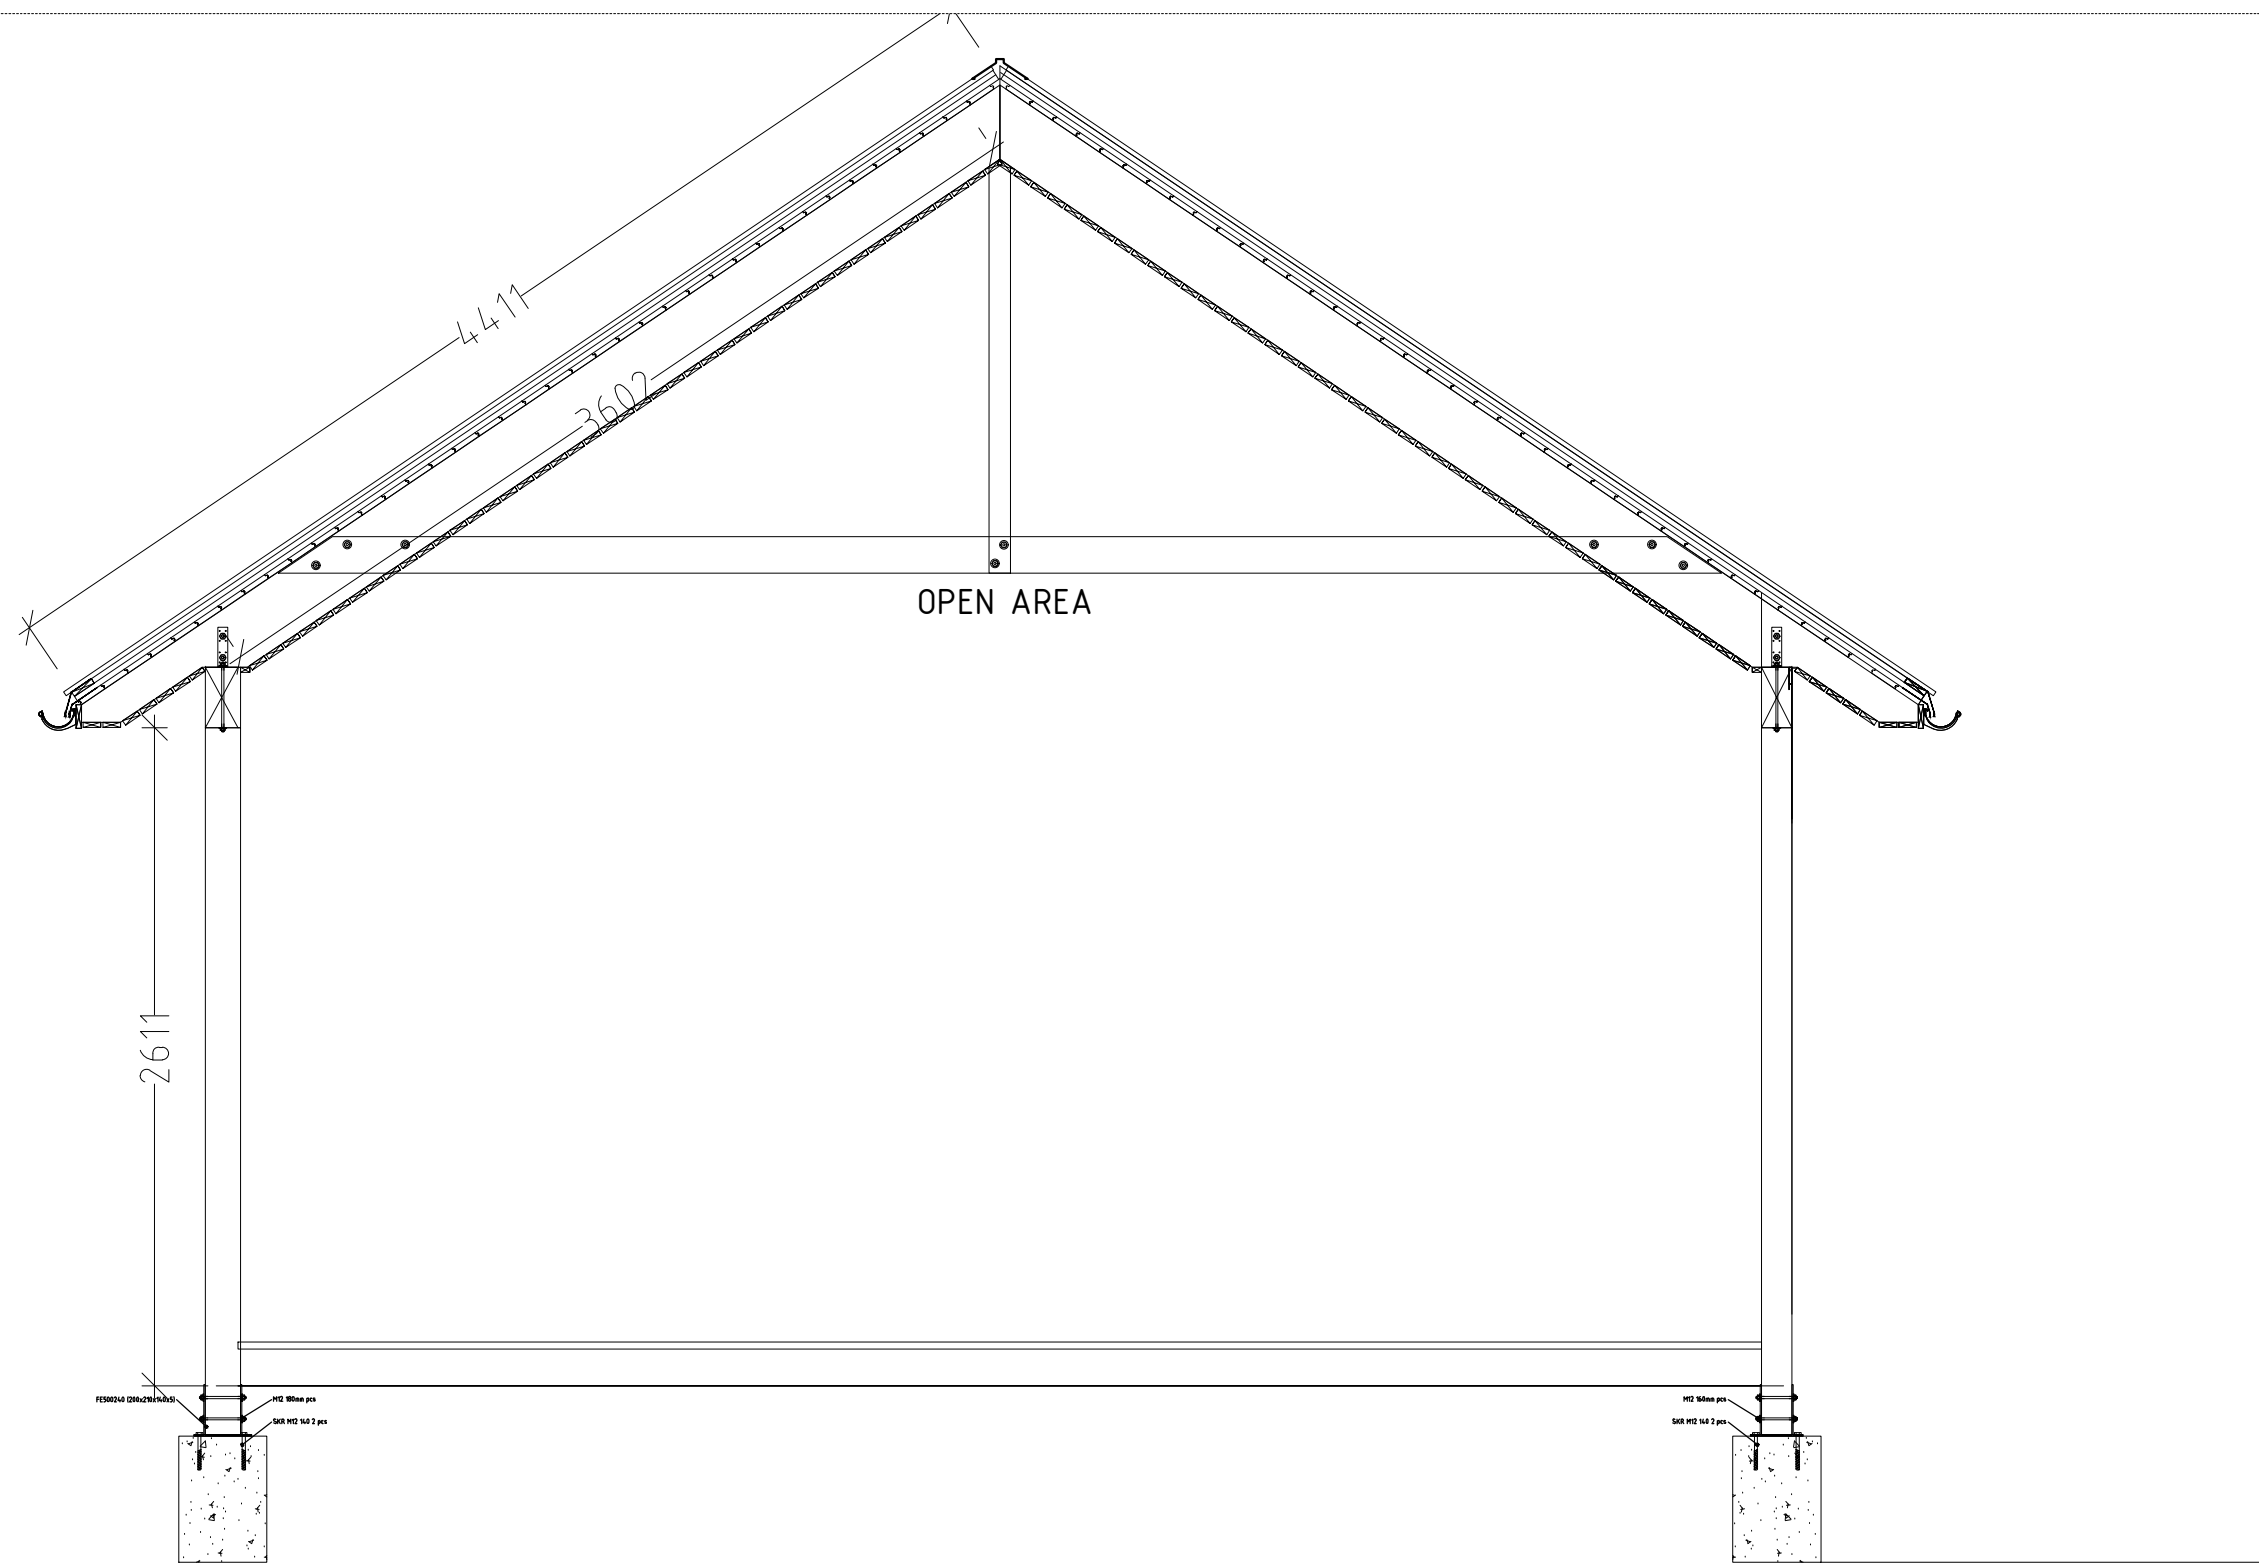


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

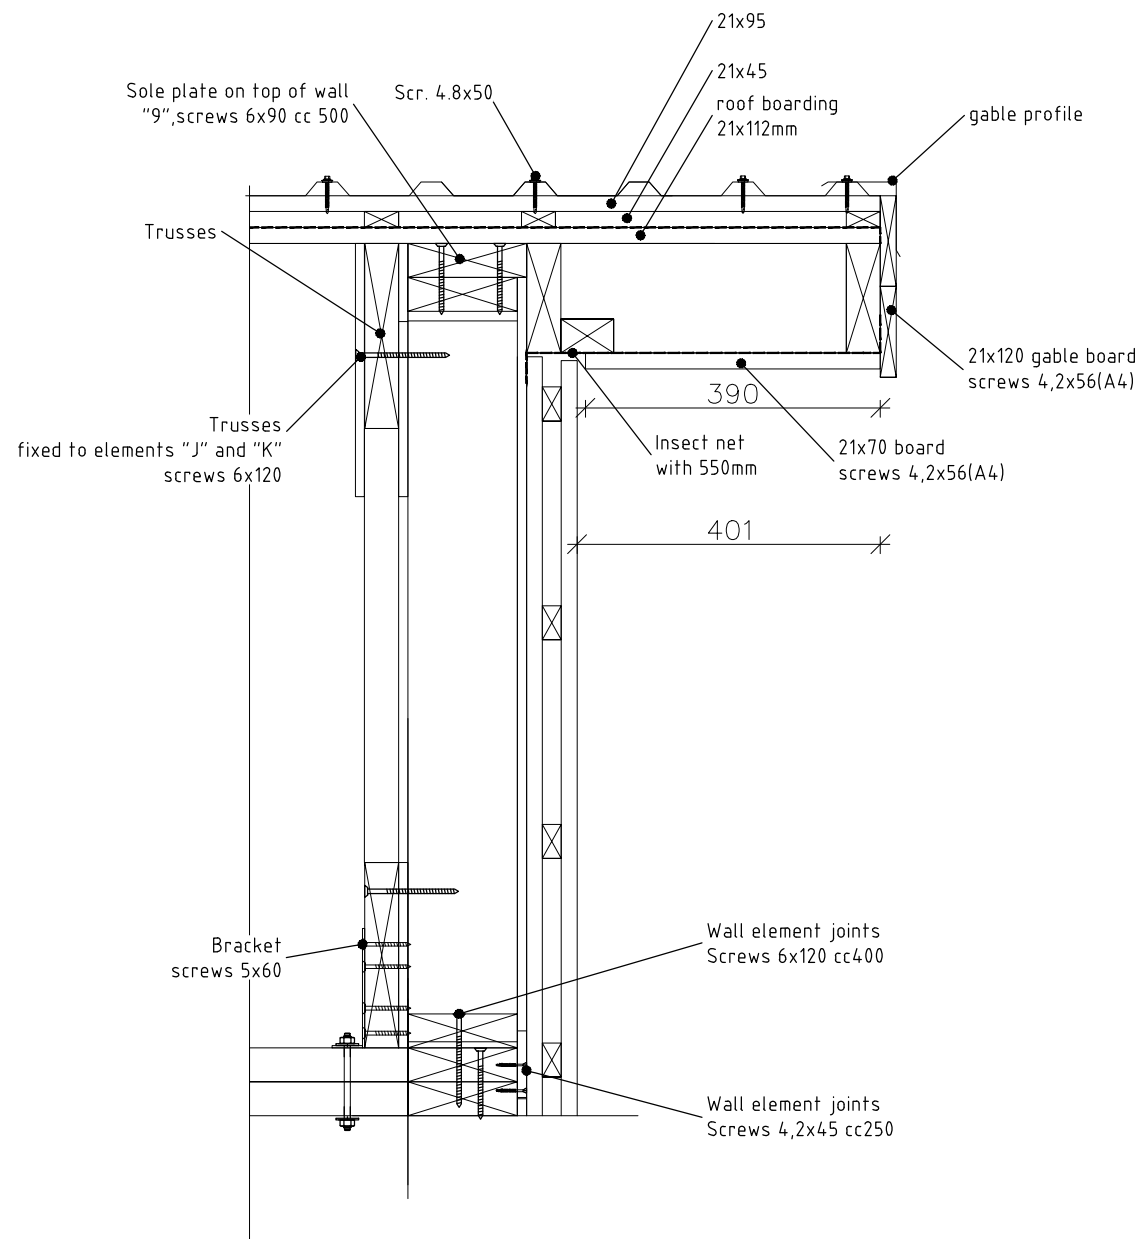


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

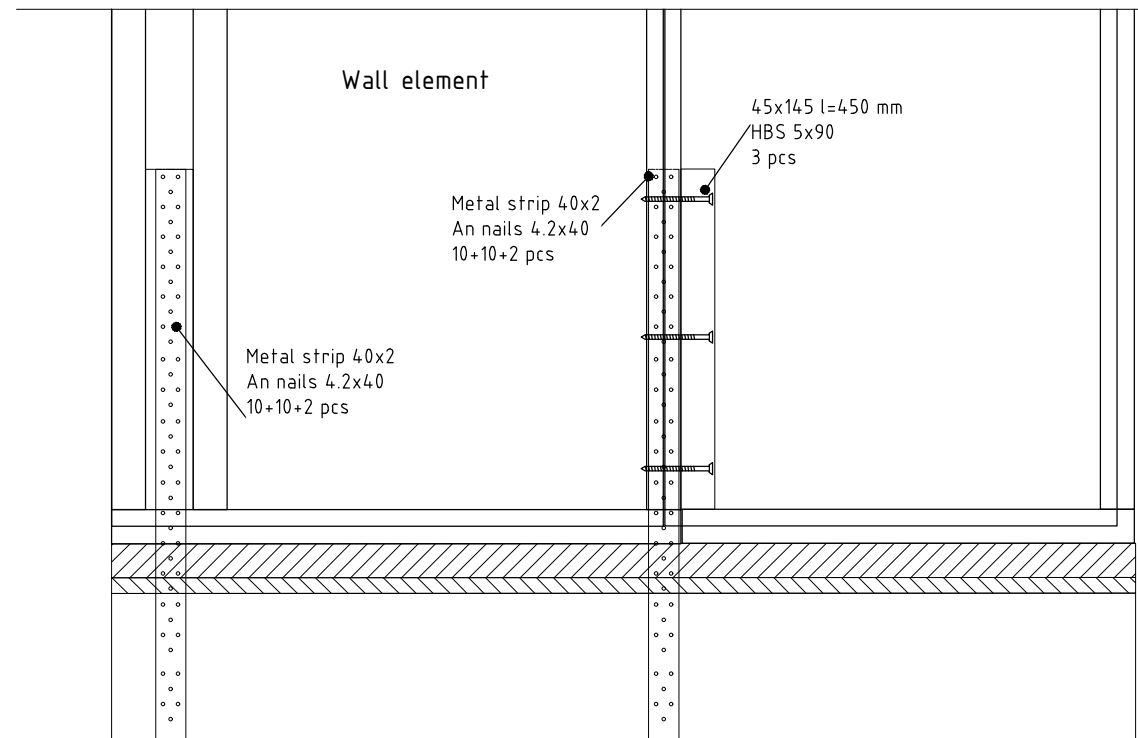

Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

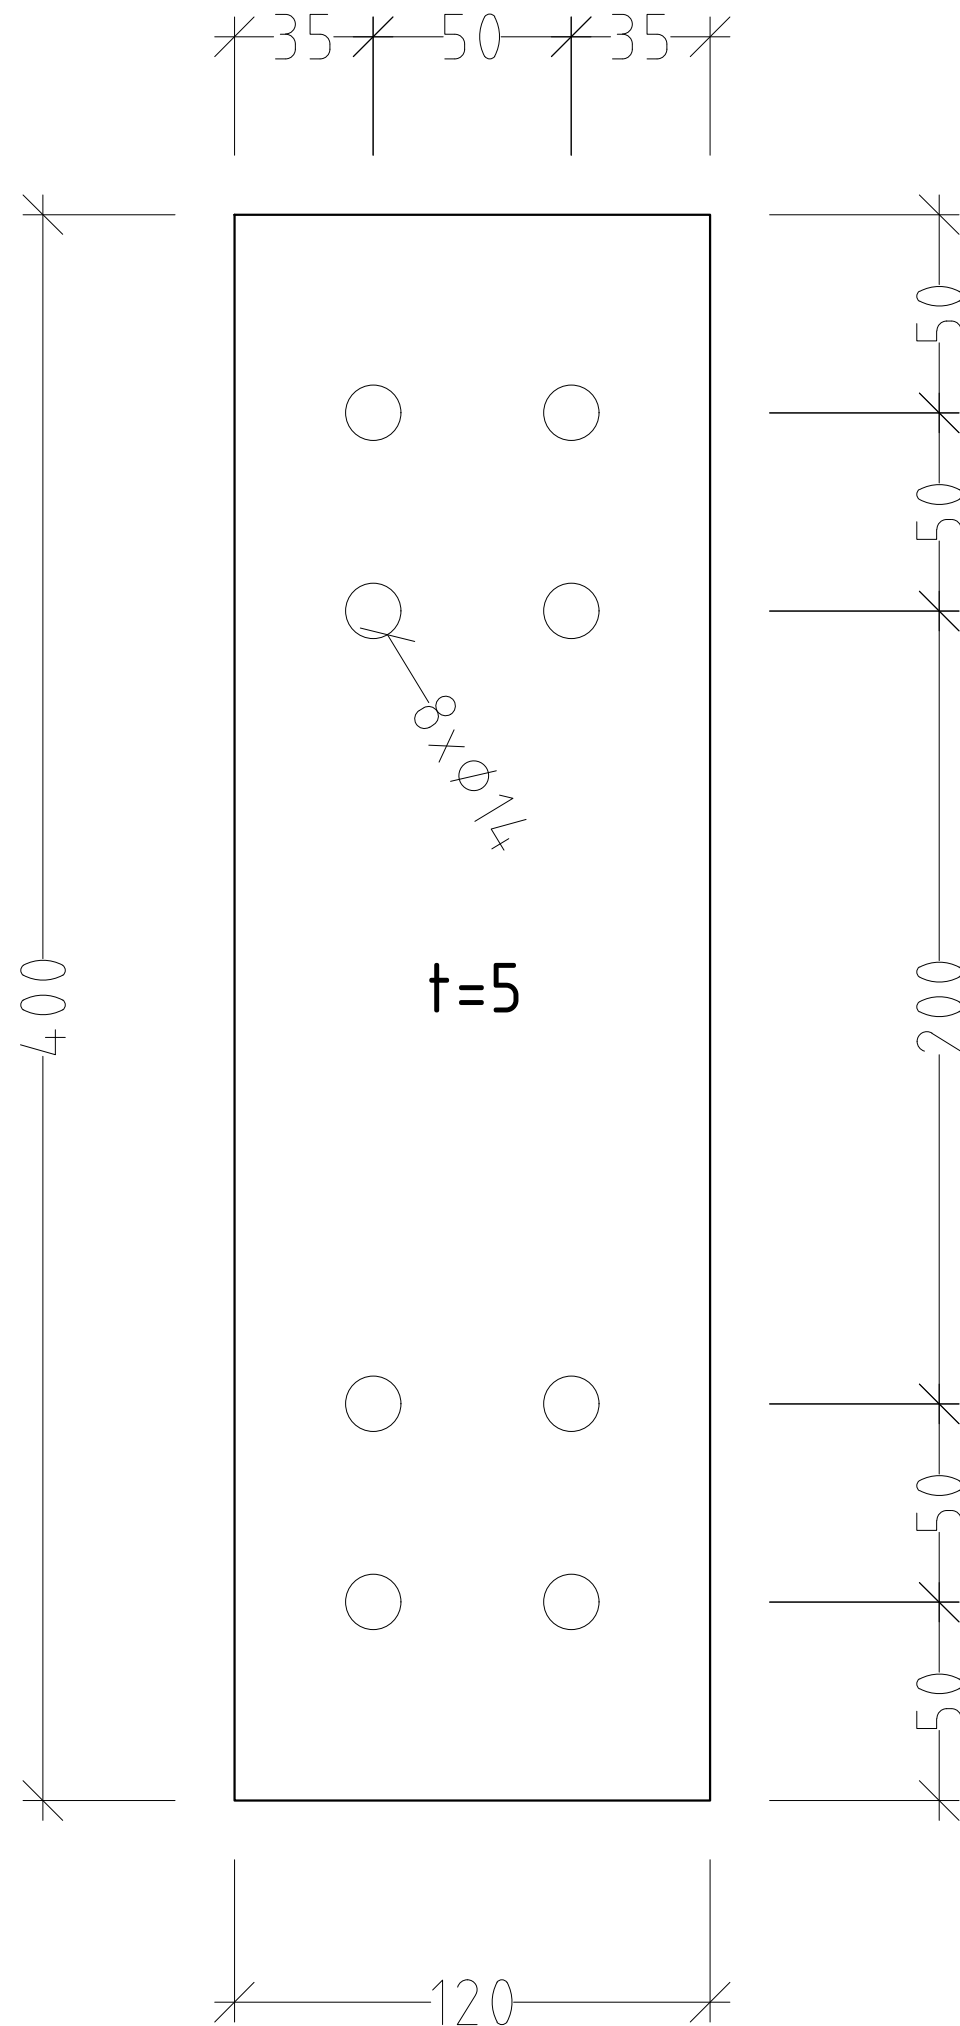

Metal plate MP1 120x400
4 tk
Hot galvanized

- Notes:
- Follow appropriate detail drawings to fasten elements.
 - Installation plans and fastening materials are recommended by factory and are not mandatory.
 - Factory is not responsible for this project statics and stability.