


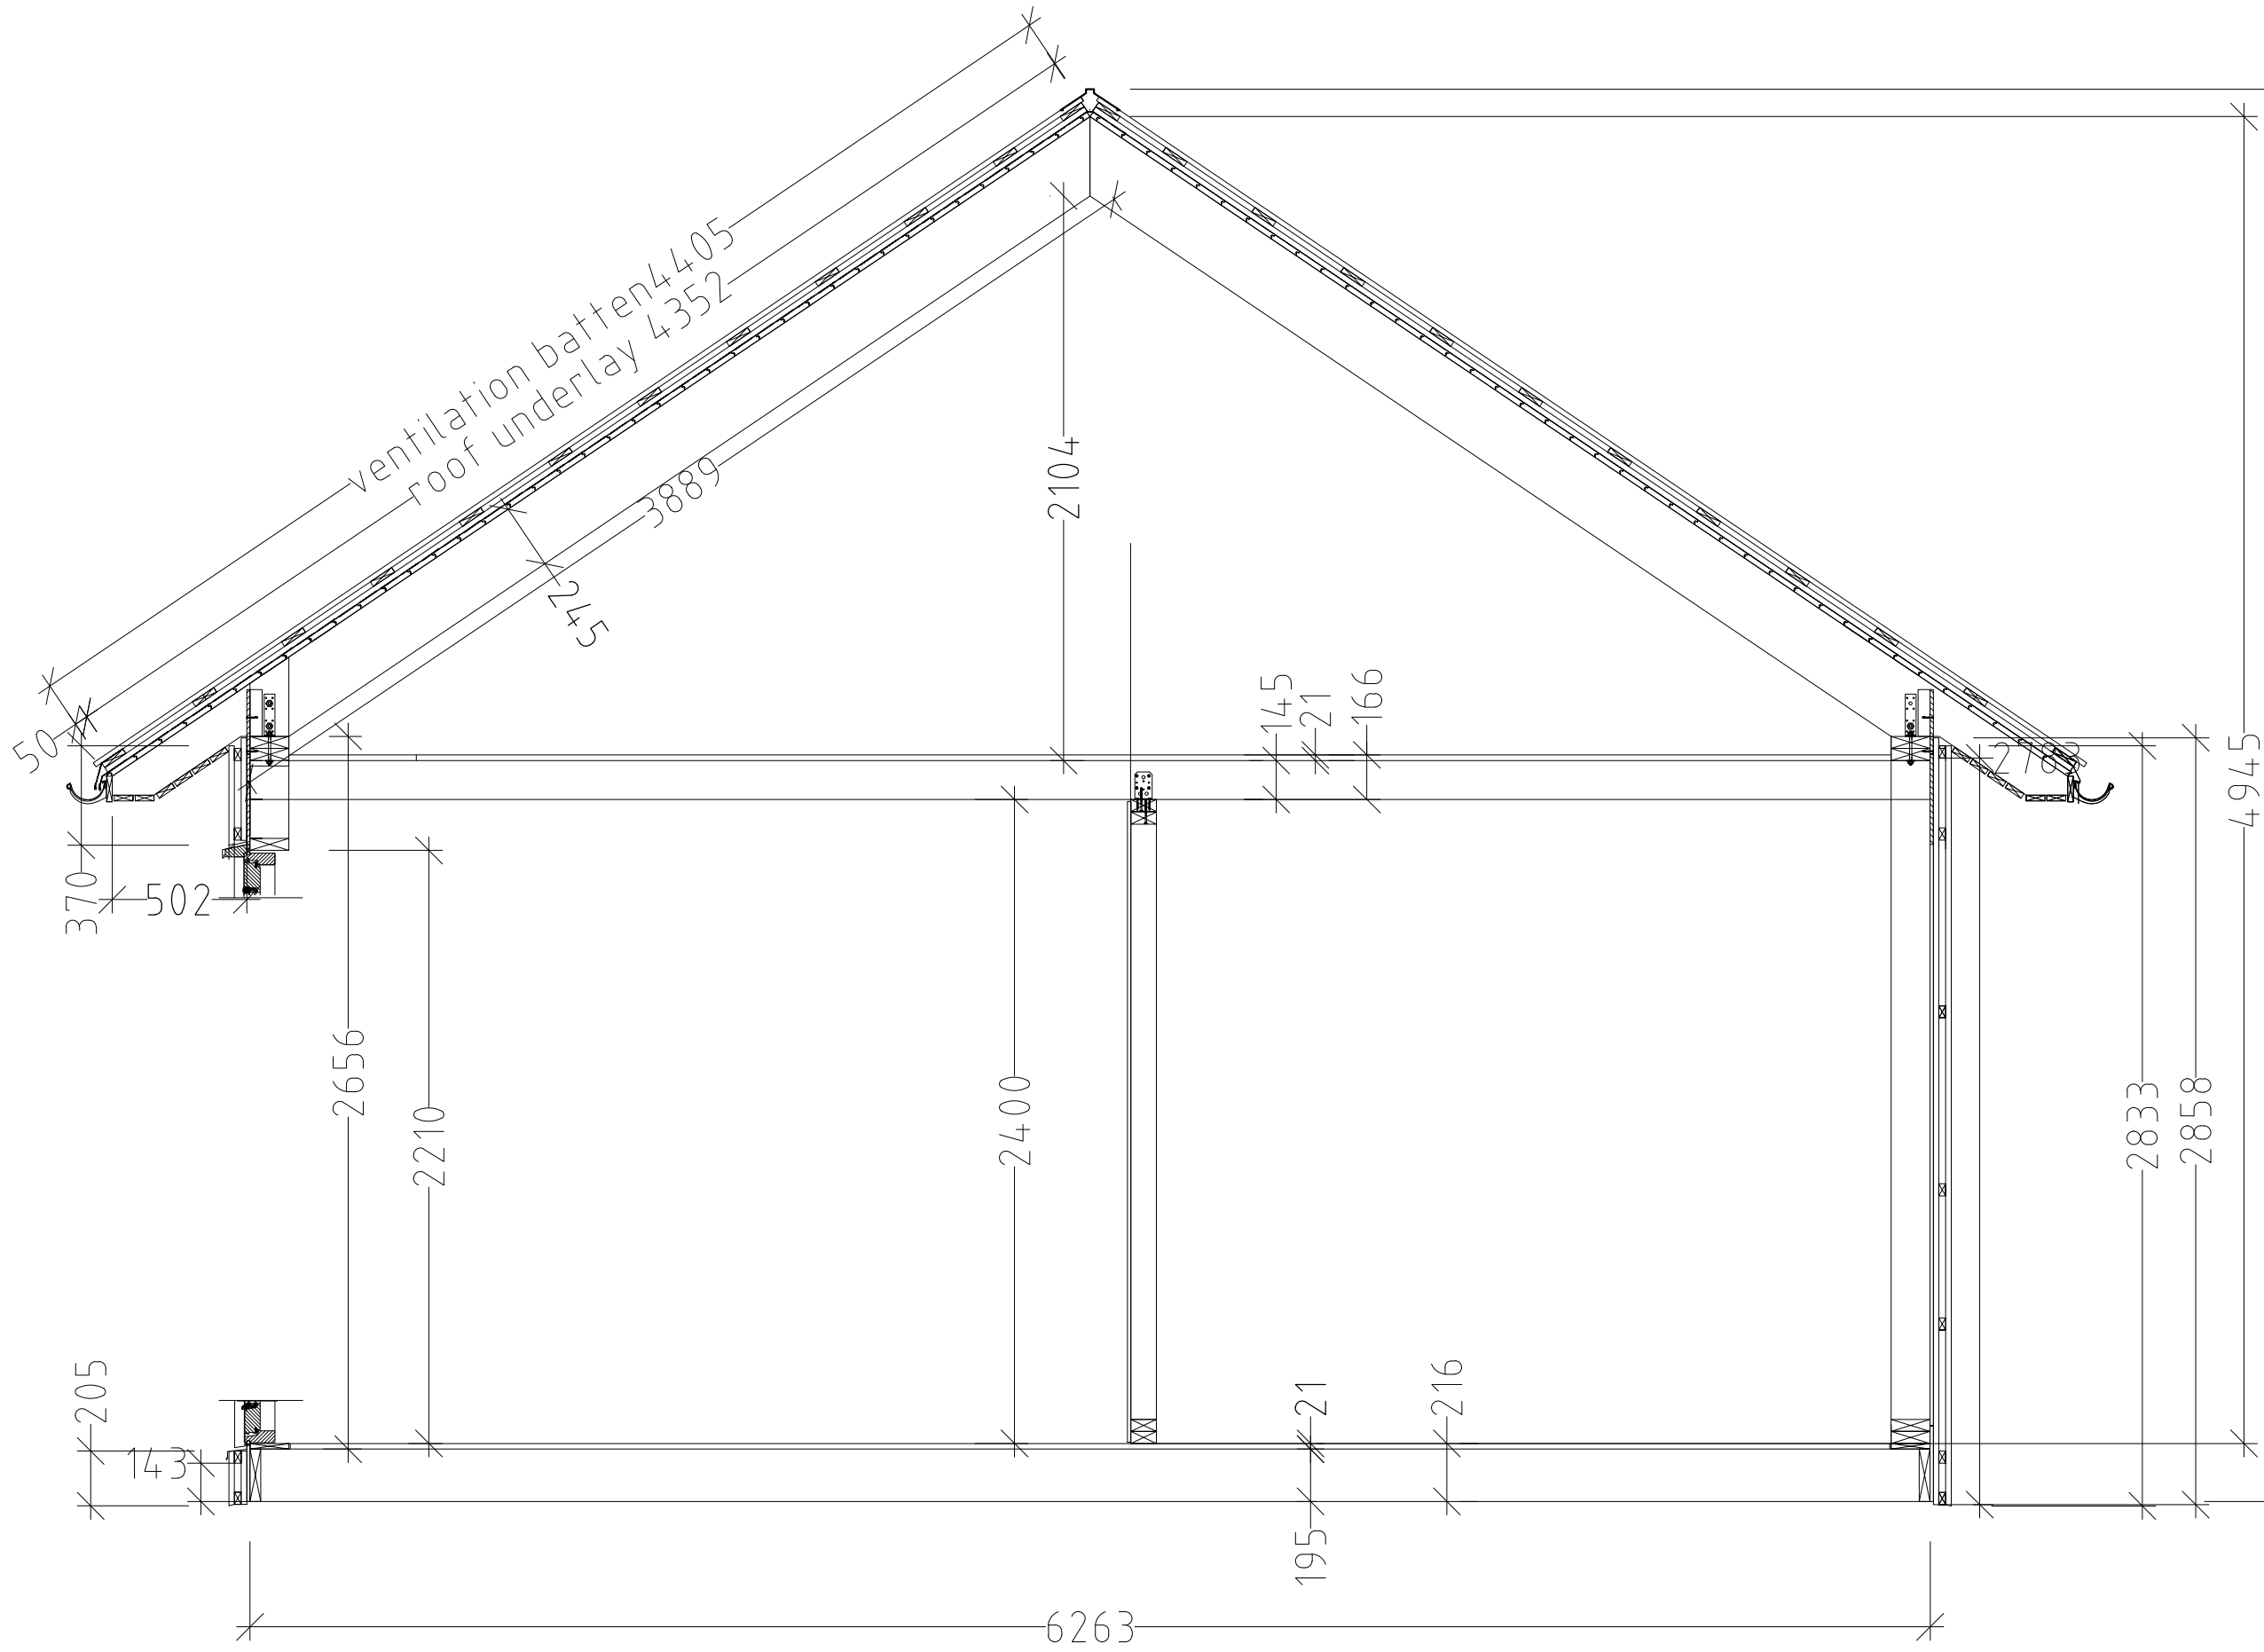




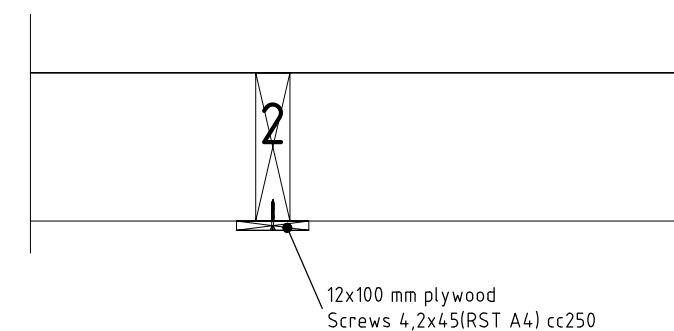


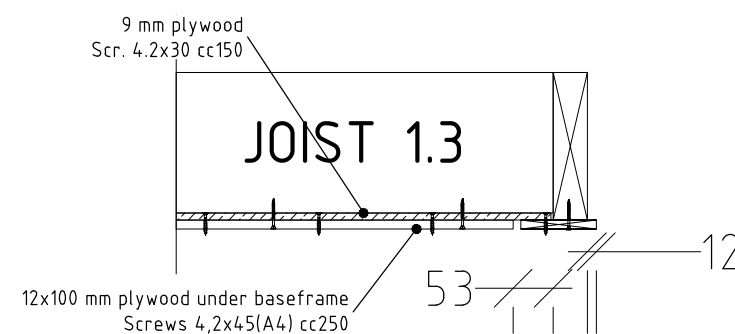

Floor beams 45x195




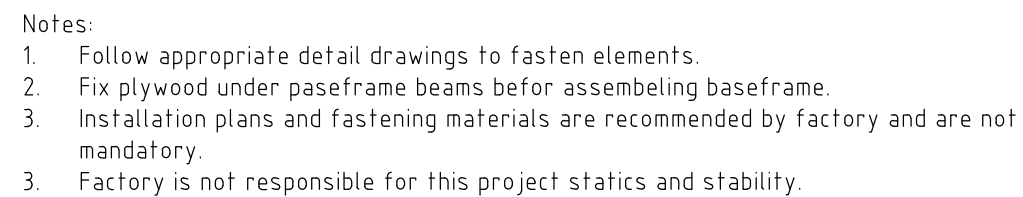


Install insulation (not included) before under wall boards

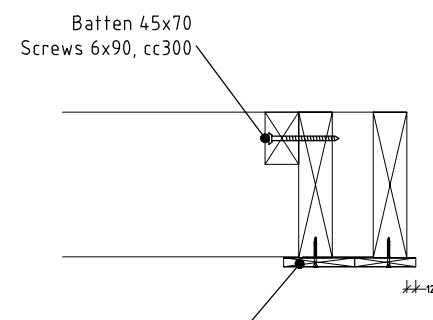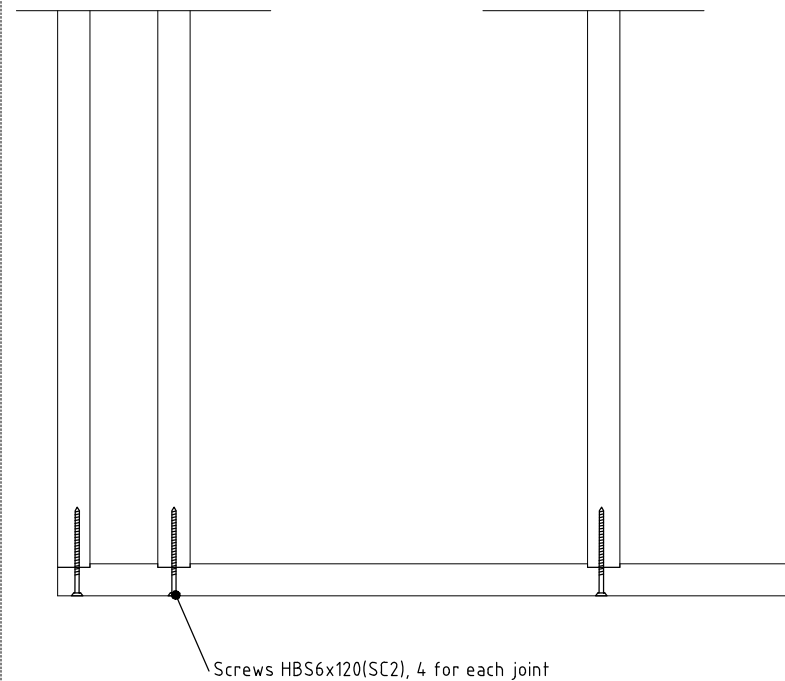
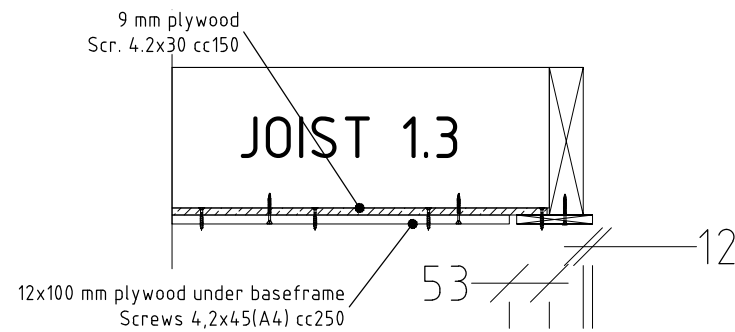


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

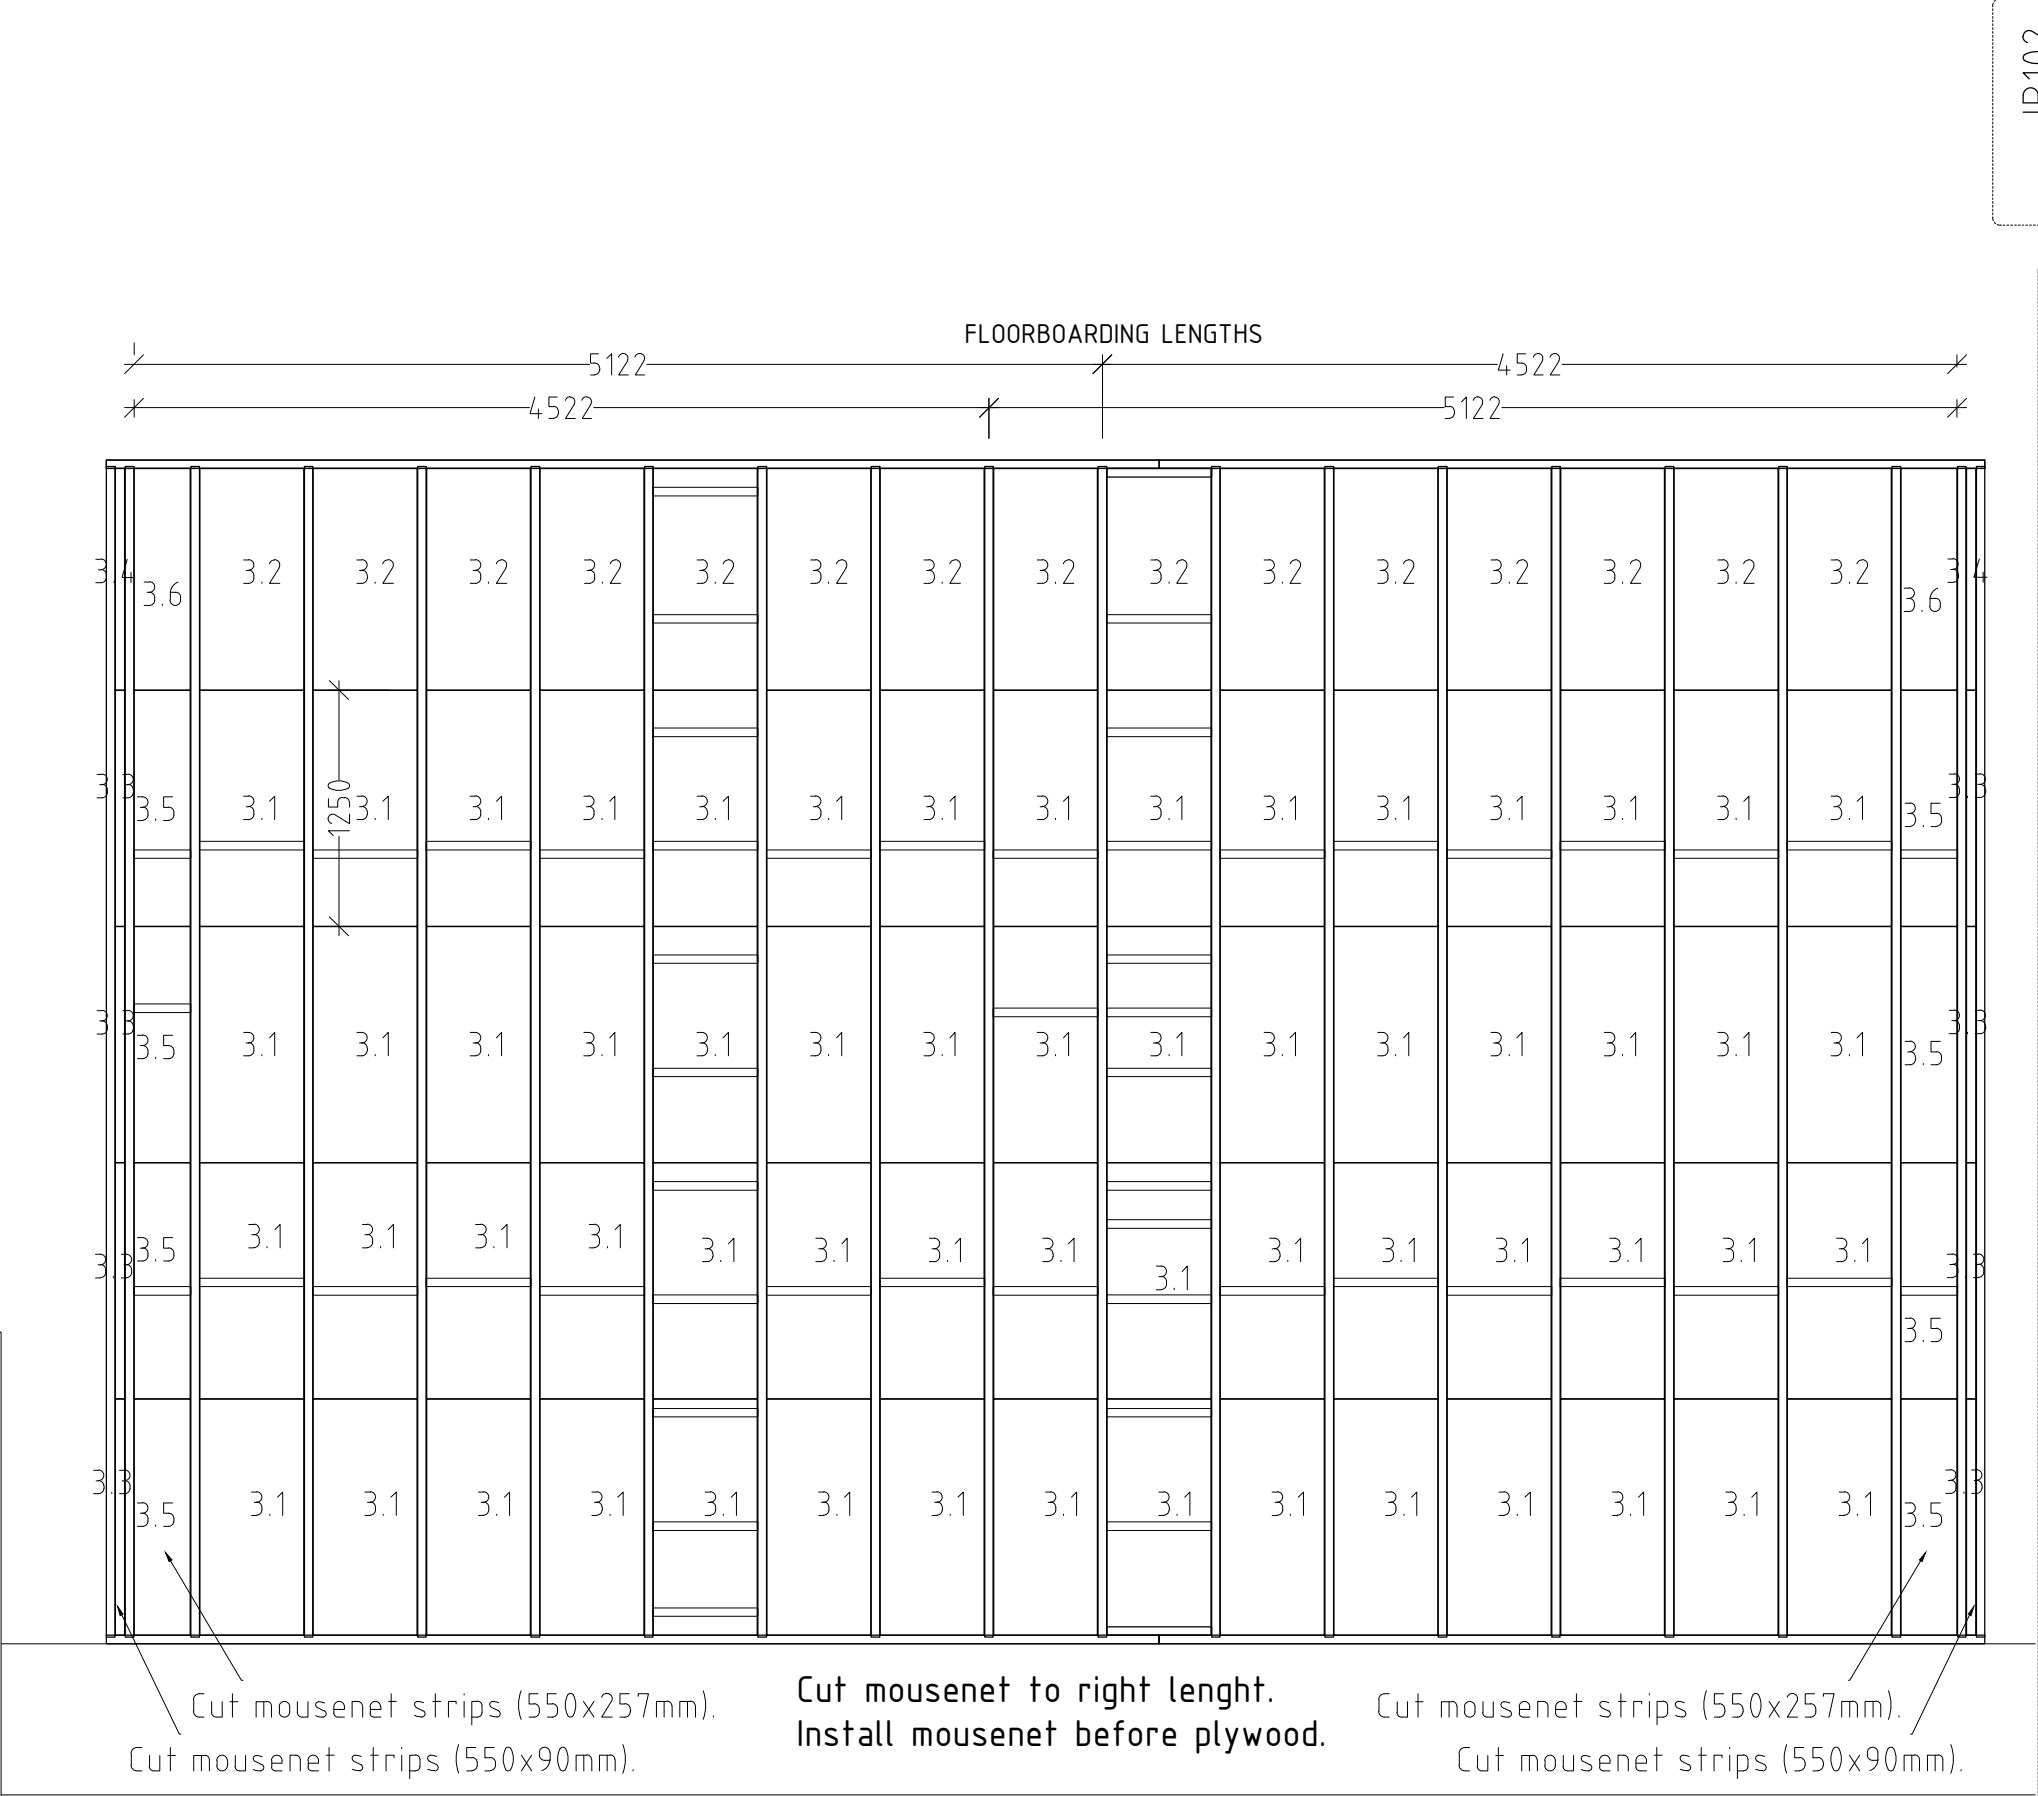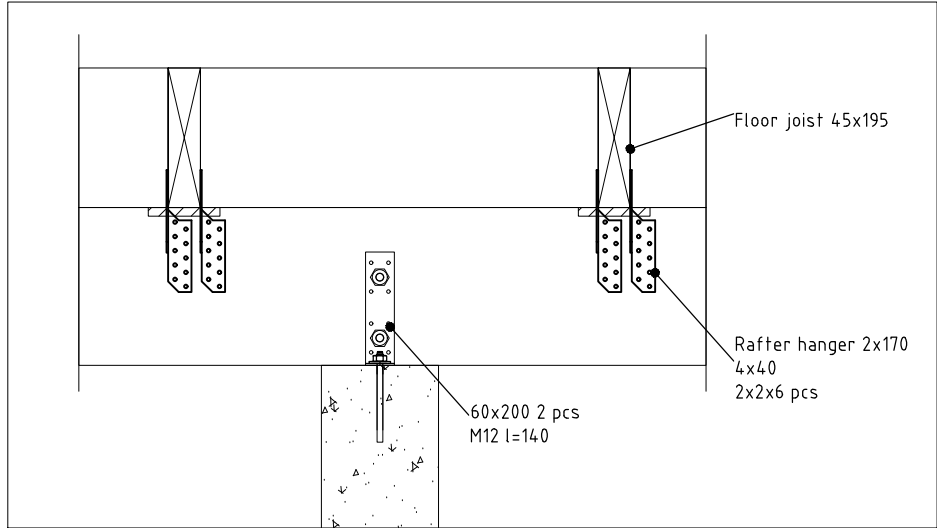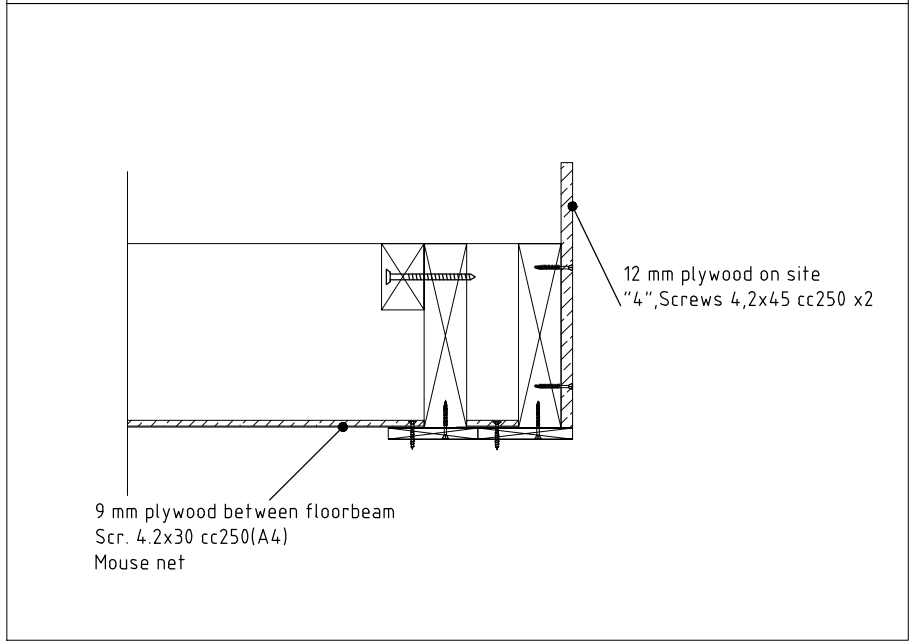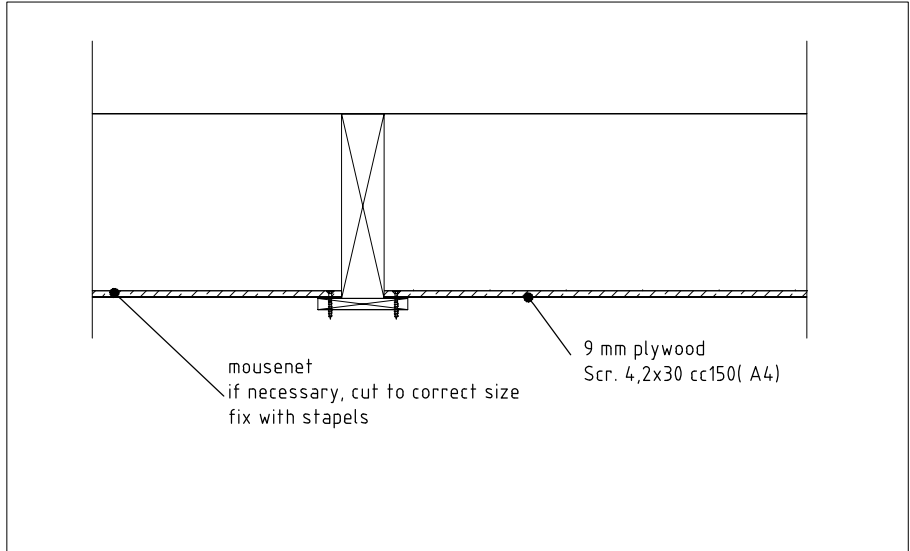




- Notes:
1. Follow appropriate detail drawings to assemble the elements.
 2. All dimensions are based on external surface of main timber frame.
 3. Installation plans and fastening materials are recommended by factory and are not mandatory.
 4. Factory is not responsible for this project statics and stability.

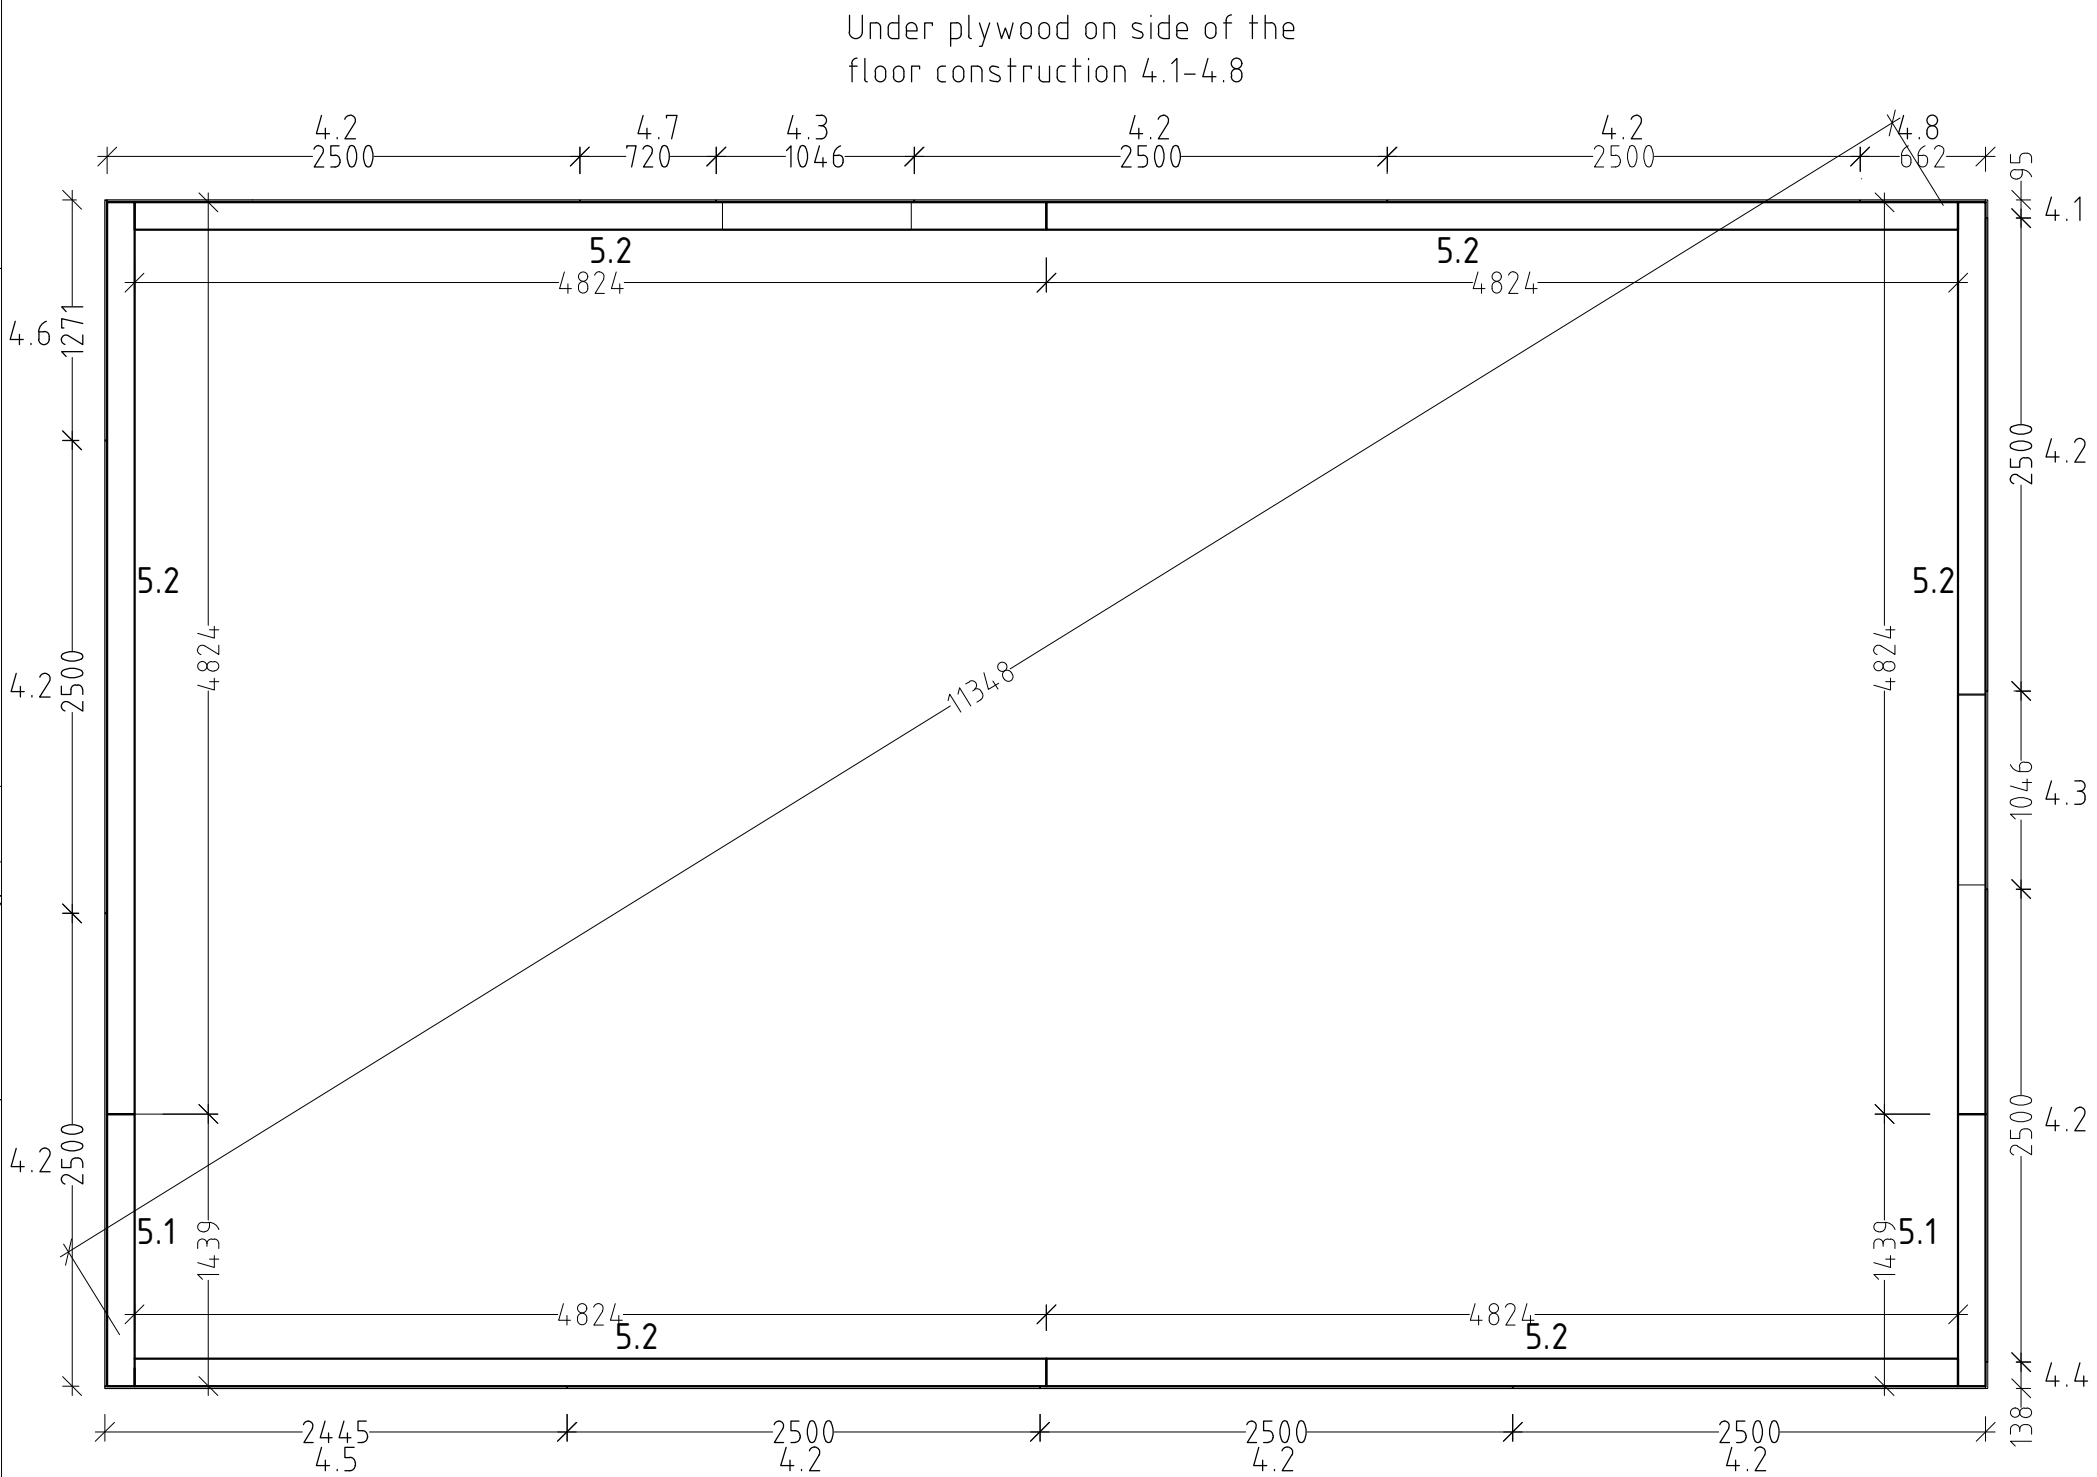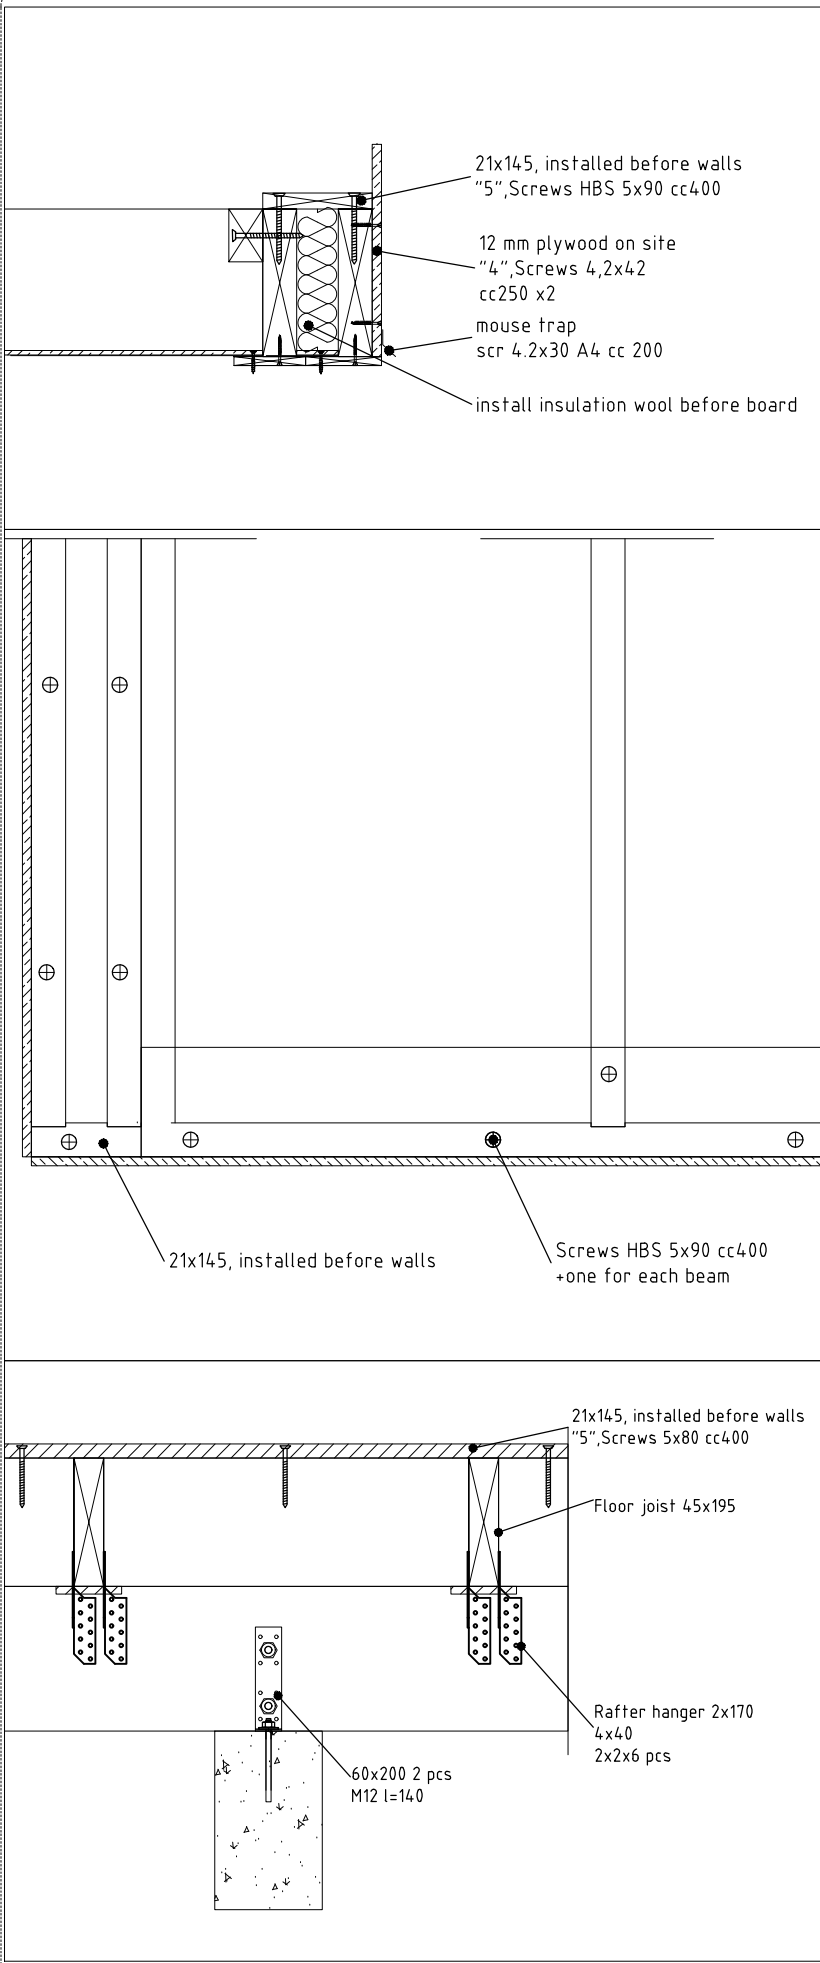

Under Wall floor board
21x145
5,1-5,2

- Notes:
1. Follow appropriate detail drawings to assemble the elements.
 2. All dimensions are based on external surface of main timber frame.
 3. Installation plans and fastening materials are recommended by factory and are not mandatory.
 4. Factory is not responsible for this project statics and stability.



Outside wall base belt 45x145

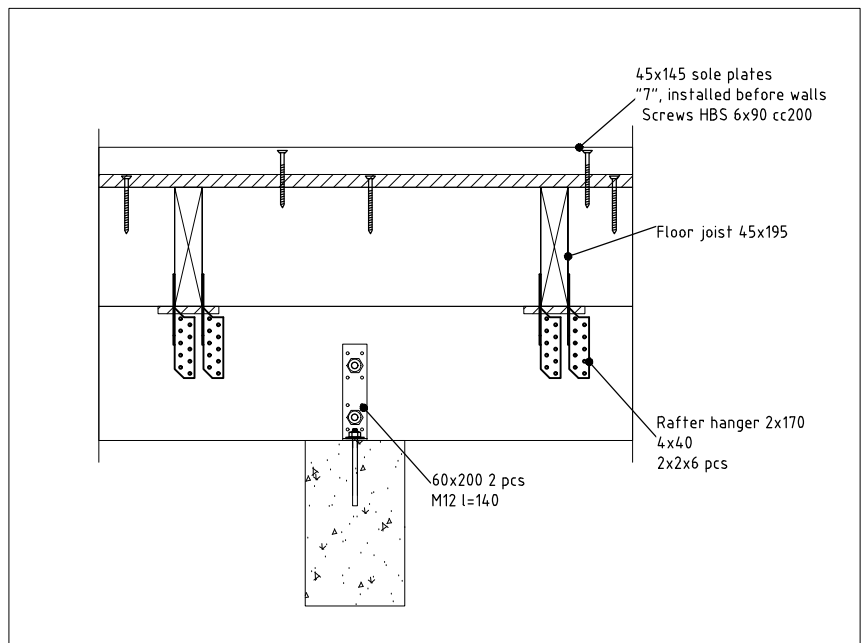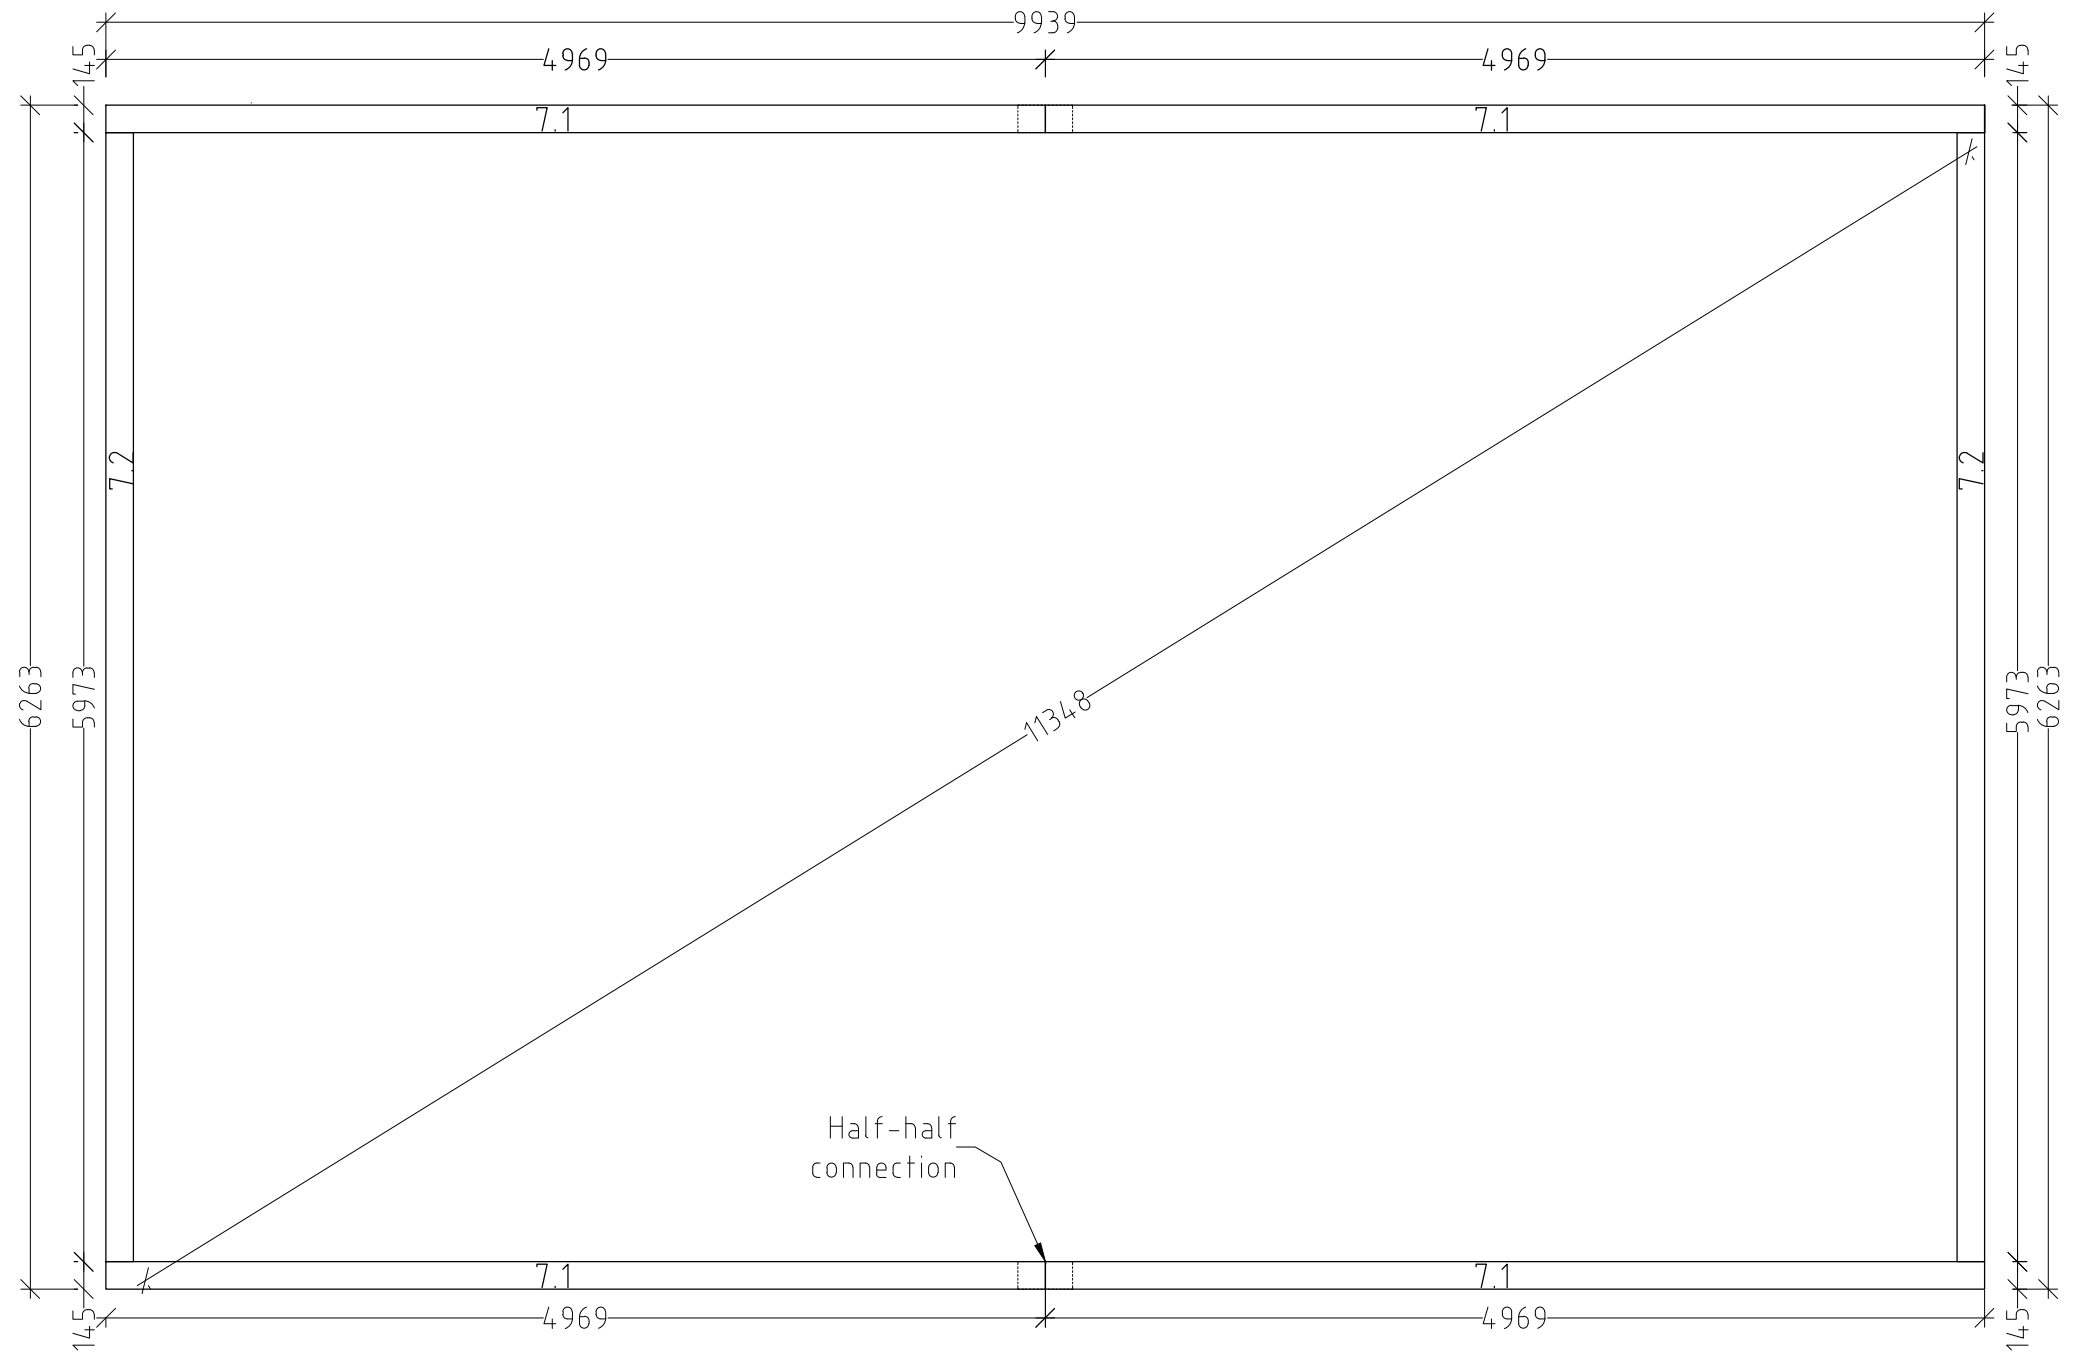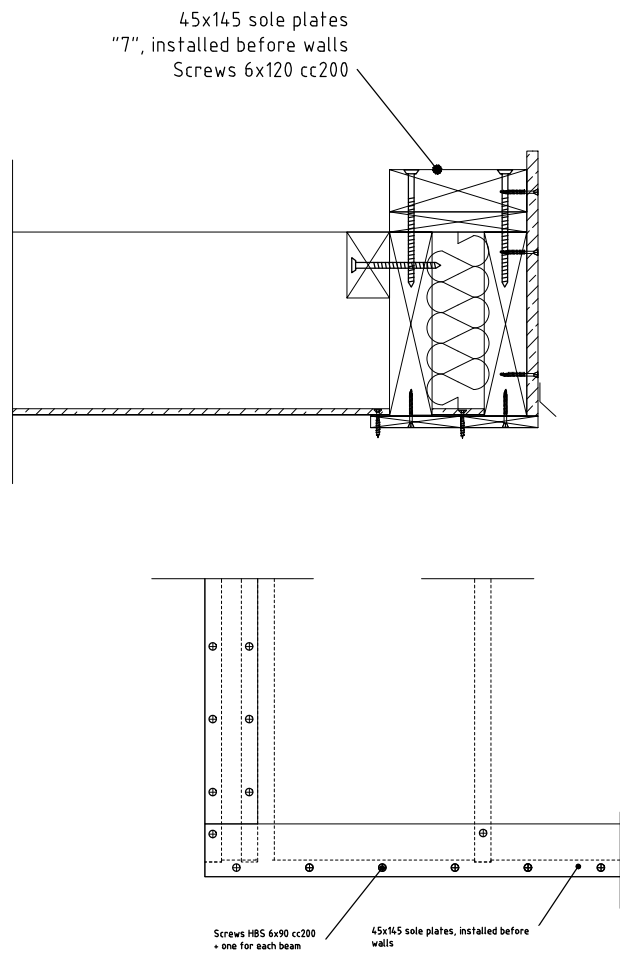

Notes:



1. Check base floor dimensions before installation of sole plate.
2. Follow appropriate detail drawings to fasten elements.
3. All external dimensions are based on external surface of main timber frame.
4. Installation plans and fastening materials are recommended by factory and are not mandatory.
5. Factory is not responsible for this project statics and stability.

External wall connection
with base frame

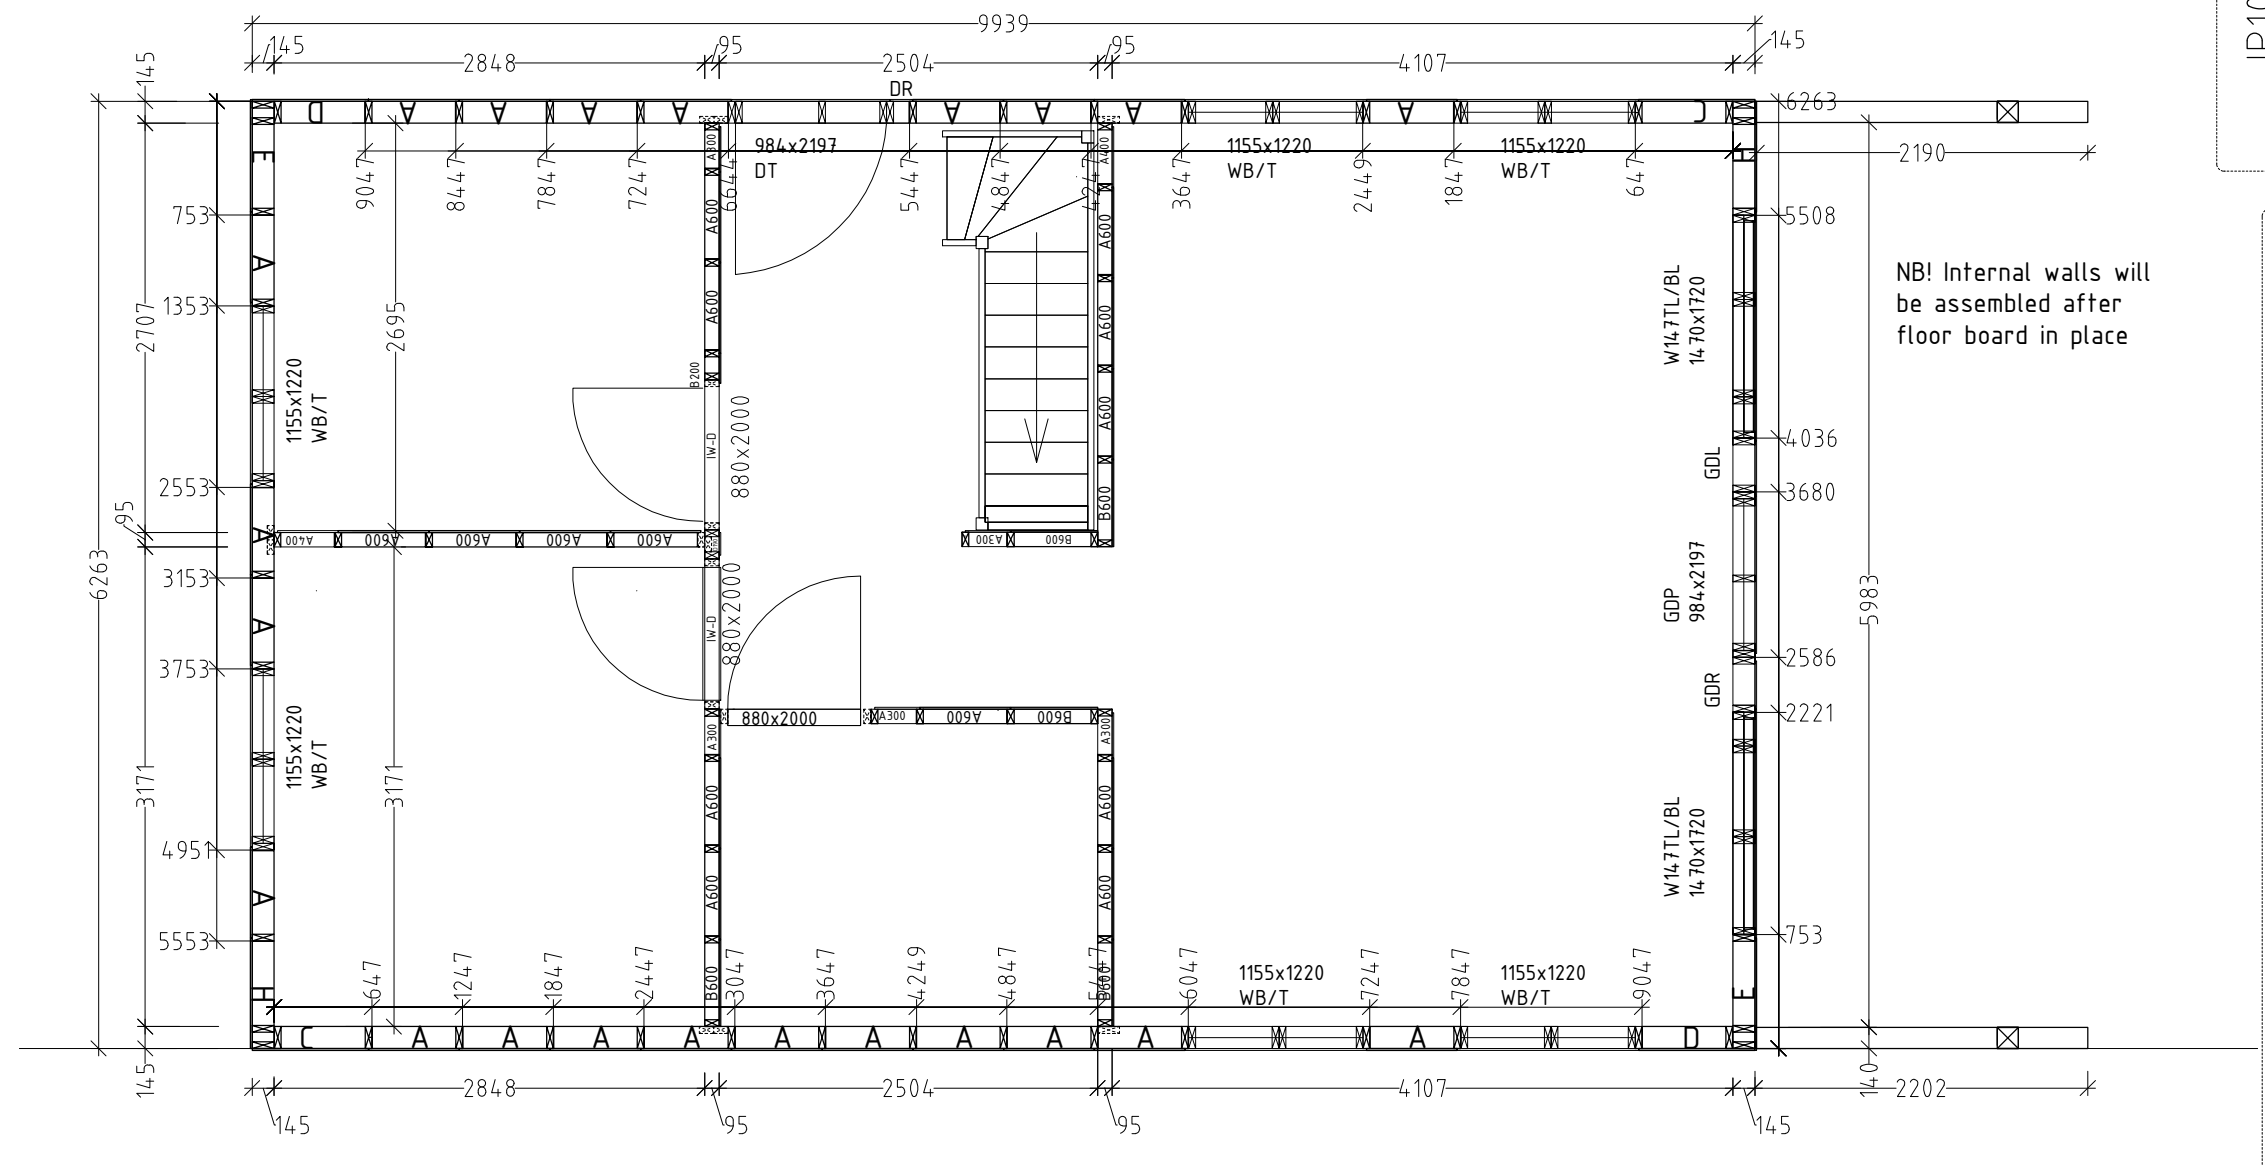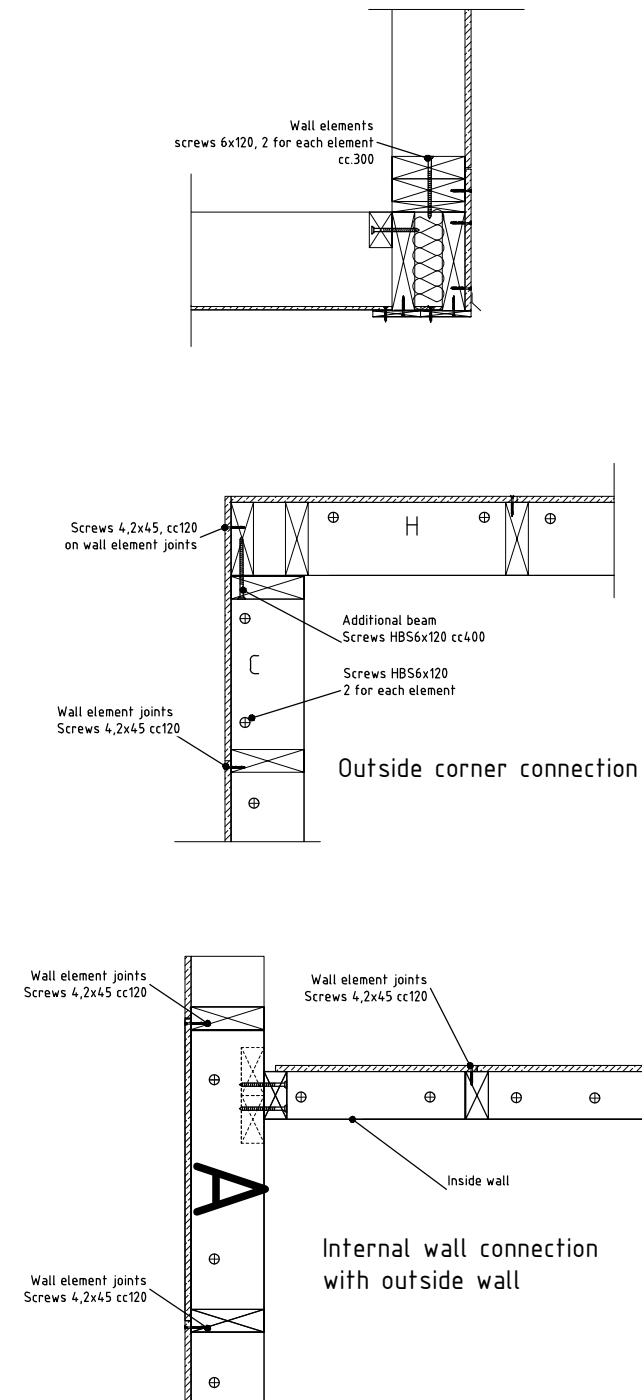



NB! Internal walls will
be assembled after
floor board in place

External wall connection
with base belt

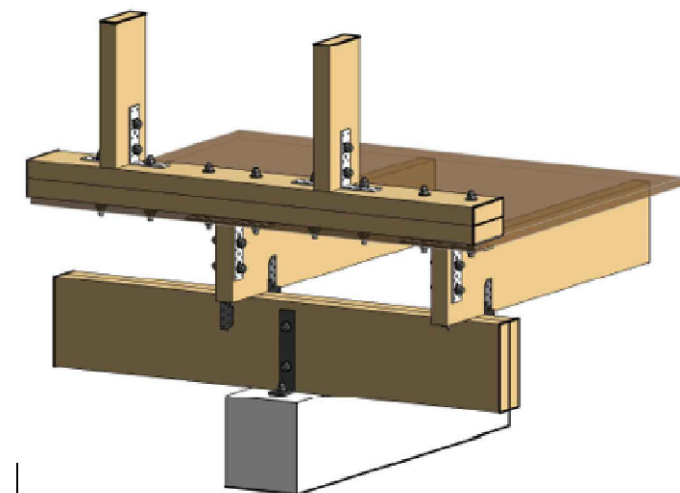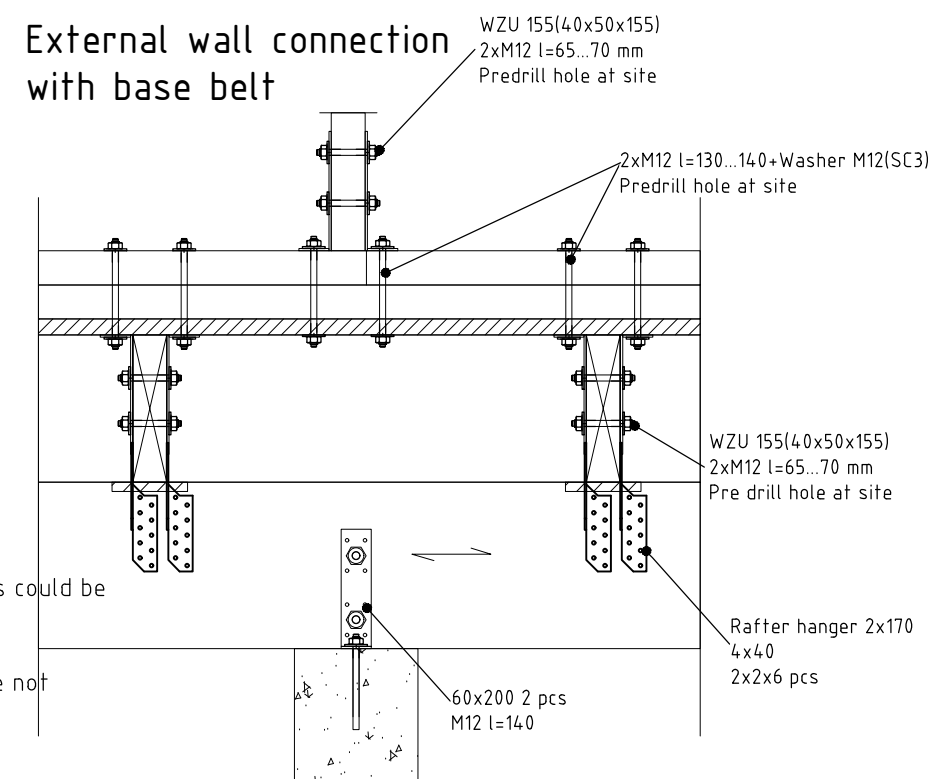


Notes:





- | | |
|--------|--|
| Notes: | <ol style="list-style-type: none"> 1. Follow appropriate detail drawings to fasten elements. 2. All external dimensions are based on external surface of main timber frame. 3. Follow given dimensions for installing elements. Gap between element plywoods could be 1-2 mm. 4. Cover element joints with tape. 5. Installation plans and fastening materials are recommended by factory and are not mandatory. 6. Factory is not responsible for this project statics and stability. |
|--------|--|

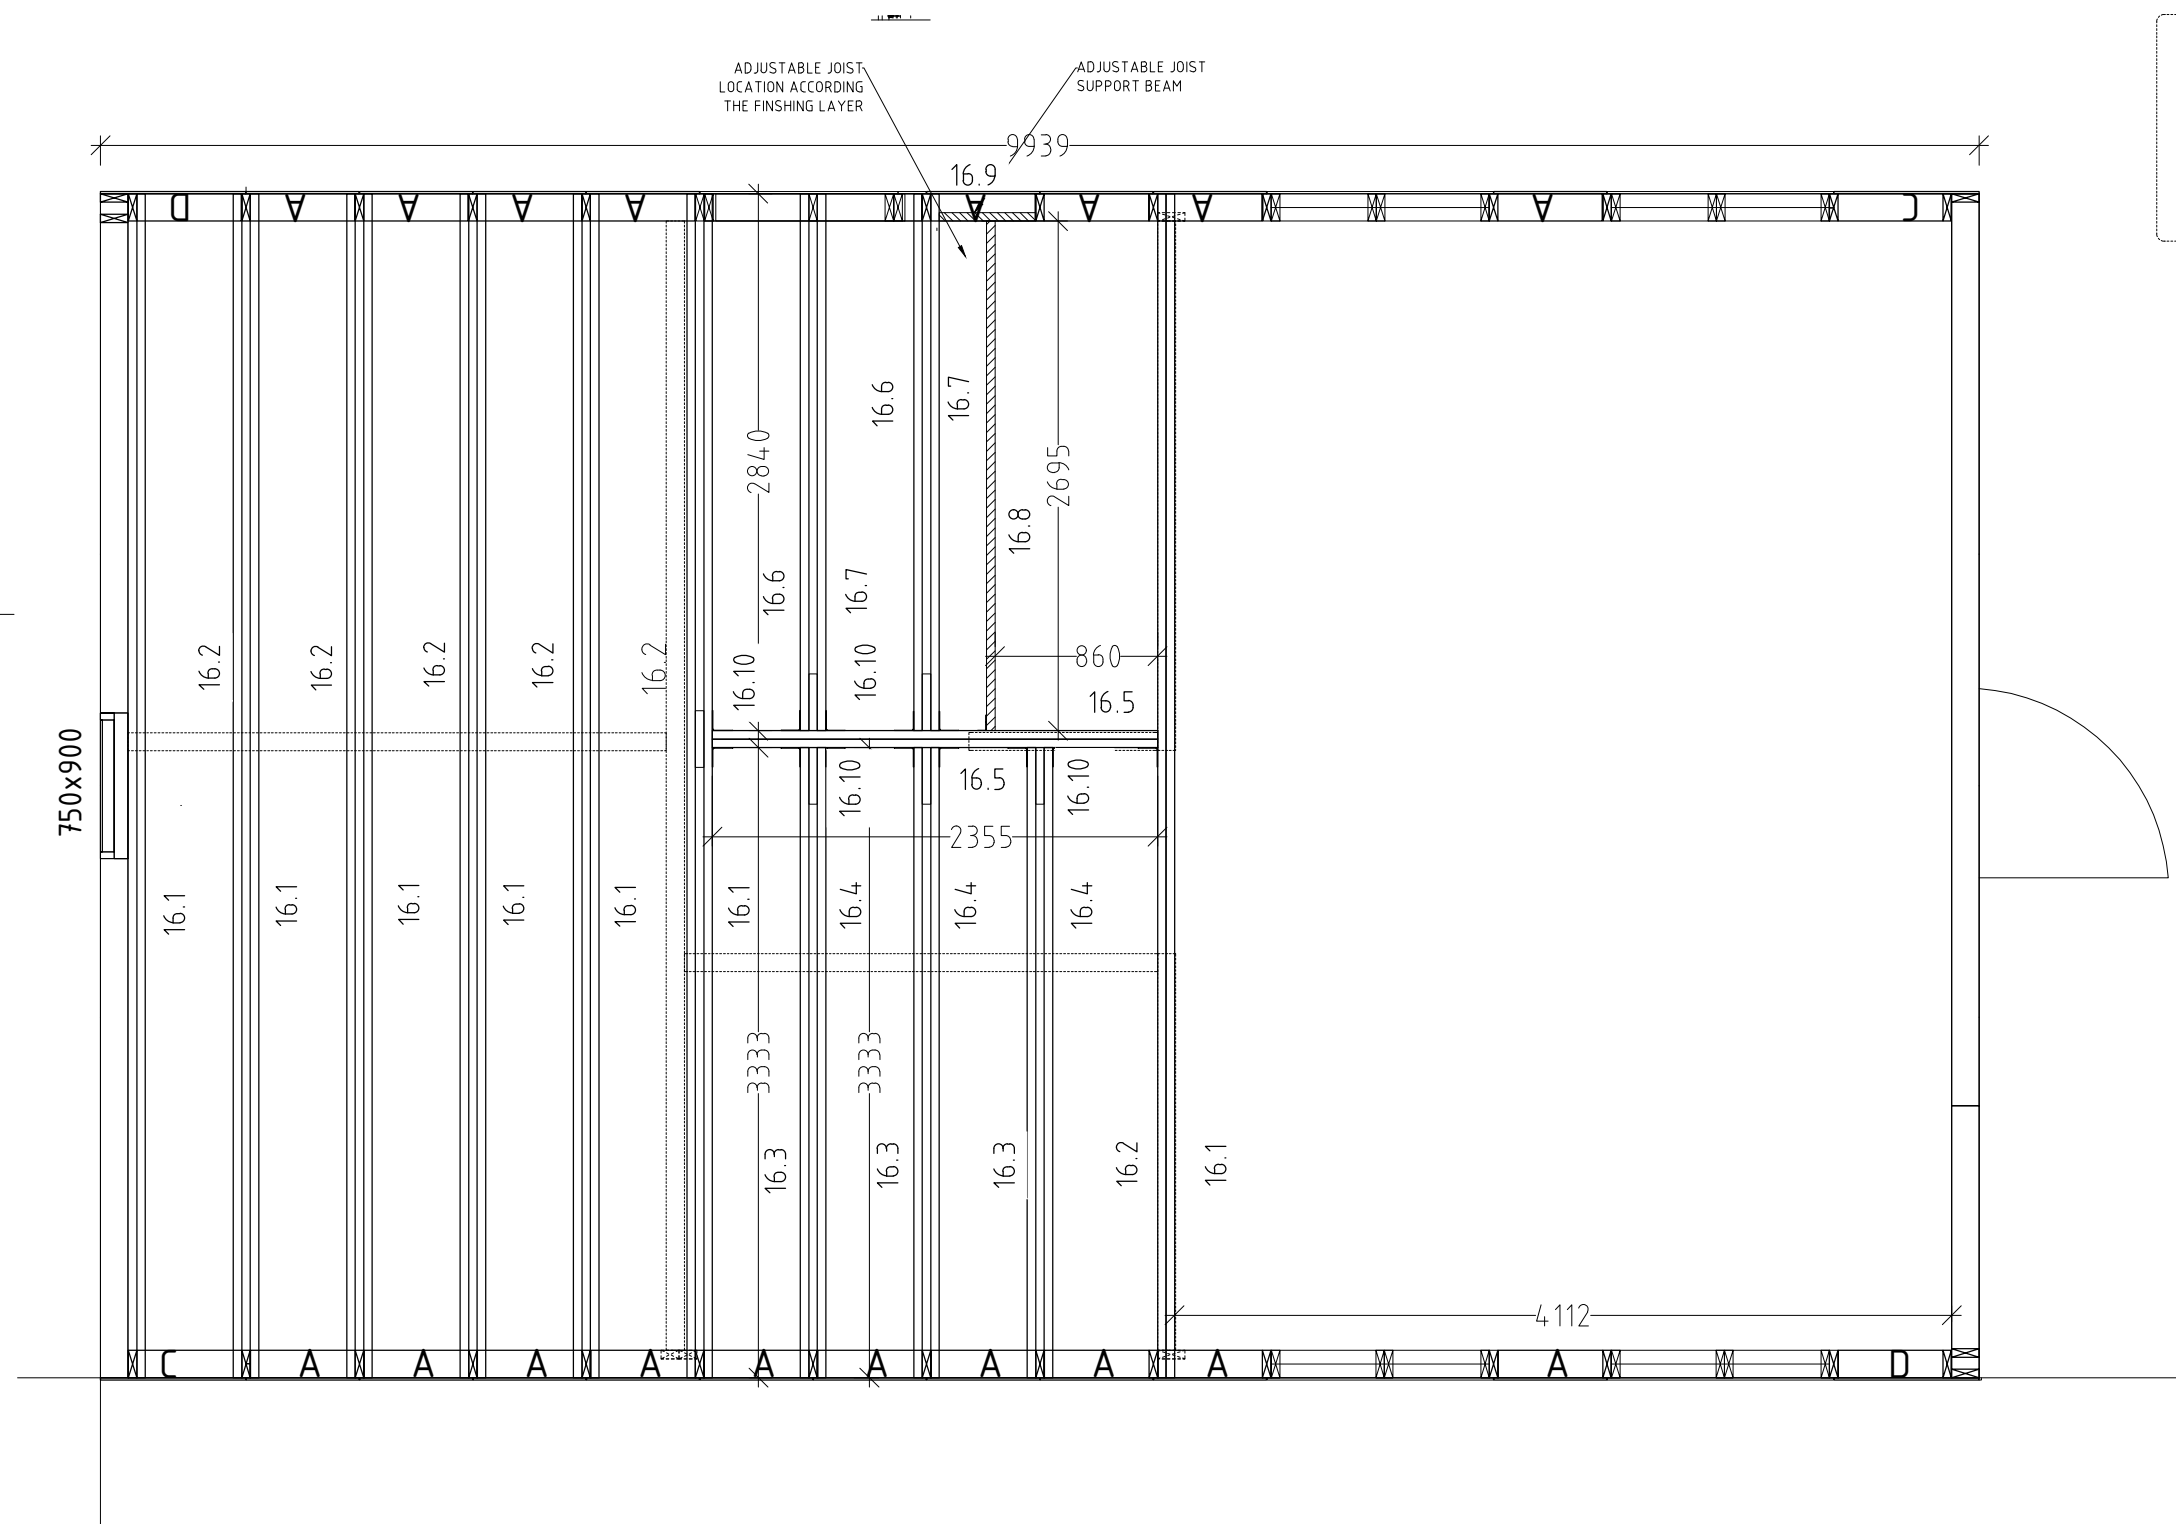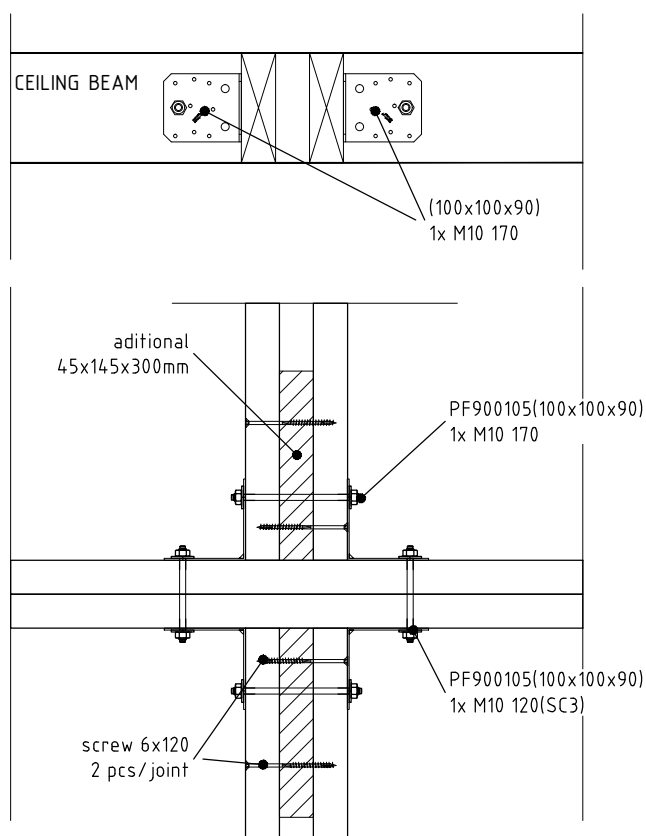

NB!
Ceiling beams must be temporary supported until internal walls are in place


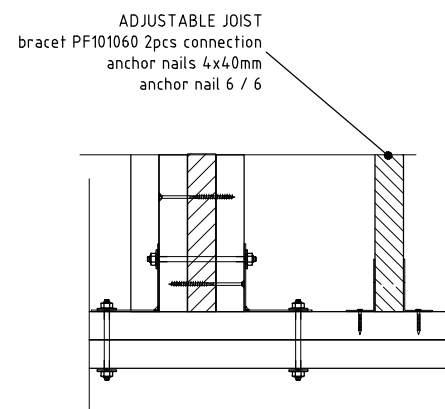


1. Follow appropriate detail drawings to fasten the elements.
2. Dimensions are based on external perimeter of main timber frame.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

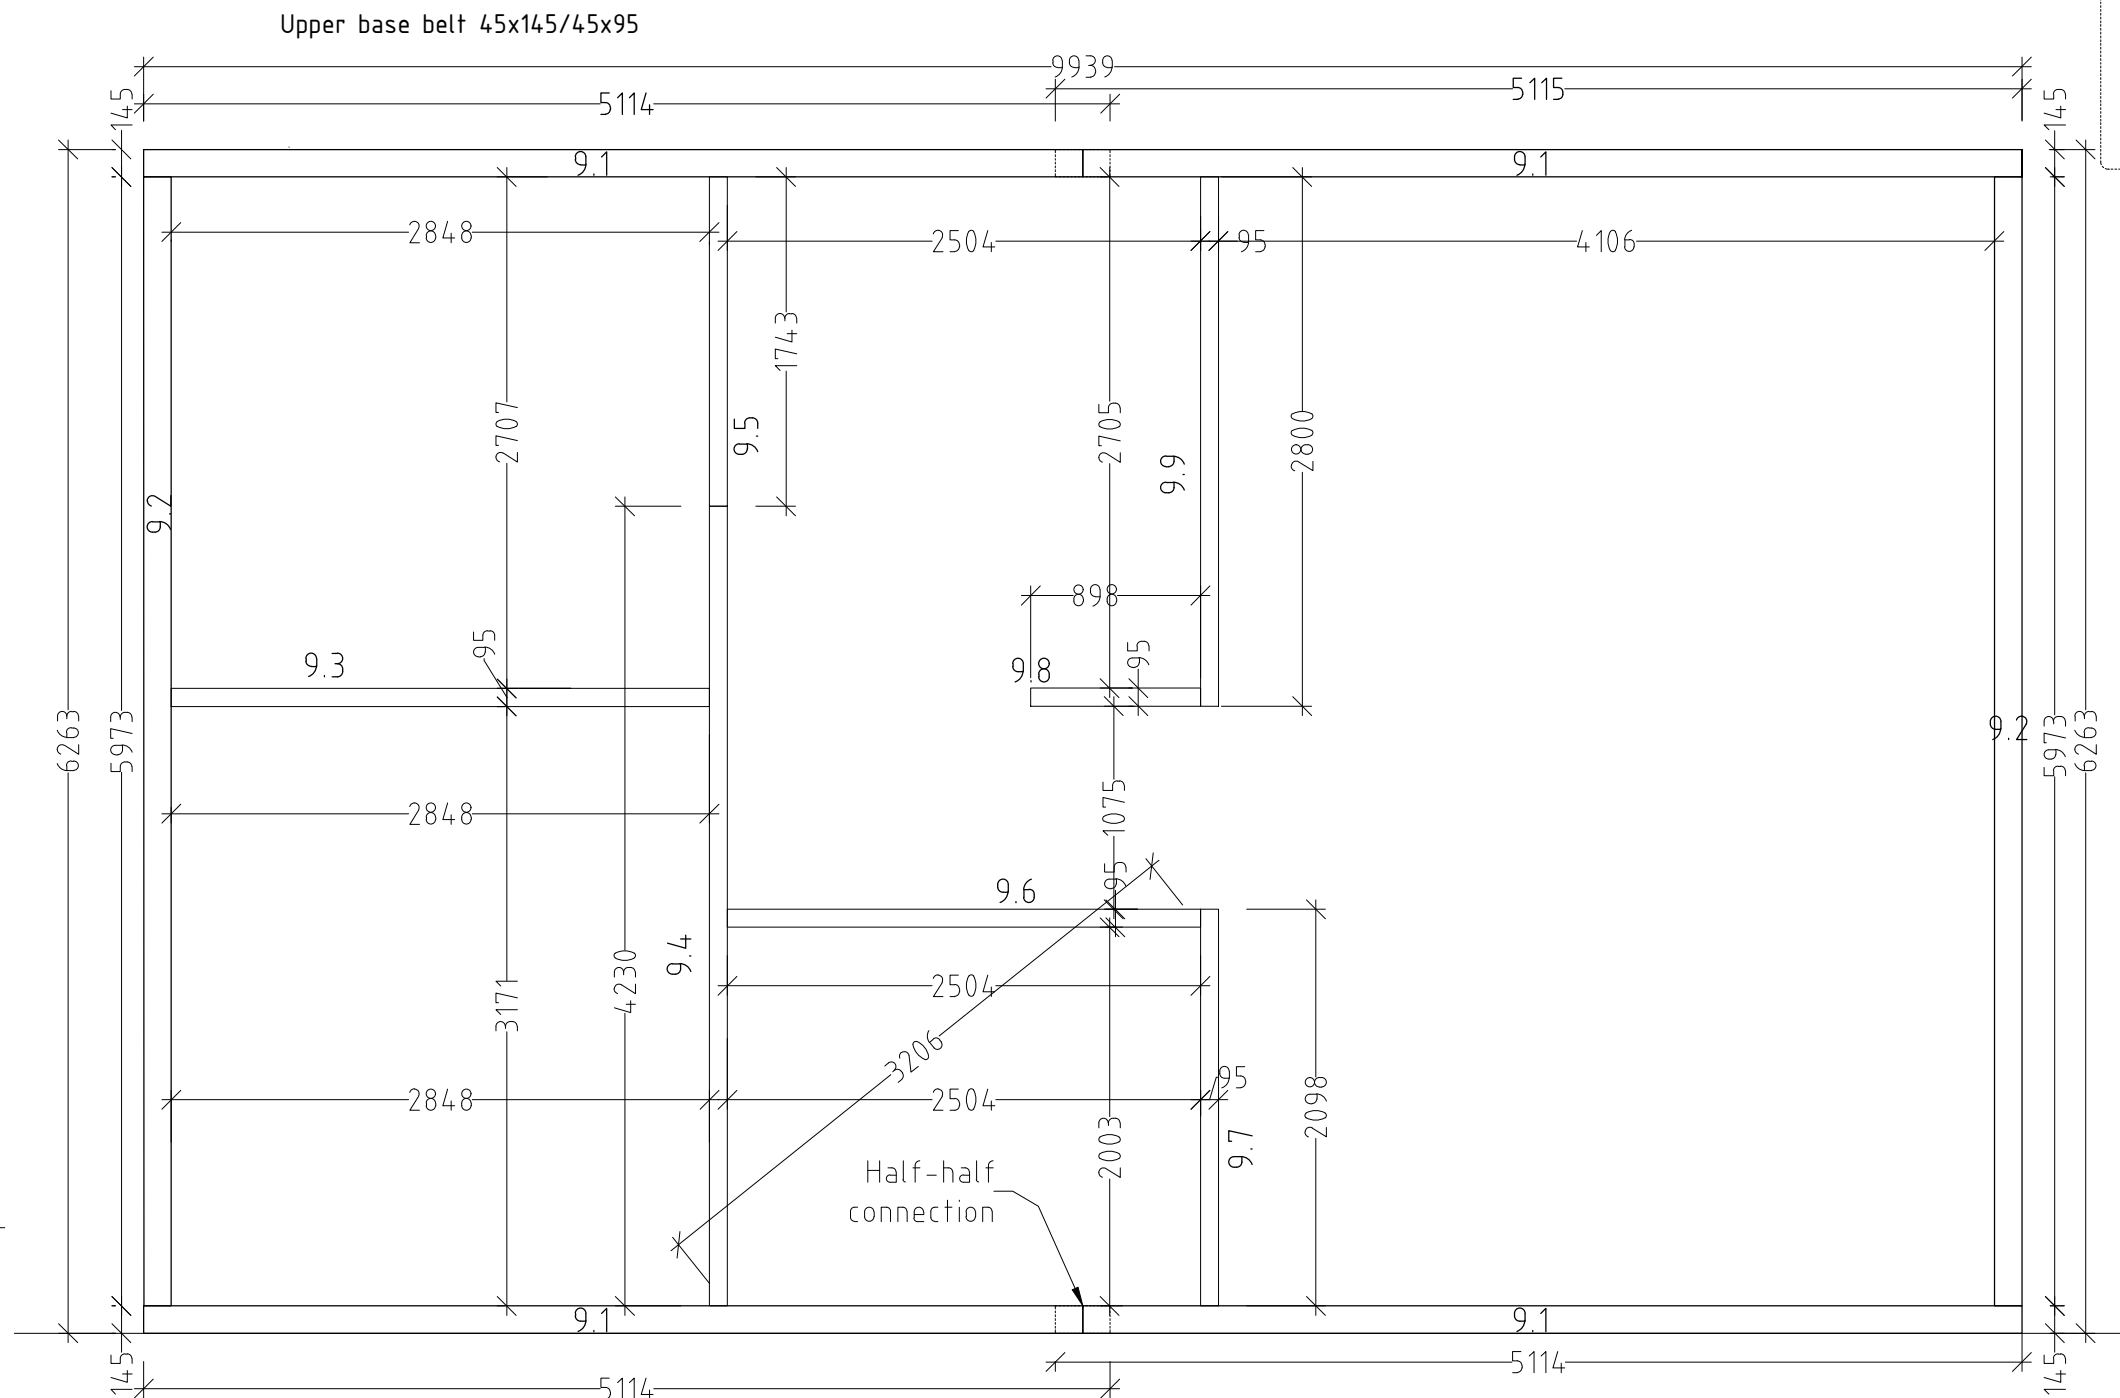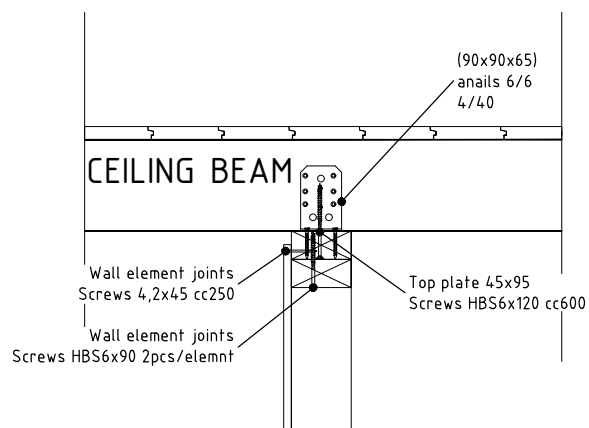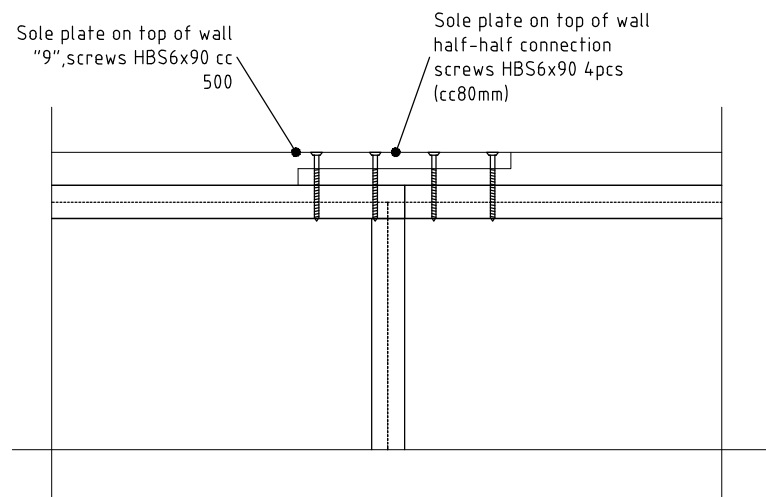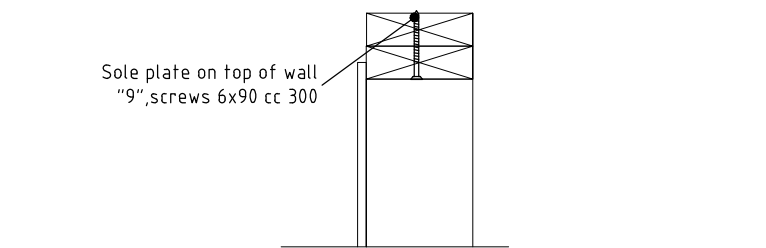








Notes:

1. External dimensions are based on external surface of main timber frame
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

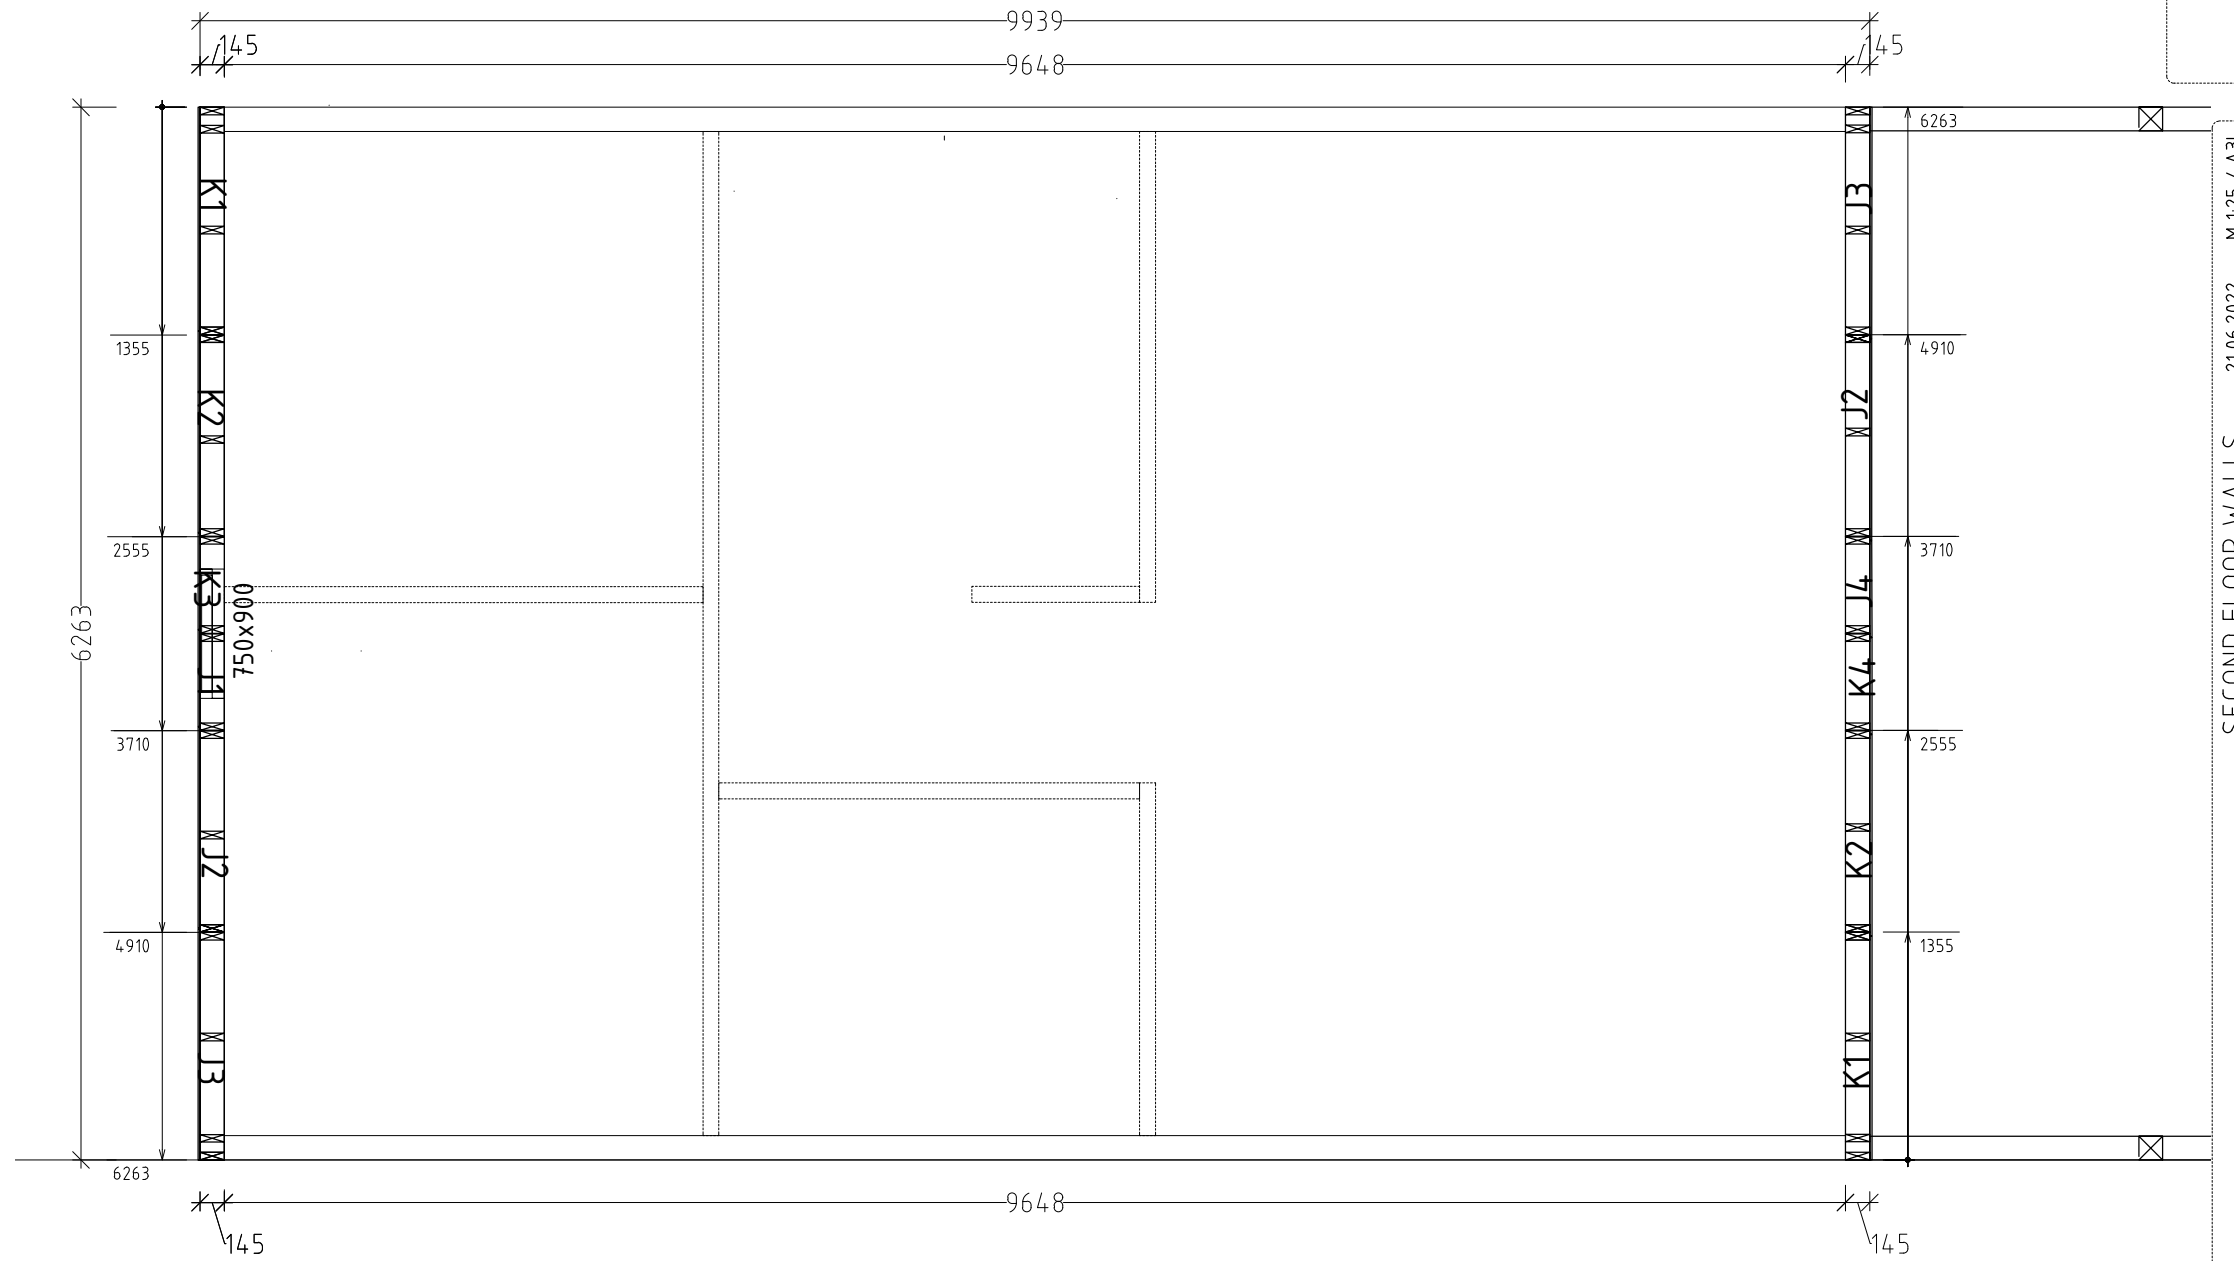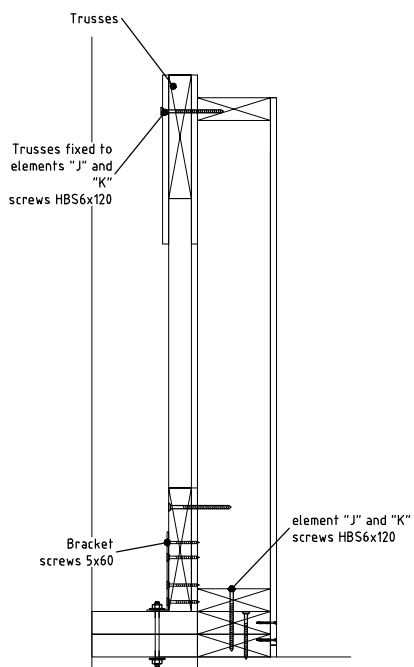

Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

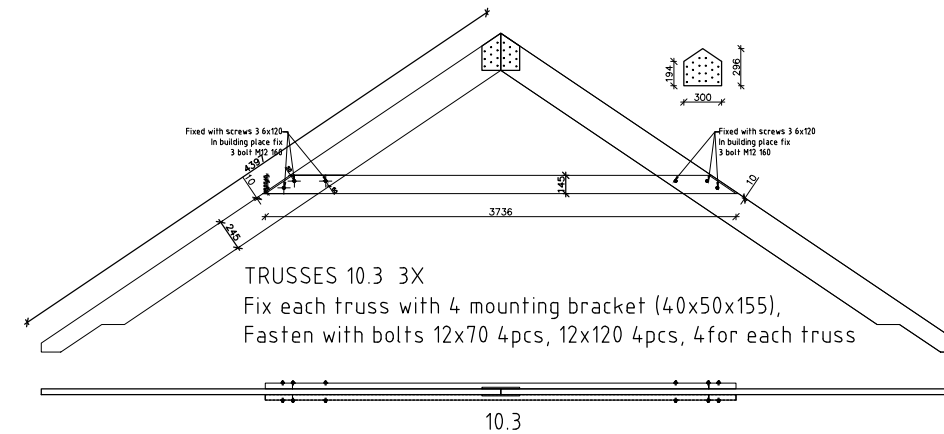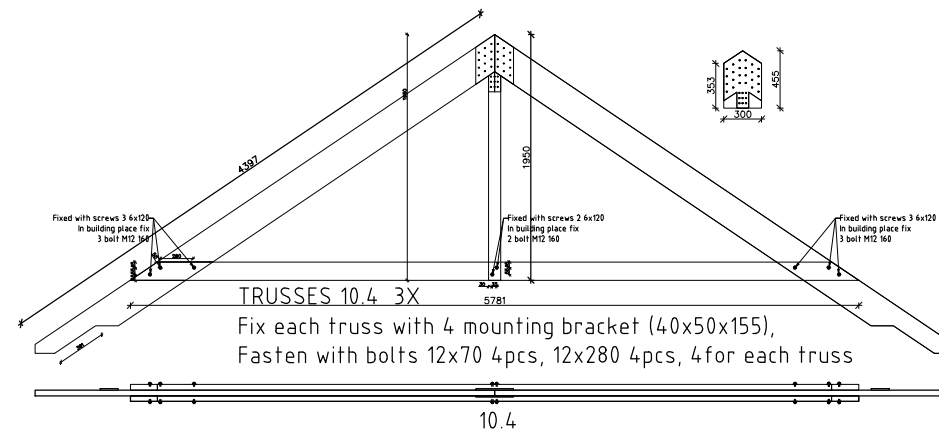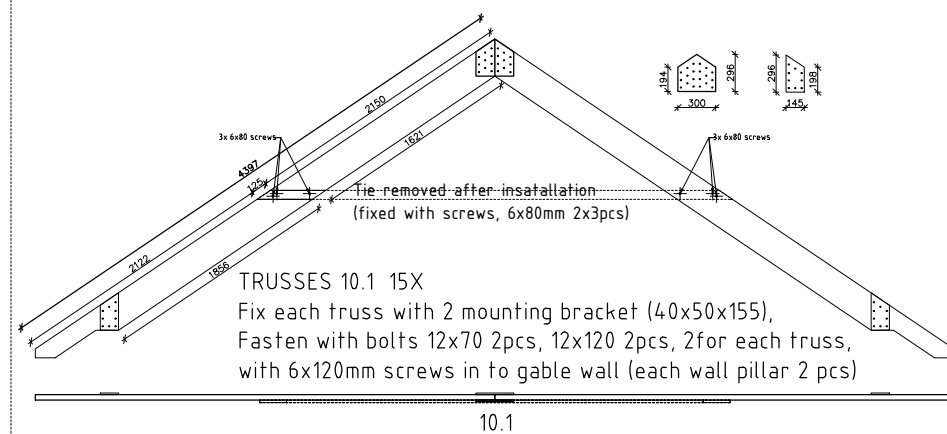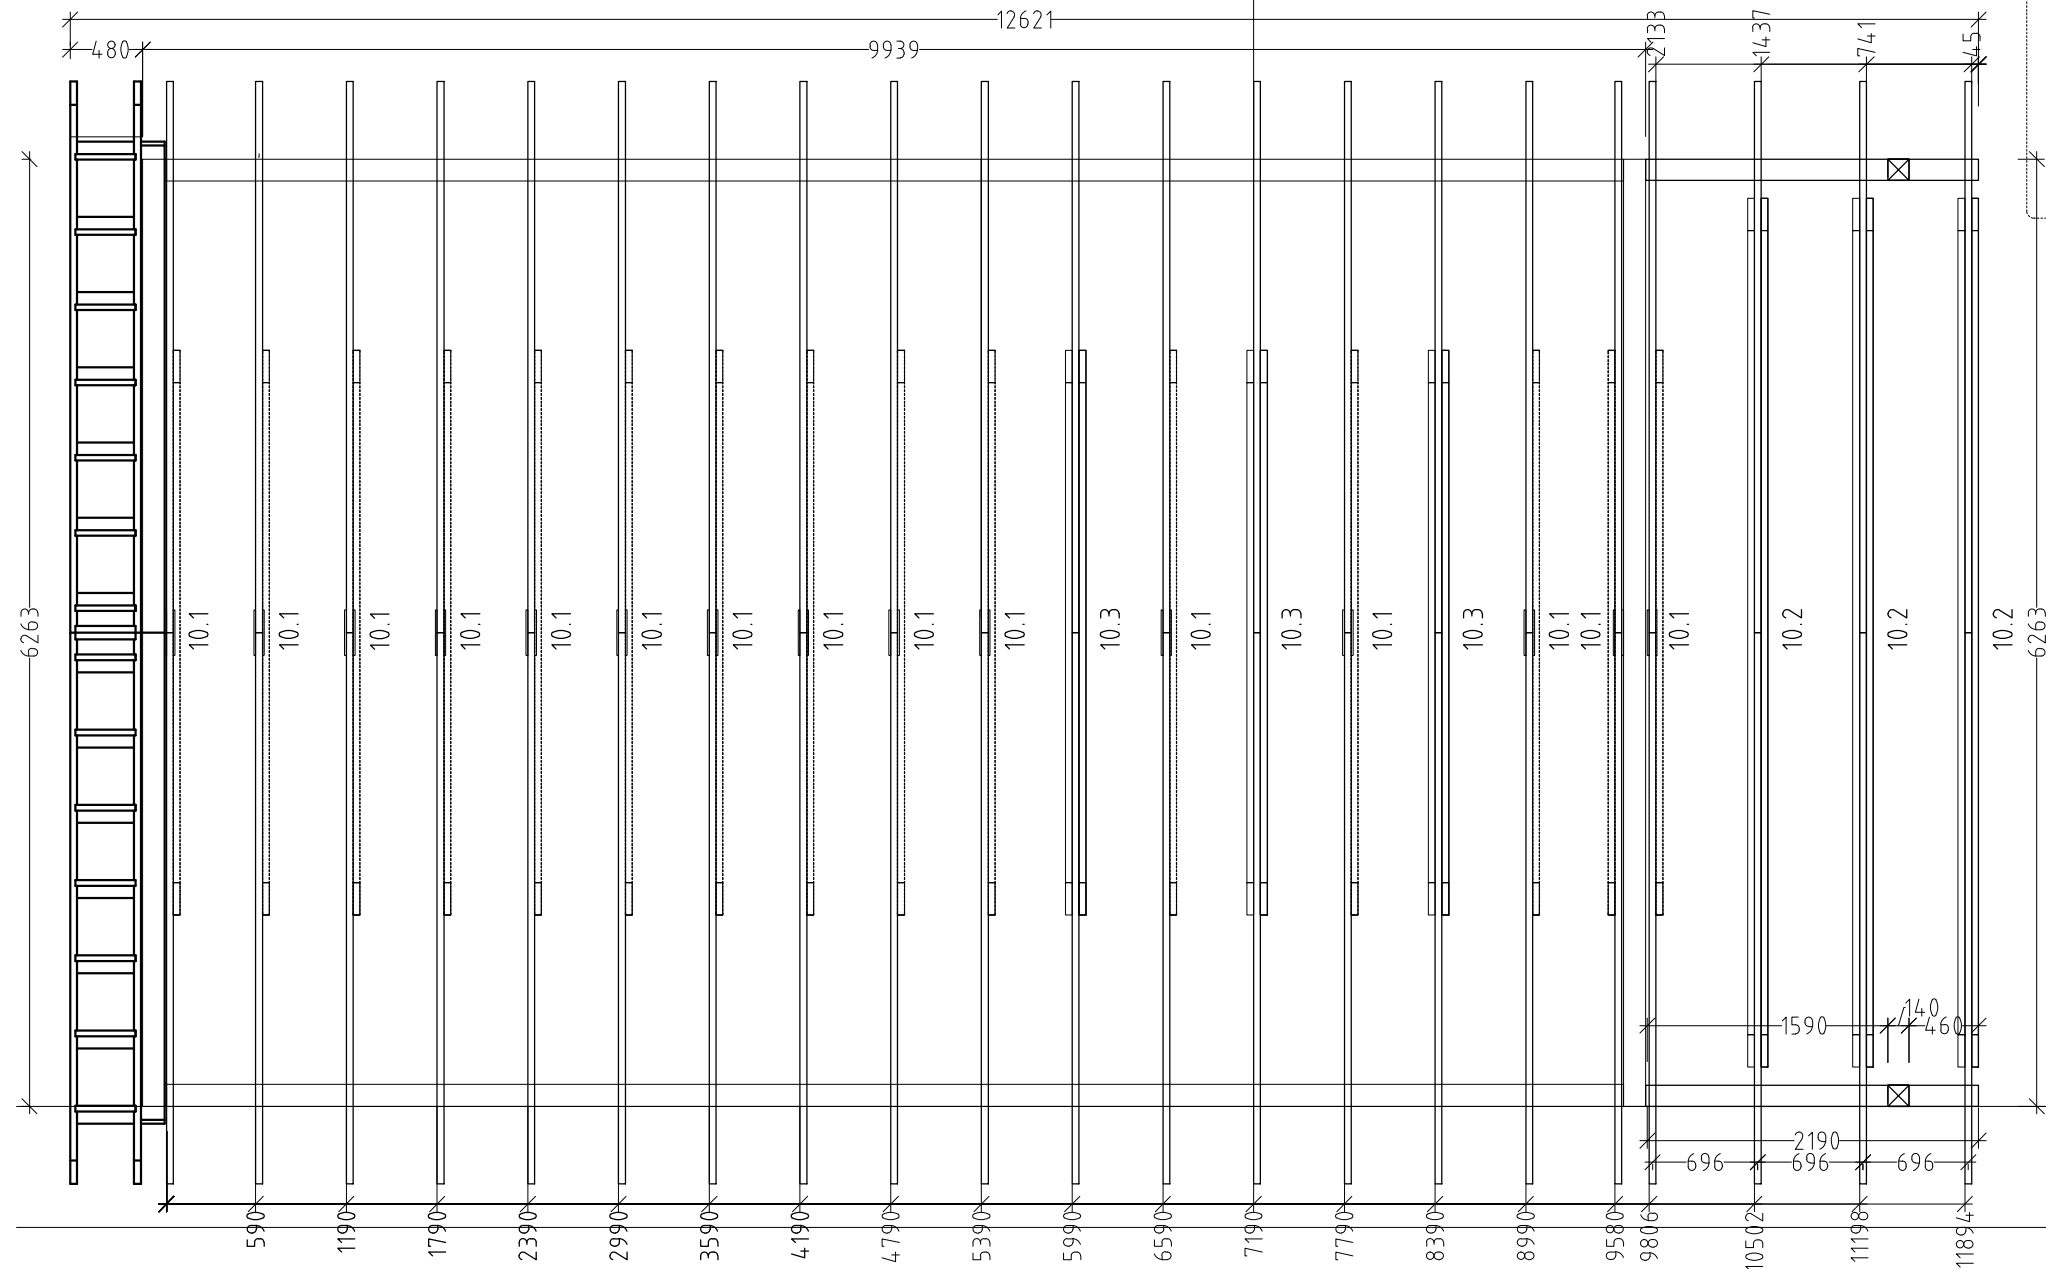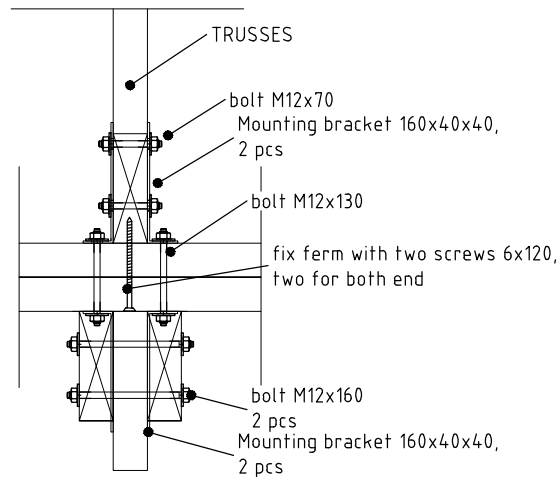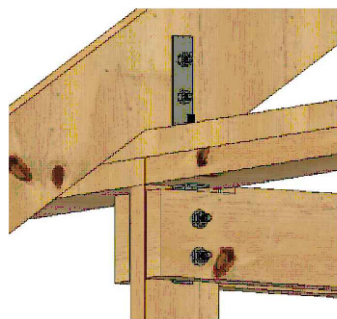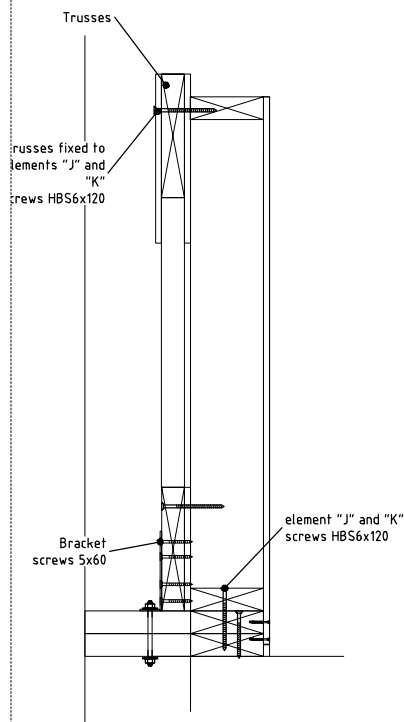



Notes:



- Follow appropriate detail drawings to fasten elements.
- Installation plans and fastening materials are recommended by factory and are not mandatory.
- Factory is not responsible for this project statics and stability.

IP109

R00F TRUSSES PLAN 21.06.2022 M 1:25 / A3L




ID-000-2018; project:Klettar 60m2; designer: M.K ;Drawer: M.K

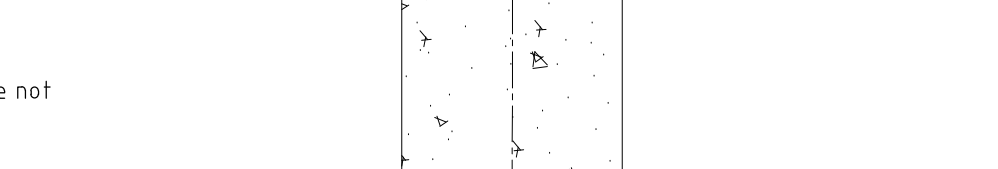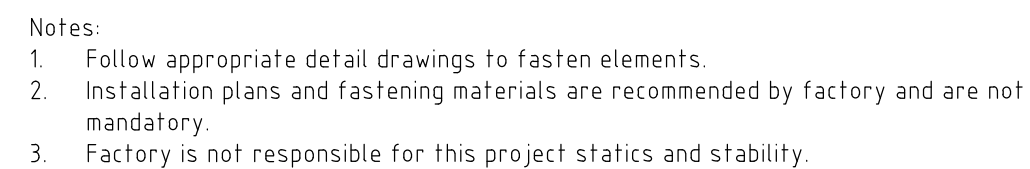

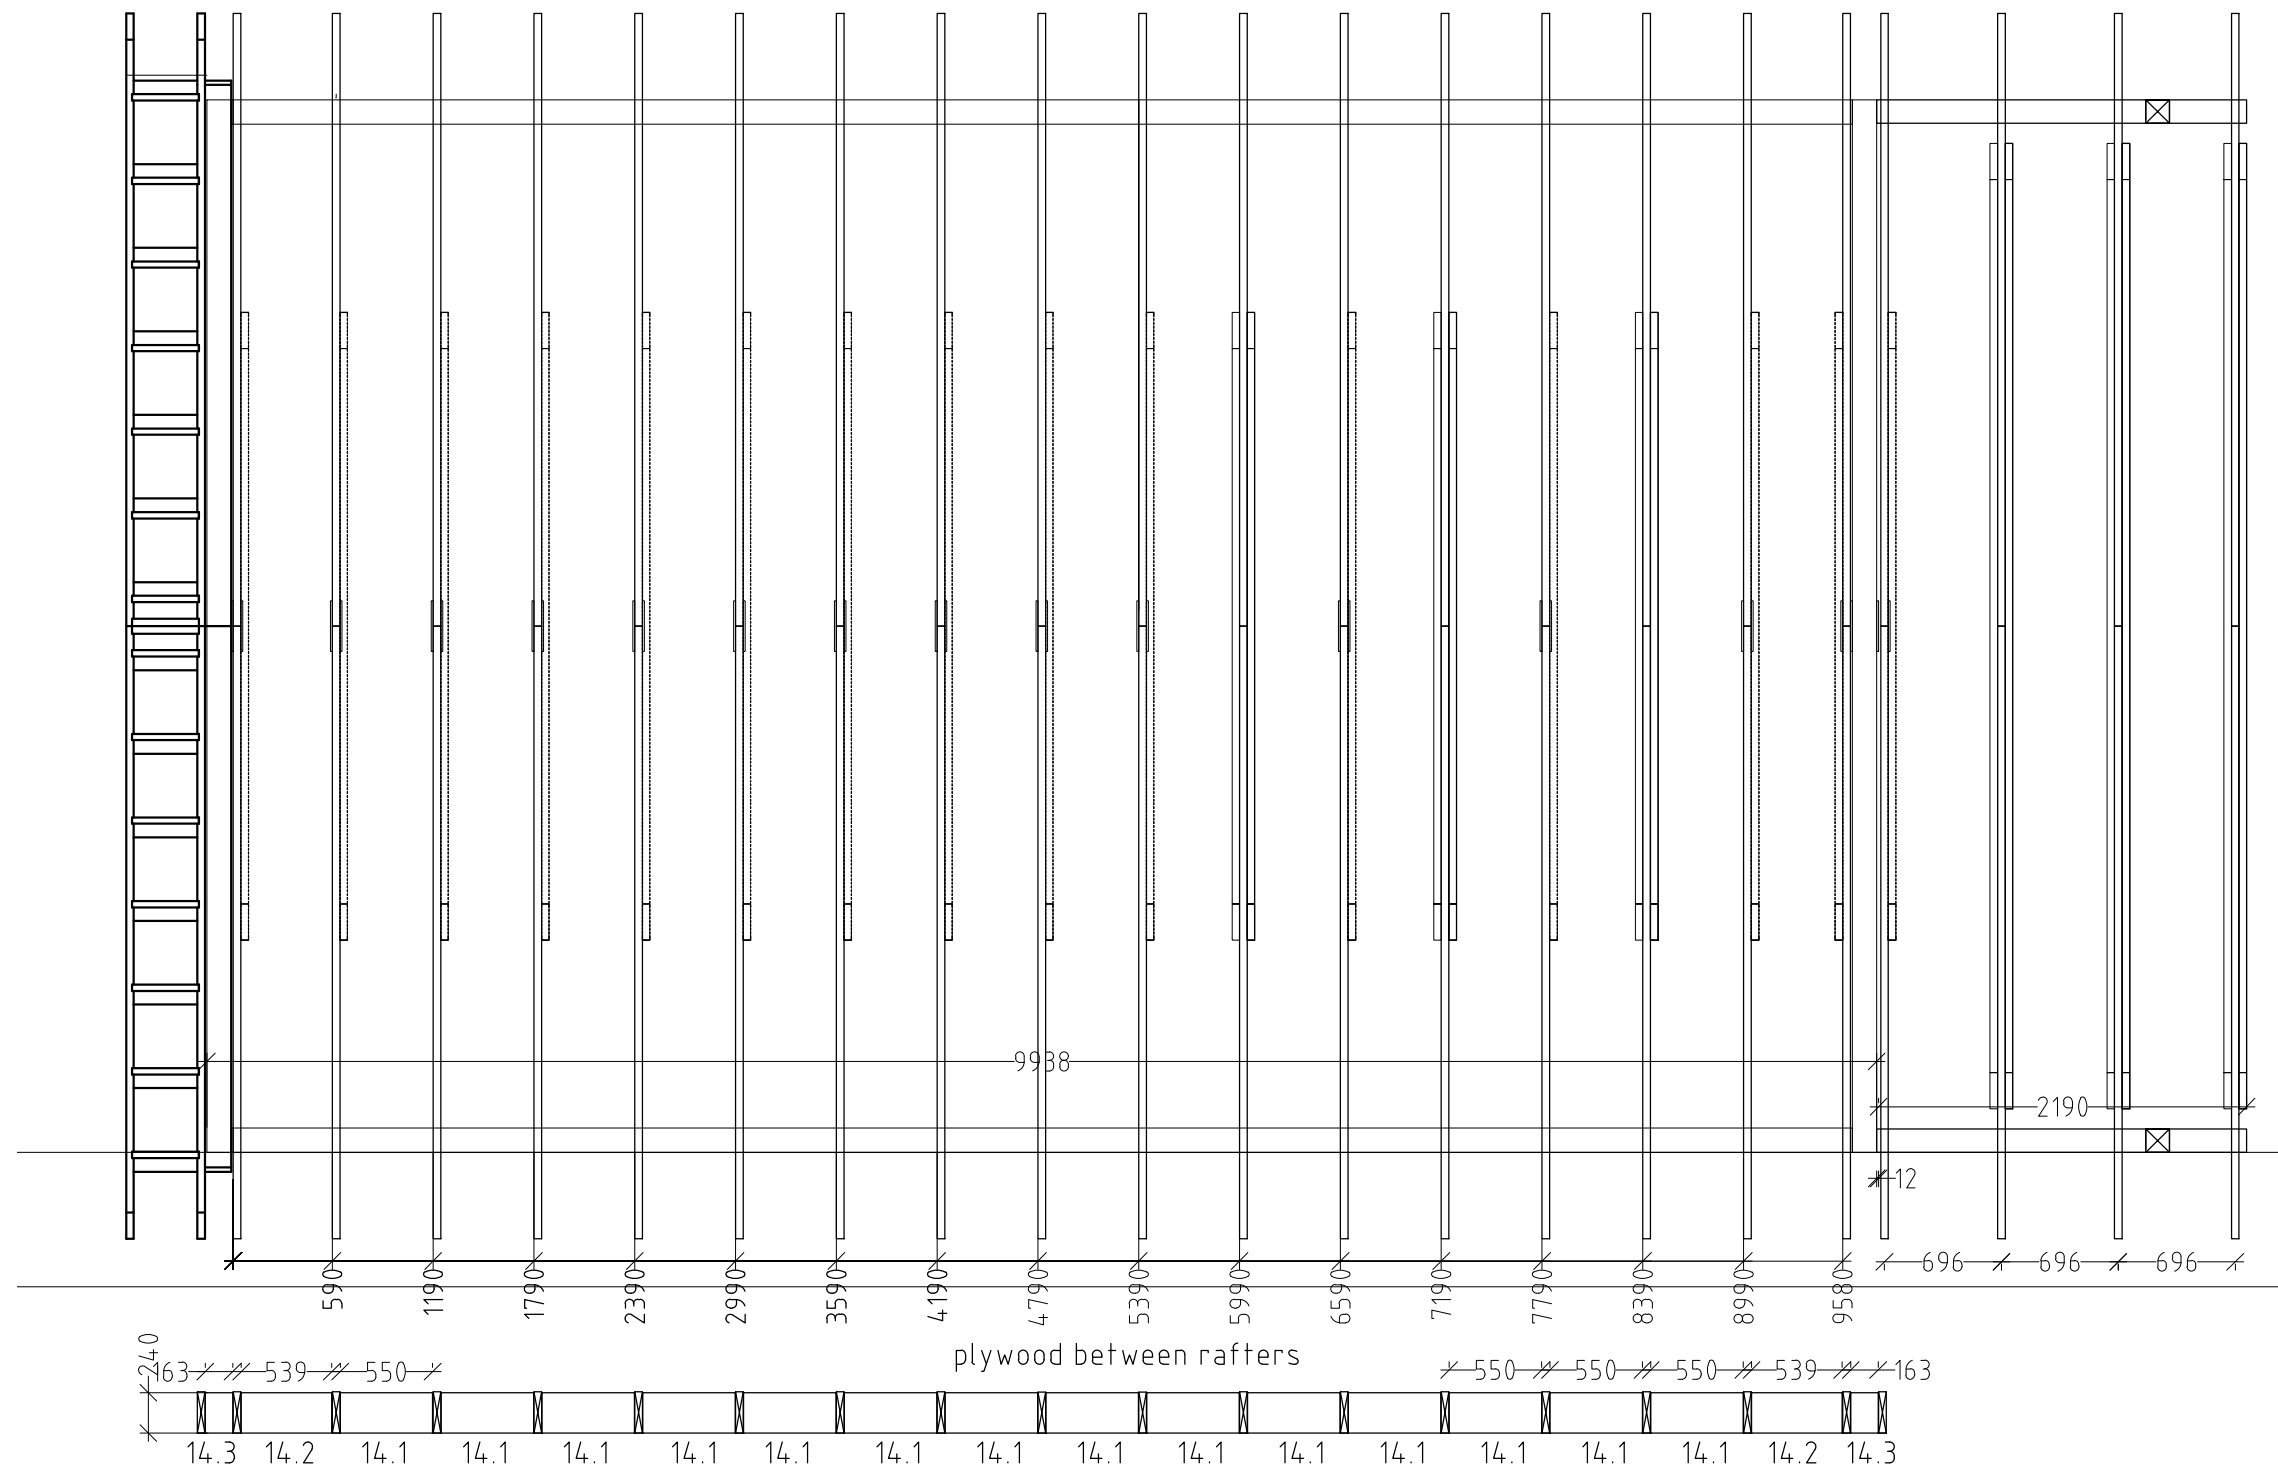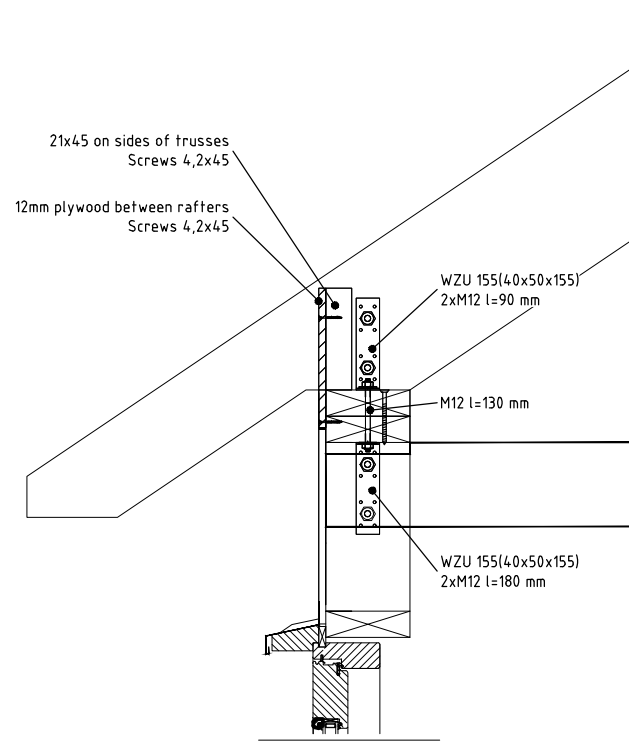

Notes:



1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

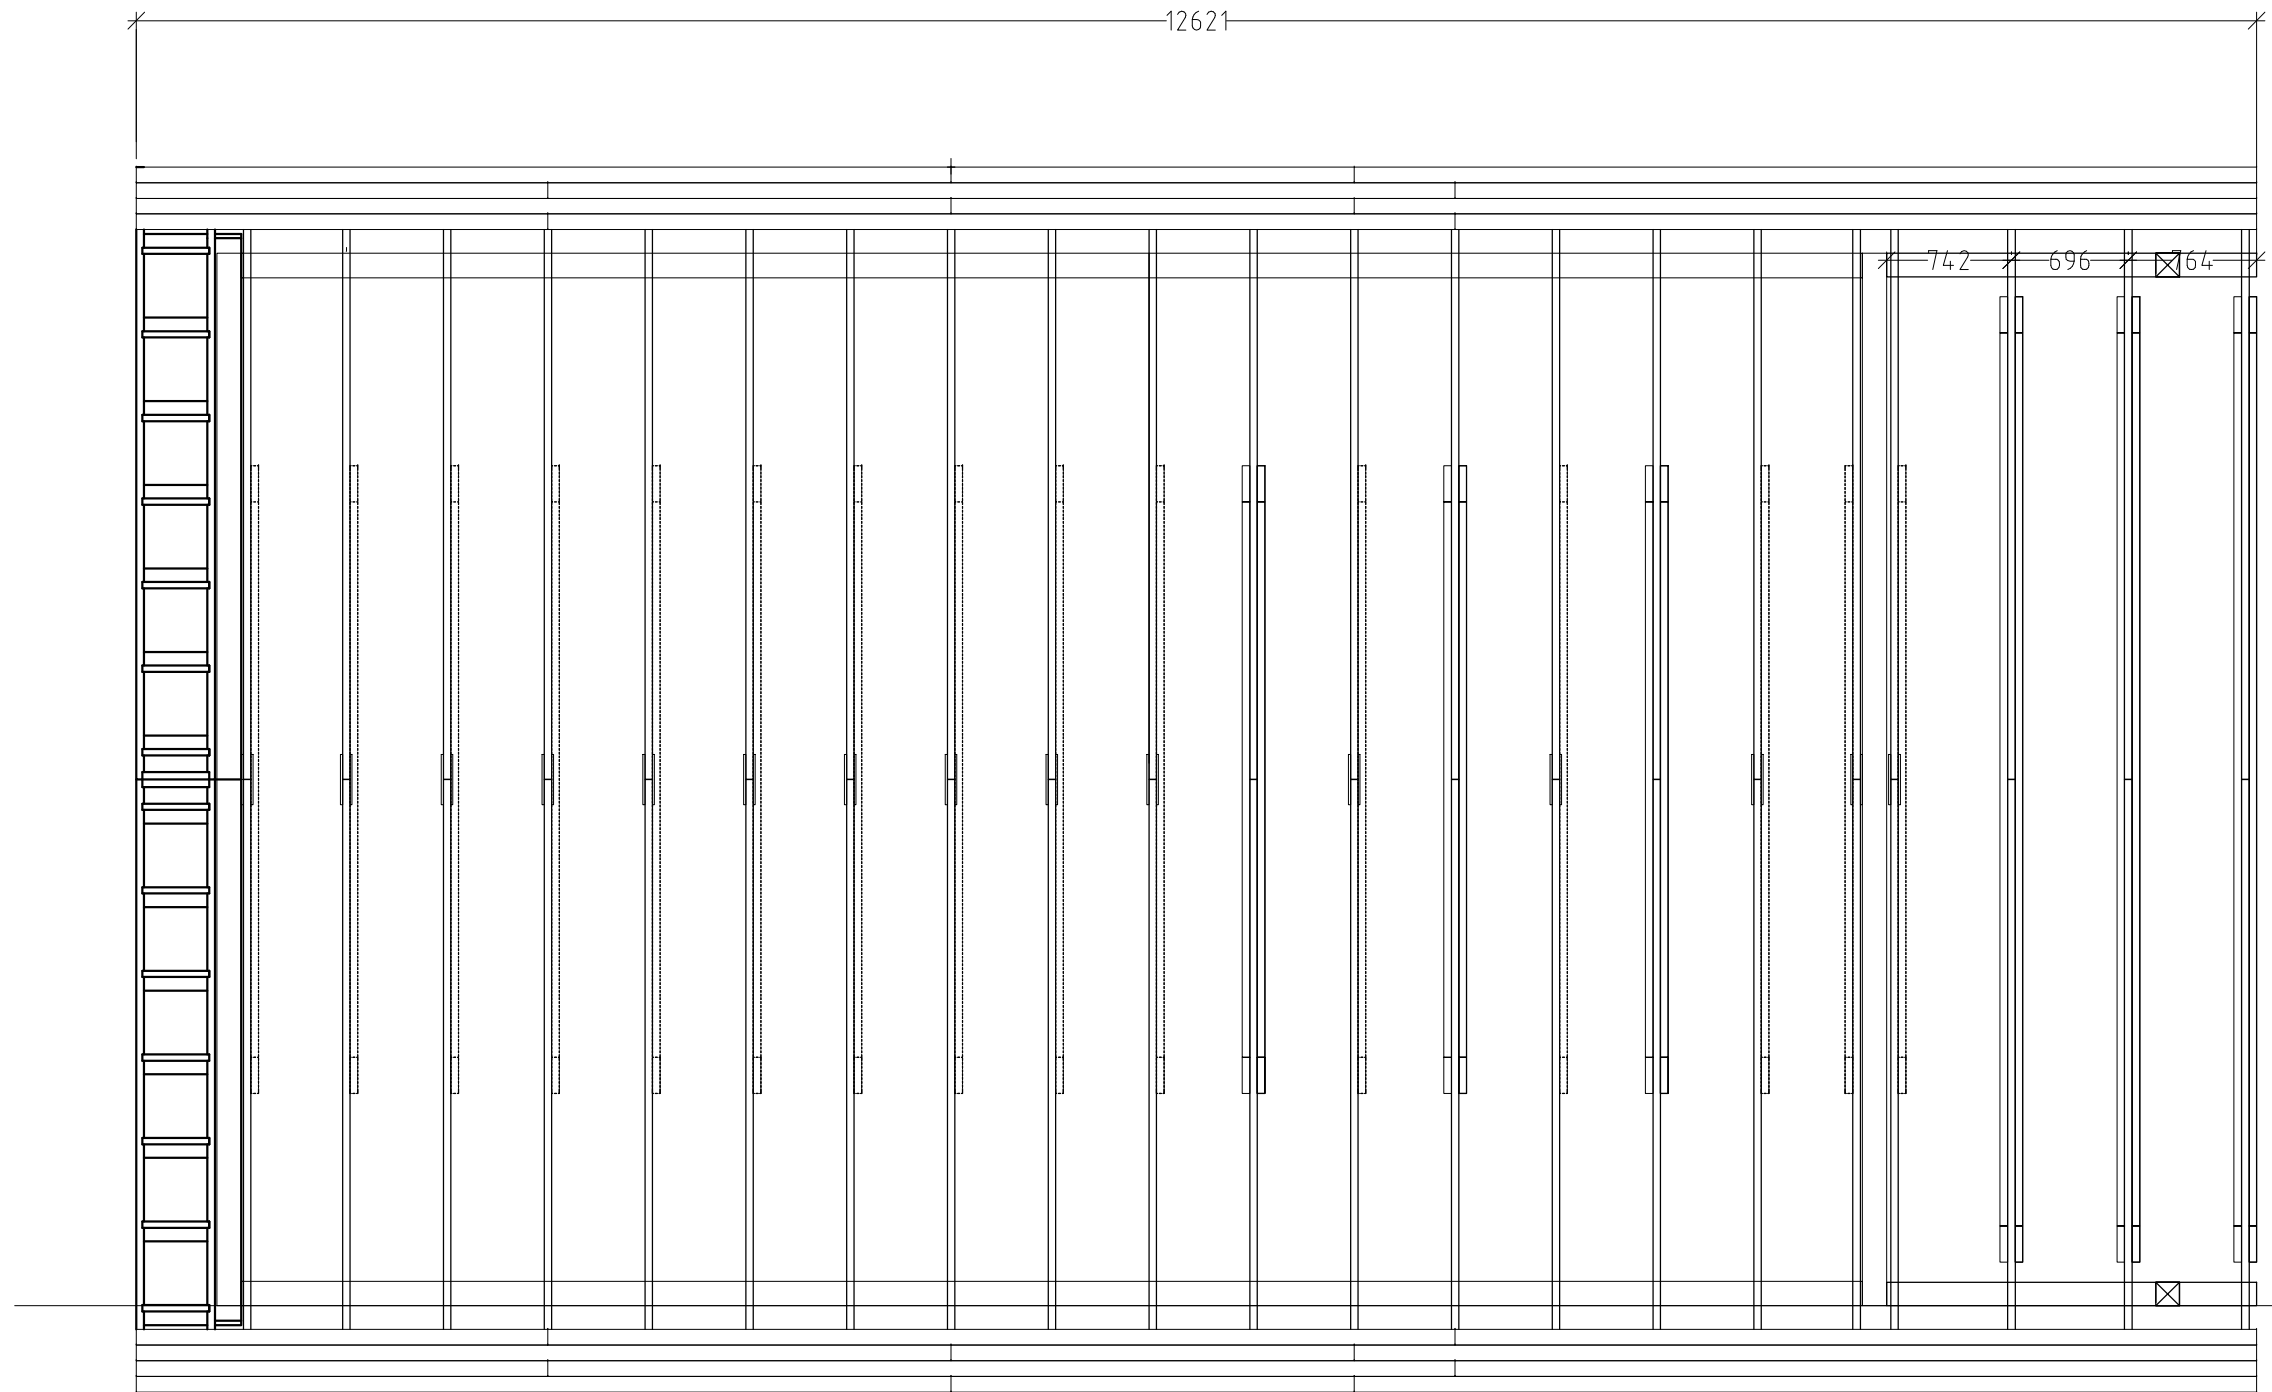
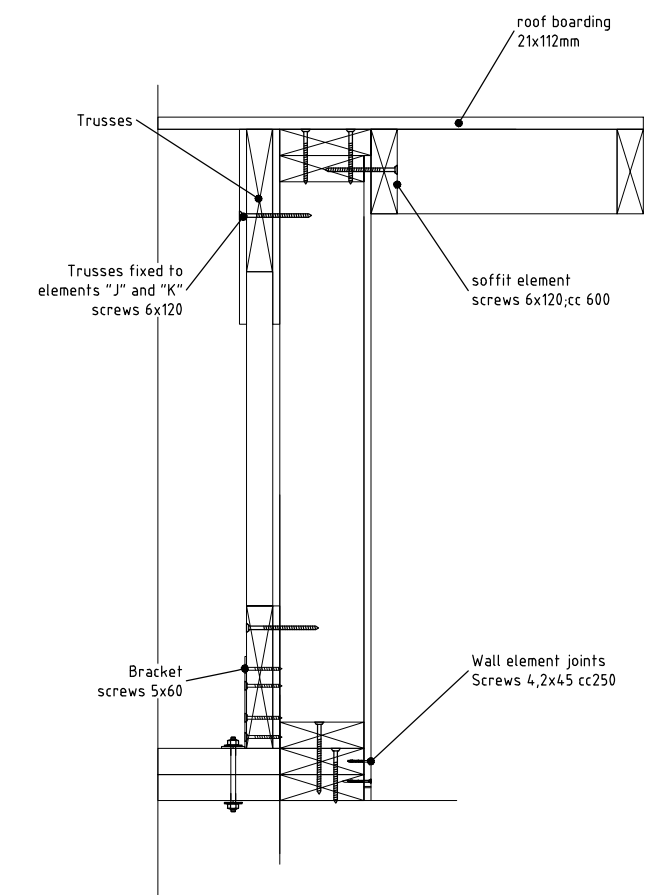
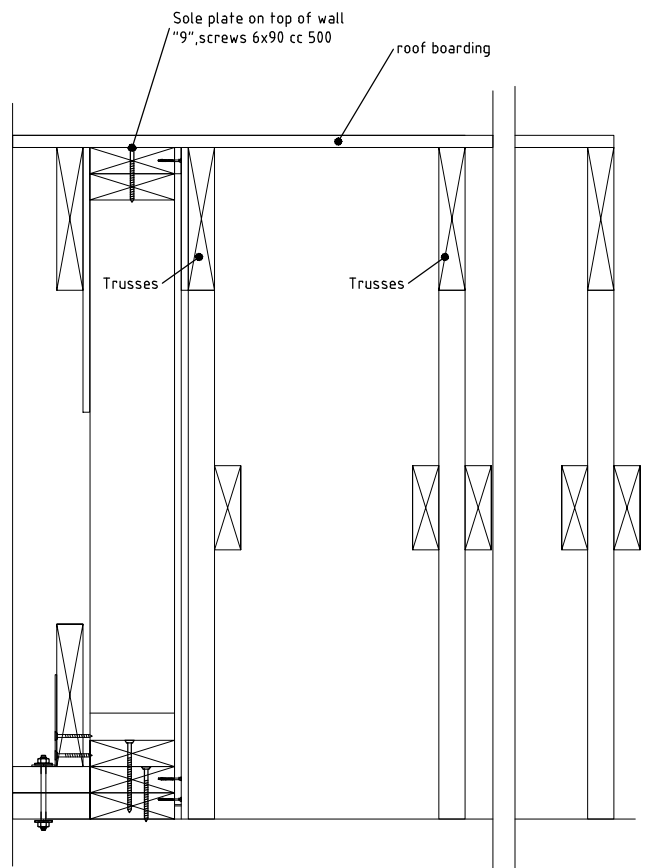


Board material amount is sent in meter amount
Board connection must be dispersed.
Board connection on the same bearing support is allowed over 2 boards

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

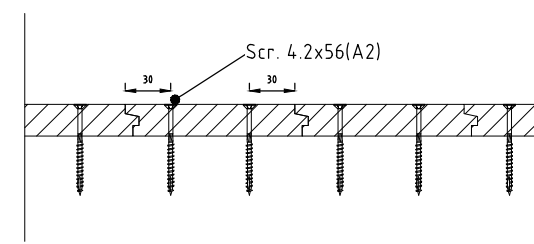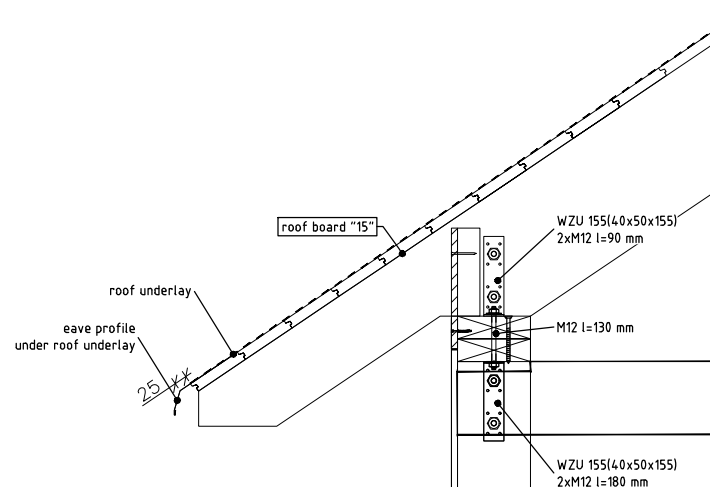

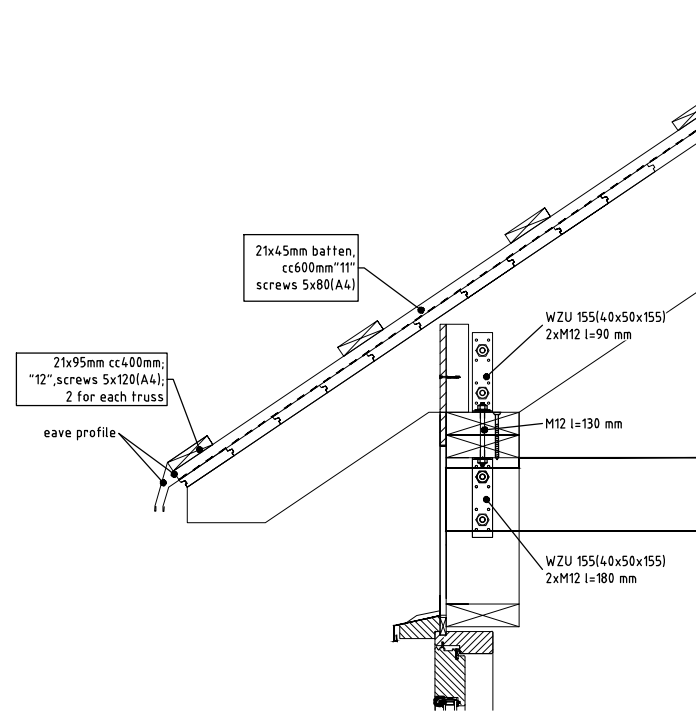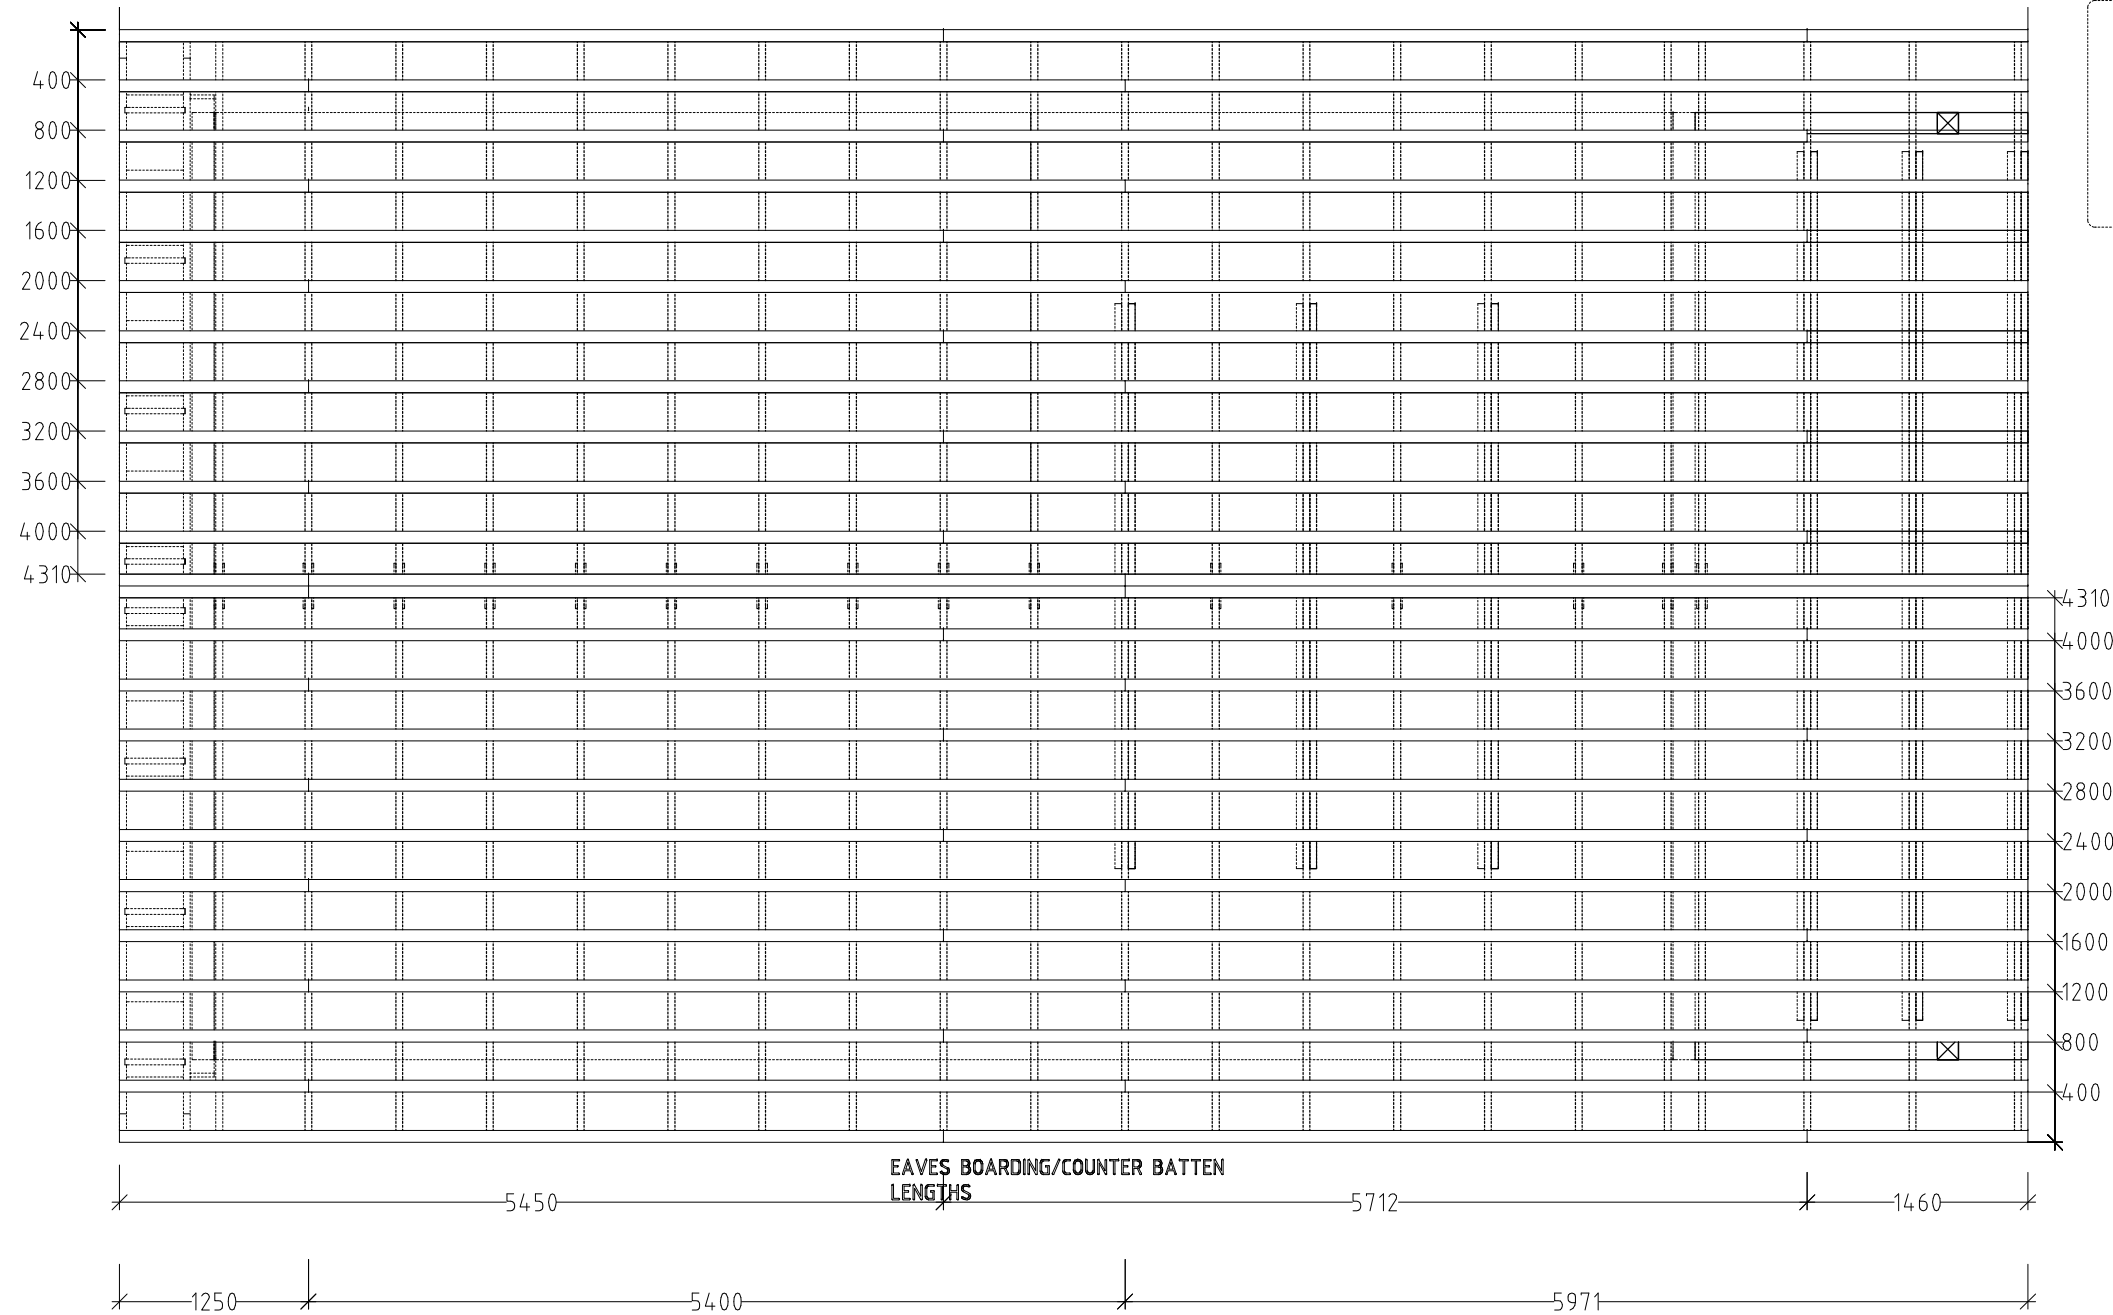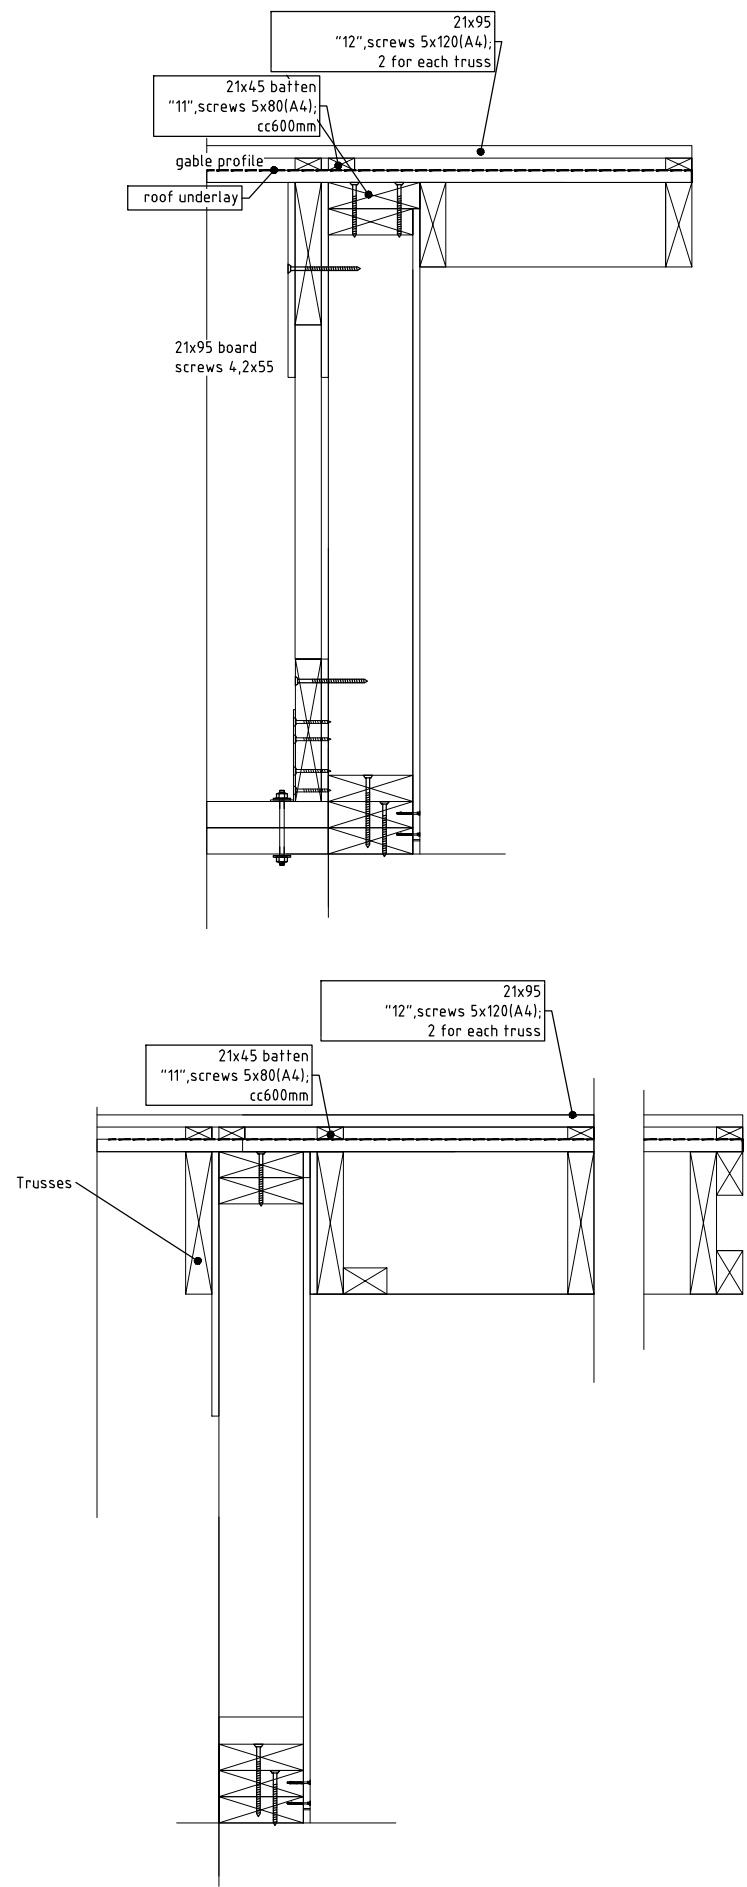


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

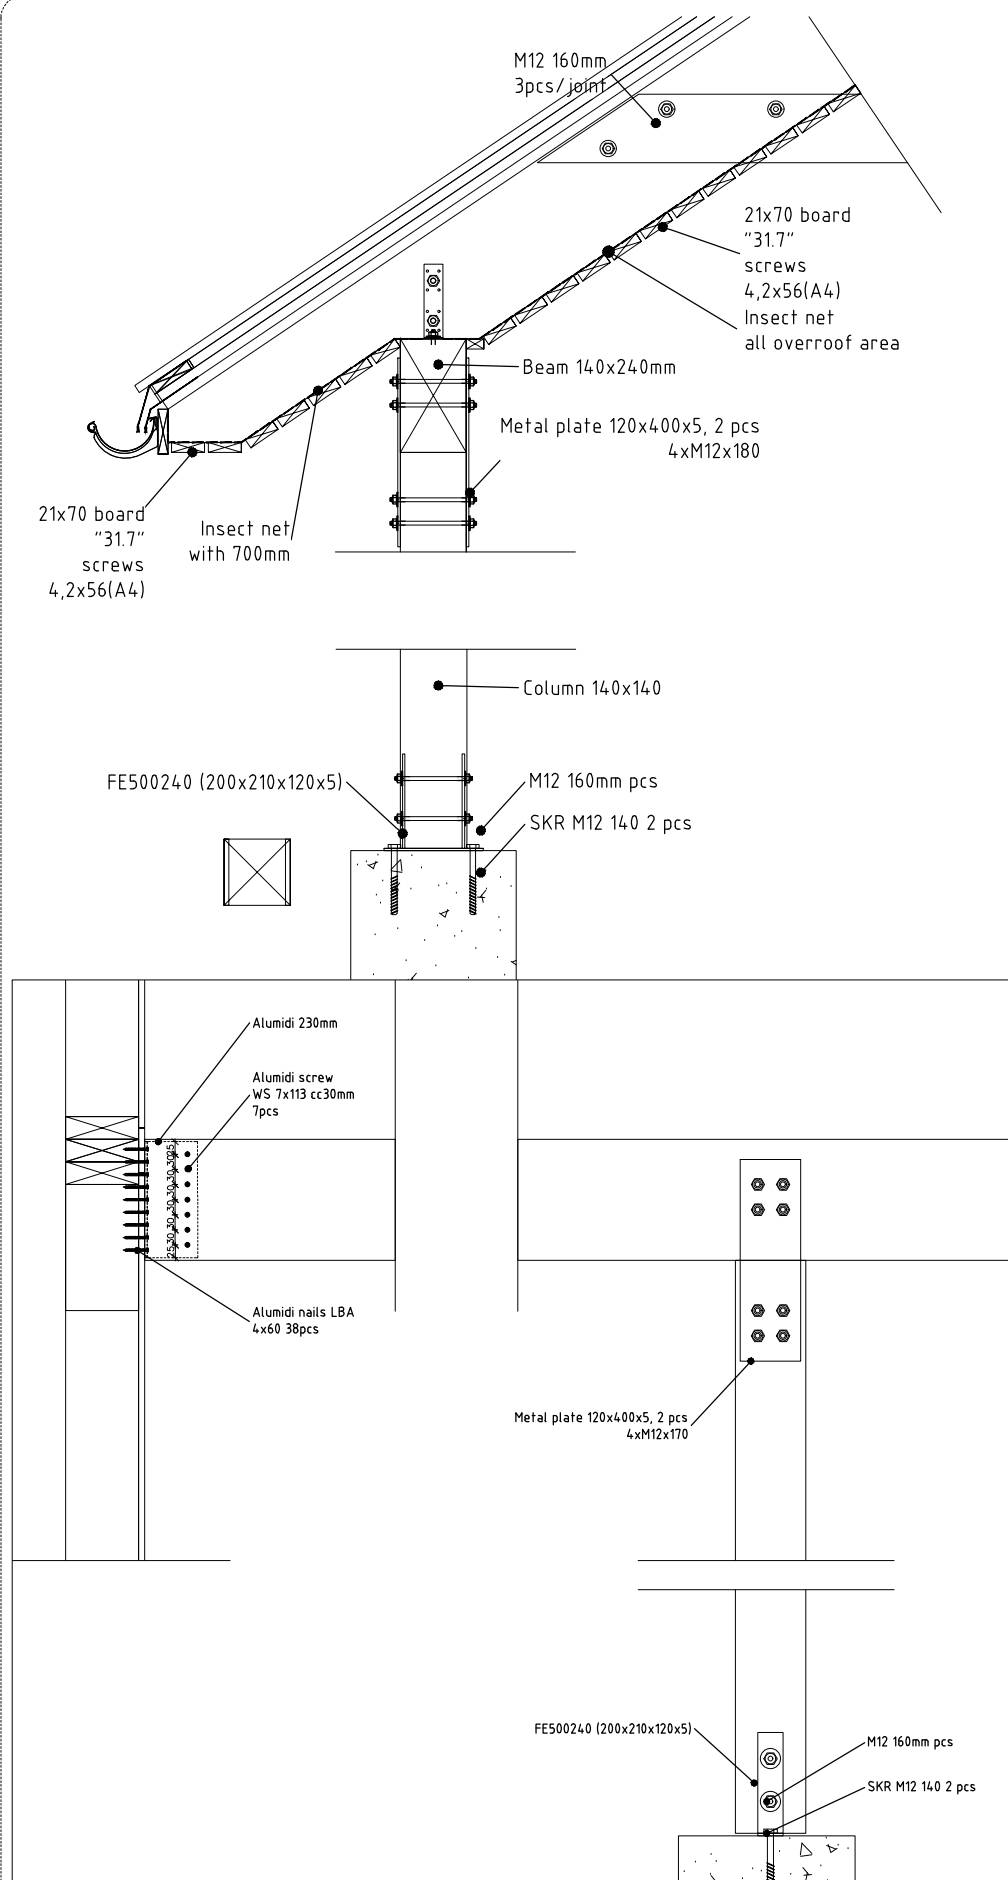

Notes:




1. Follow appropriate detail drawings to fasten elements.
2. Parapet steel profile installation order: corner profile and end profile, parapet profile.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

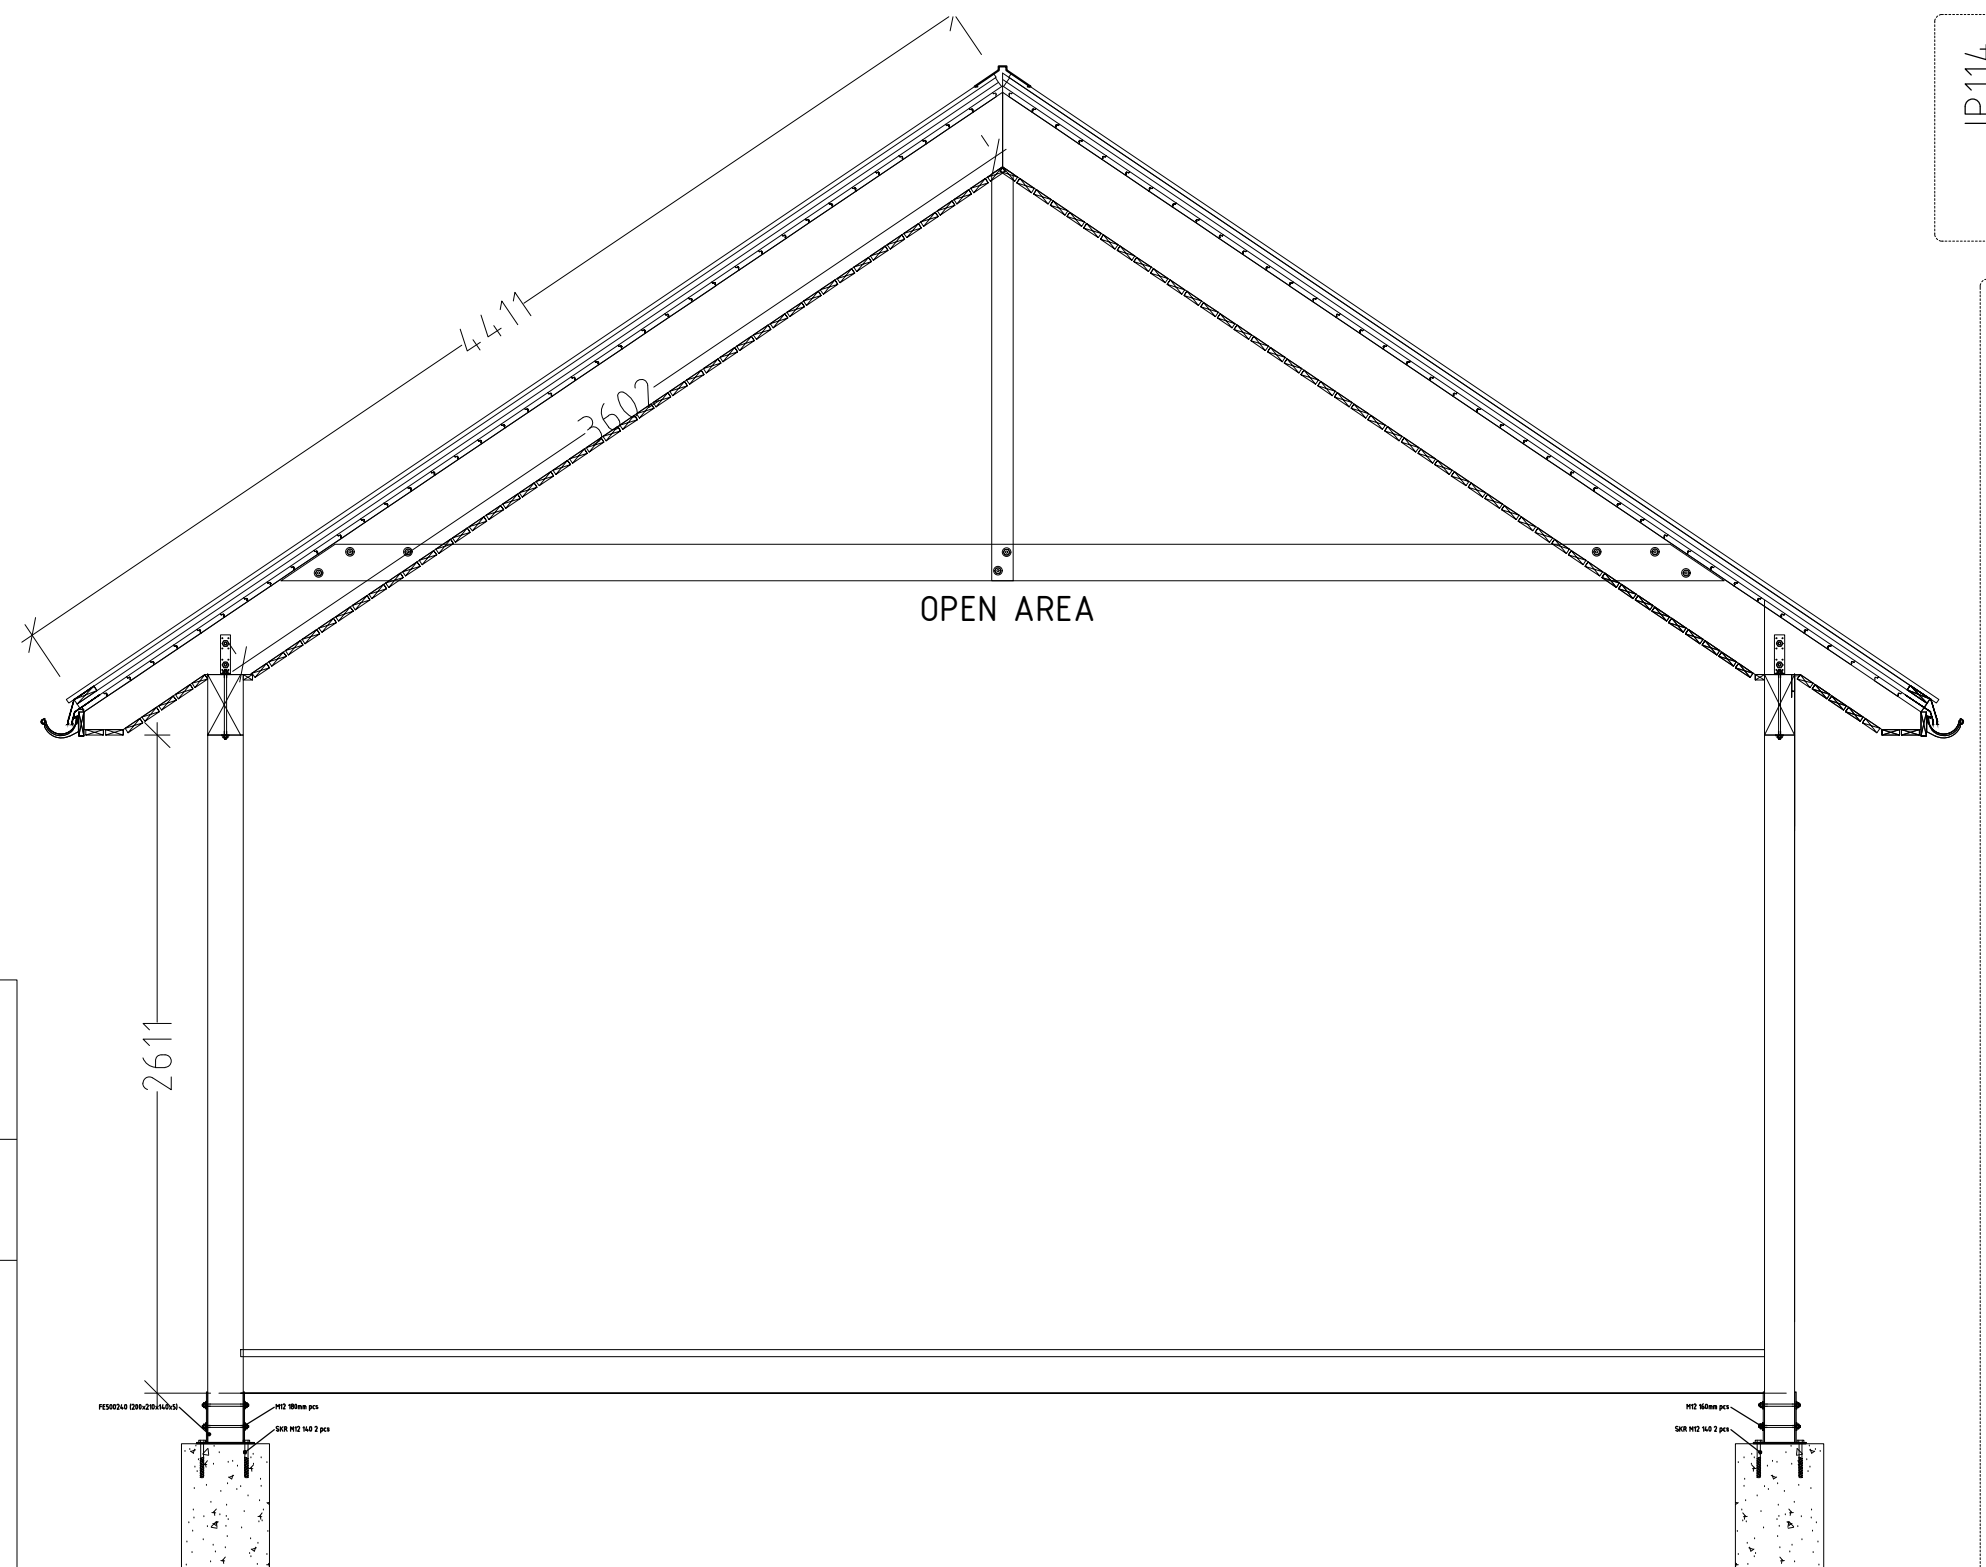

IP114

POST MOUNTING 21.06.2022 M 1:50 / A3L

ID:000-2018; project:Klettar 60m2; designer: M.K; Drawer: M.K

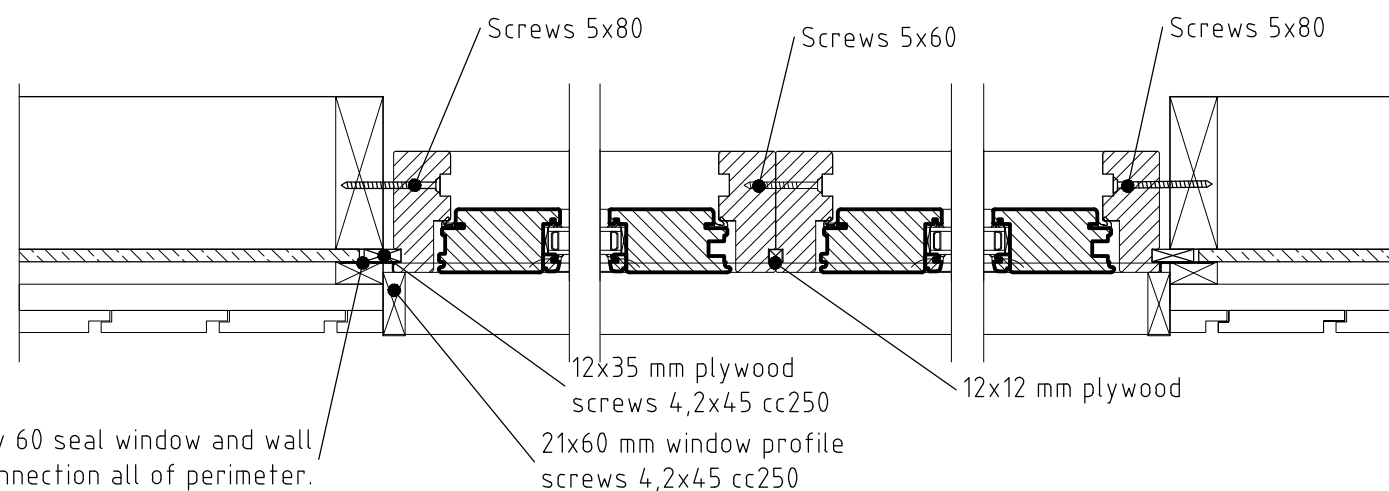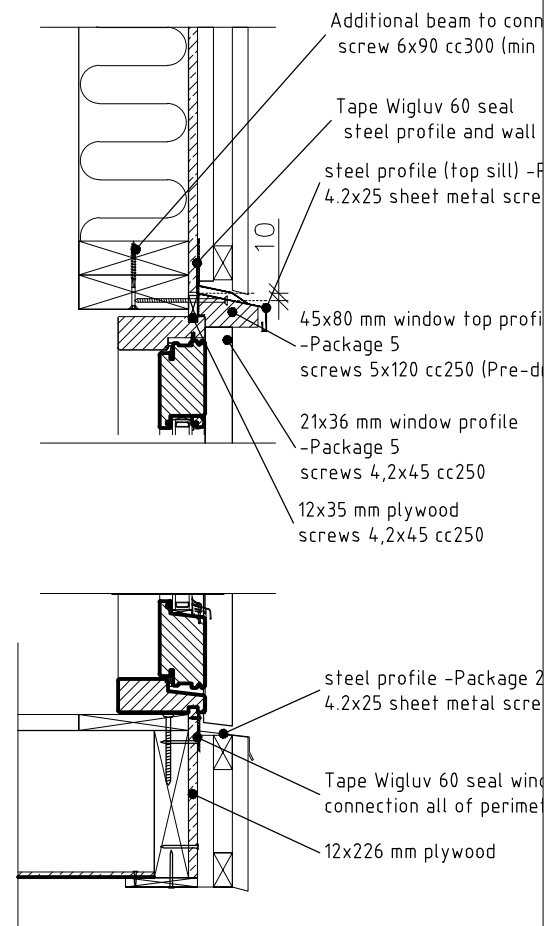
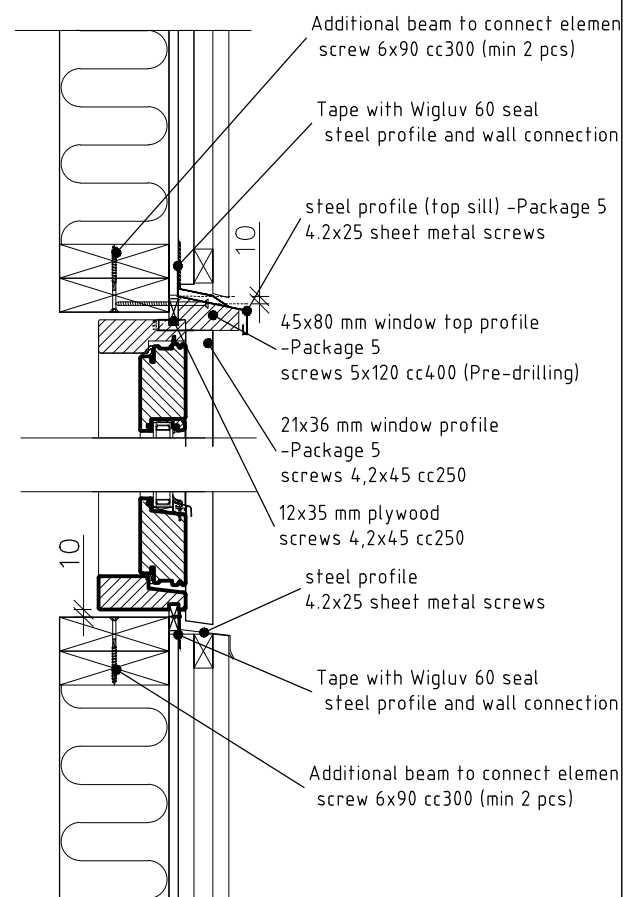


Wigluv 60 seal window and wall connection all of perimeter.


Notes:

1. Follow appropriate detail drawings to install windows.
2. Please ensure that stored doors and windows are before installing secured from moisture and rainwater.
3. Cut window profiles and plywoods in correct length.
4. Fix 12x35 plywood strips into the groove of window side and top jamb.
5. Fix 12x12 plywood strips and apply silicon sealant between jambs where two windows are together, secure jambs with clamp and fasten two windows with screws. Ensure that fixing screws are 90° to jamb.
6. Lift windows on top of the plywood fixed on sides of the floor.
7. Fix windows with wedges and screws. Make sure windows opens and closes properly.
8. Fasten plywood strips to the wall element with nails 2.5x50.
9. Seal windows with foam. Cover with a seal windows form outside so that window jamb is covered min 10 mm.
10. Install window profile and steel profile according to drawings.
11. Installation plans and fastening materials are recommended by factory and are not mandatory.
12. Factory is not responsible for this project statics and stability.

Window height -16mm

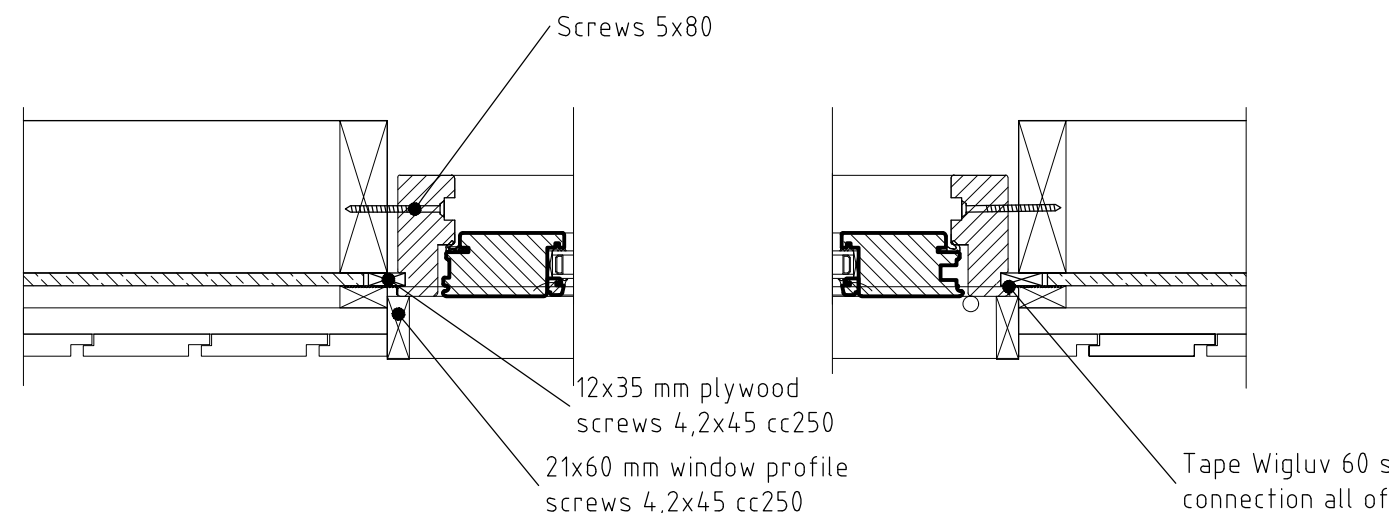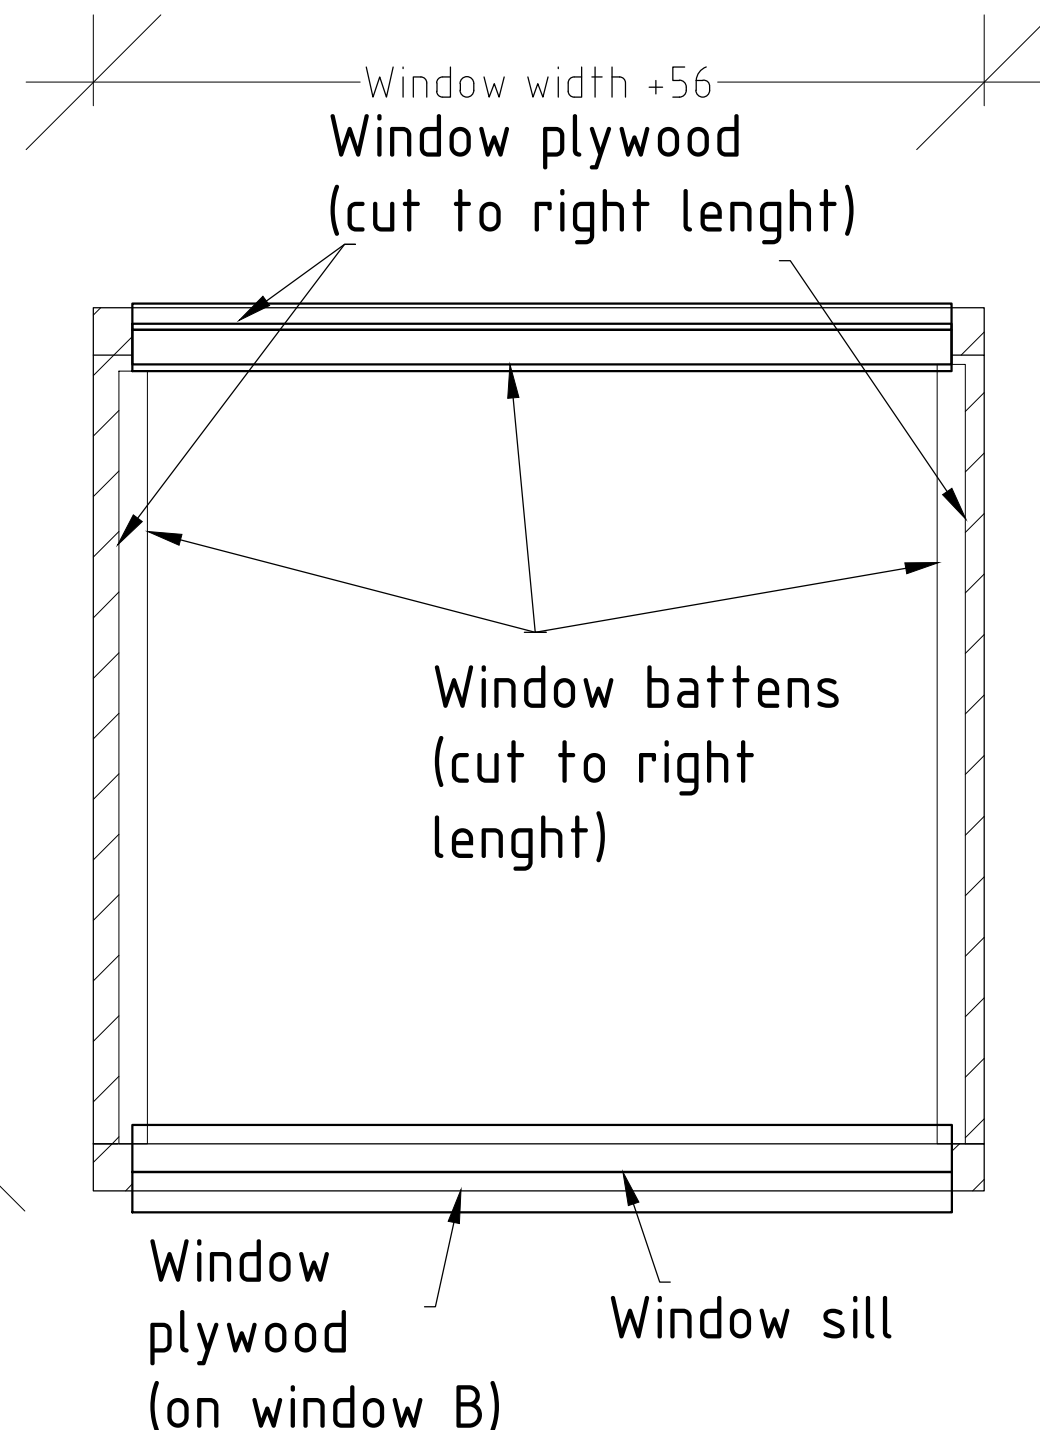



Base belt 45x145/45x95


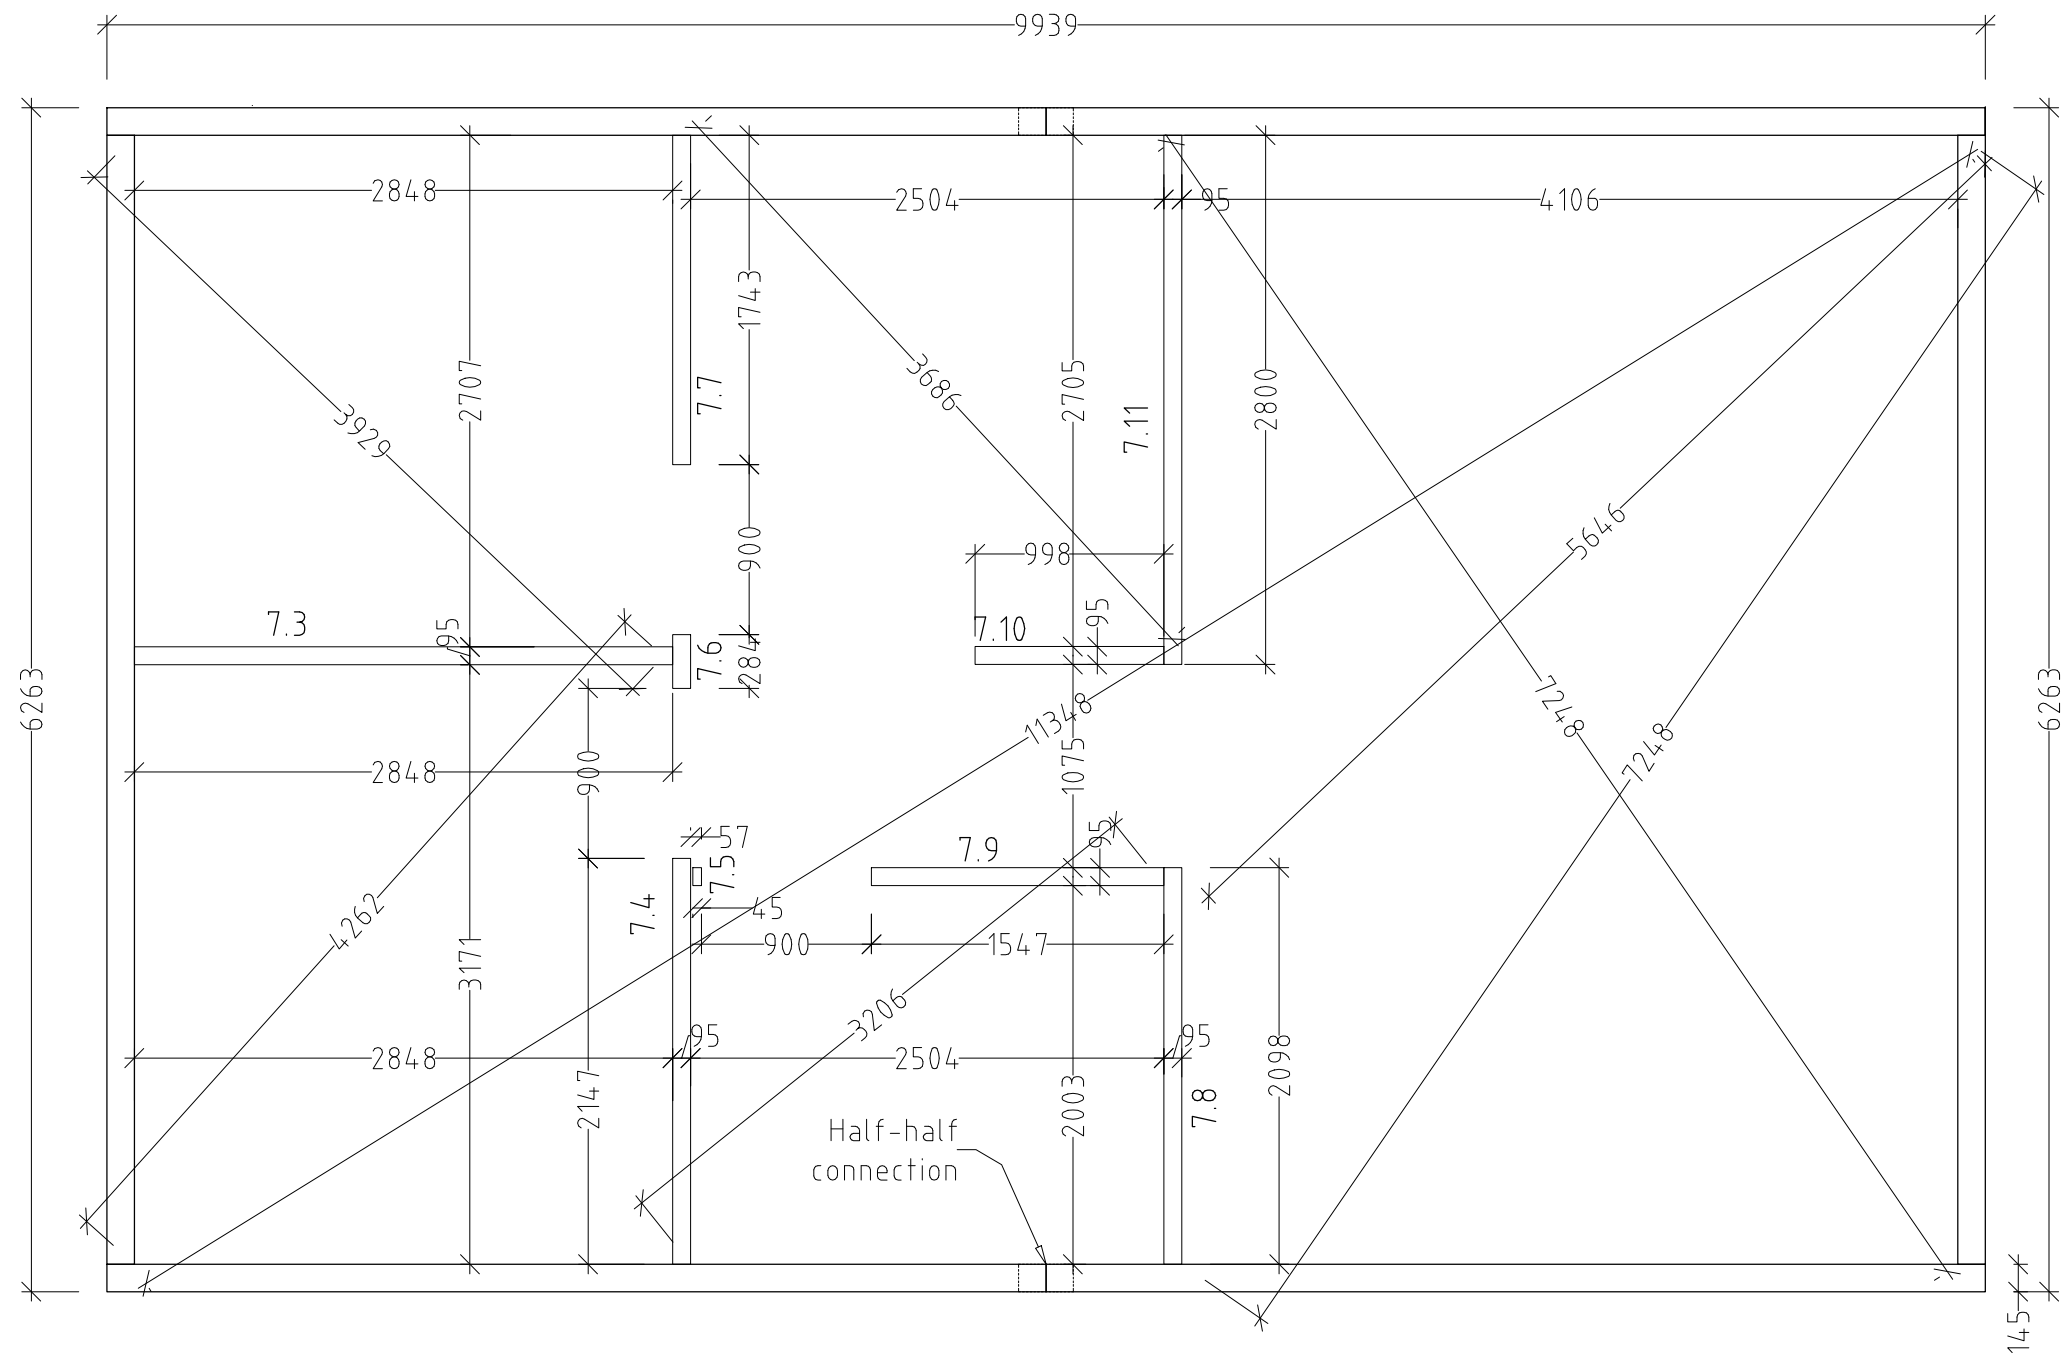


Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

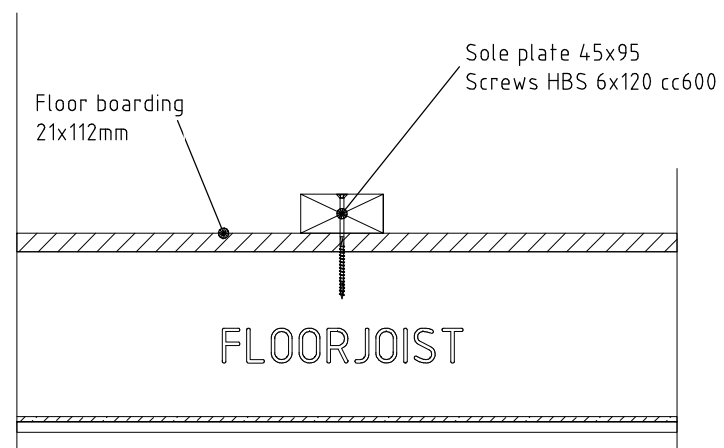

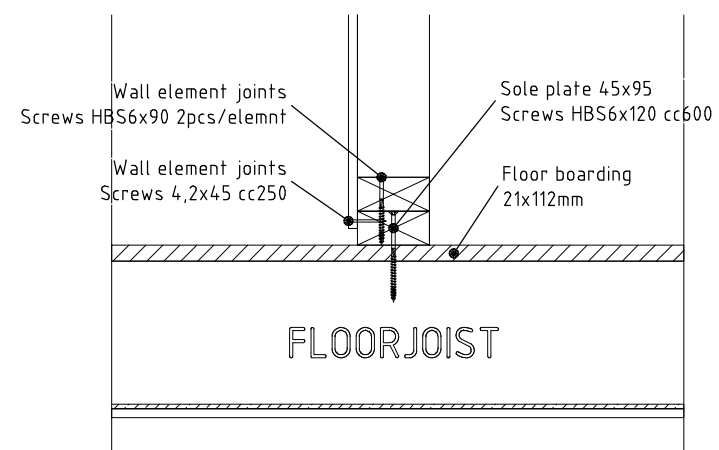

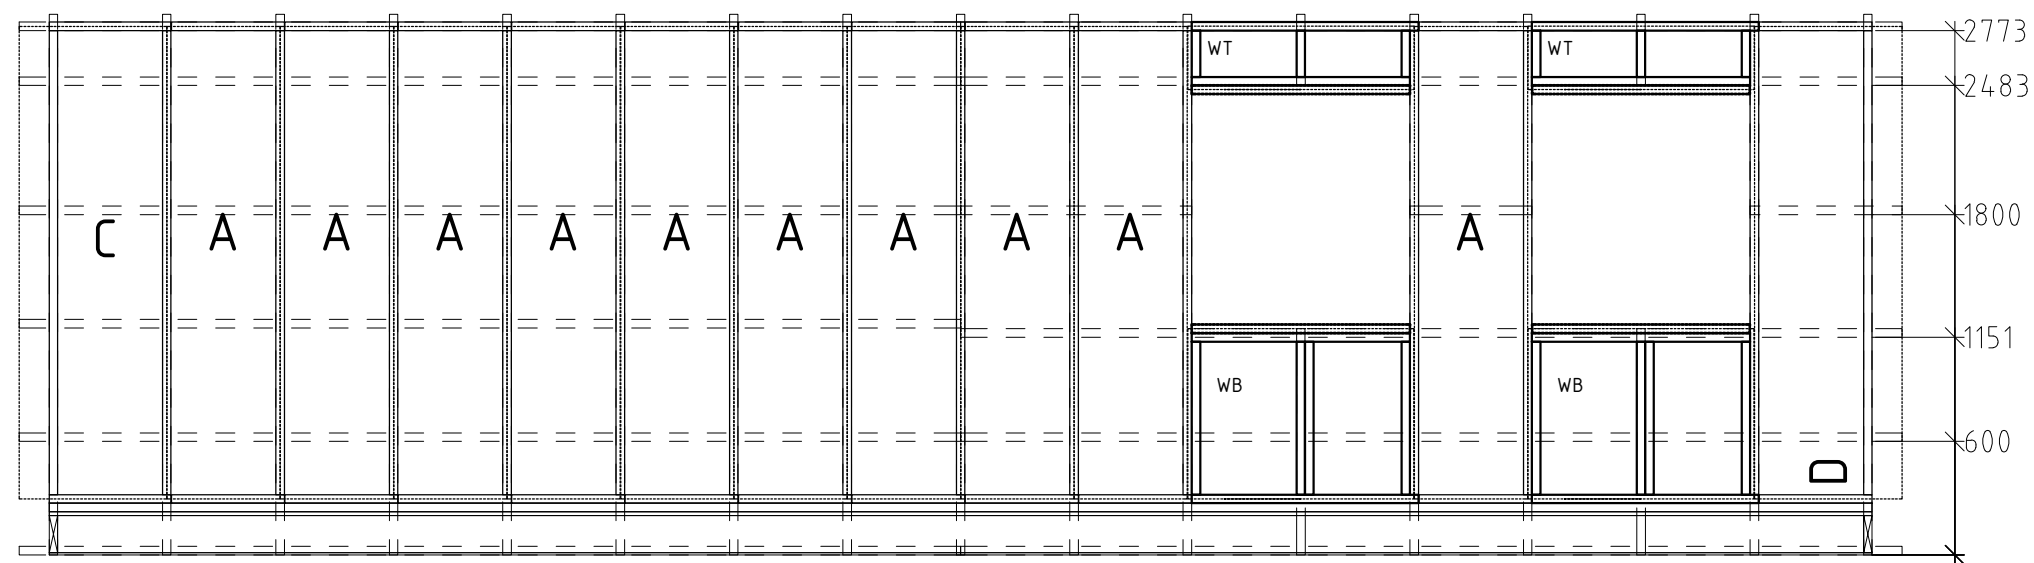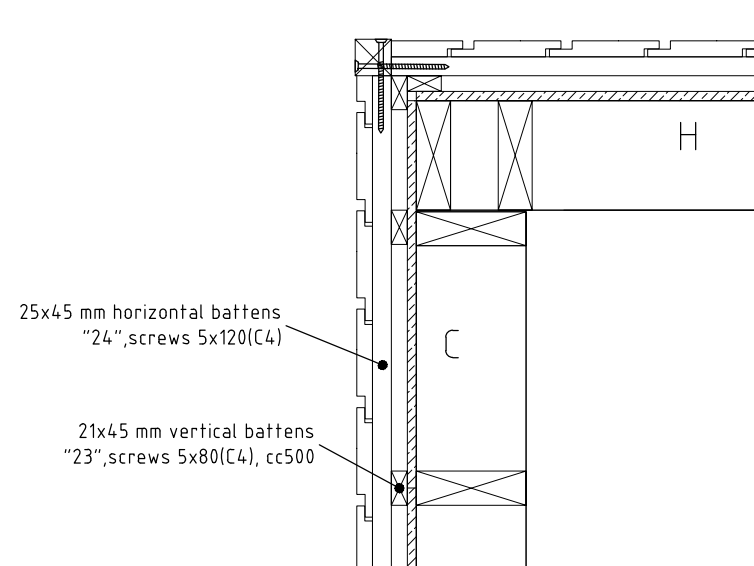


Vert. batten 21x45
Hor.batten 25x45

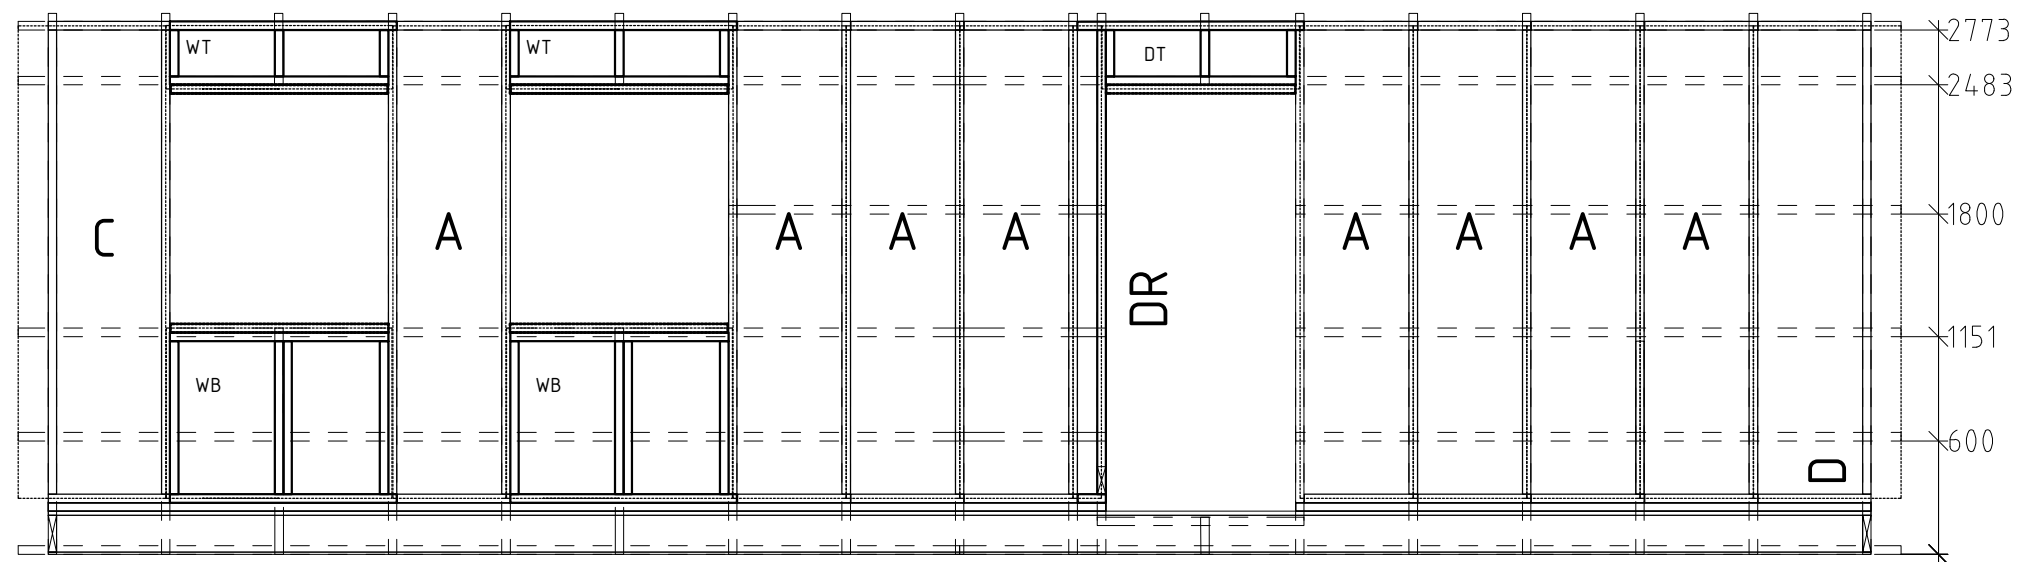


Vert. batten 21x45
Hor.batten 25x45

Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

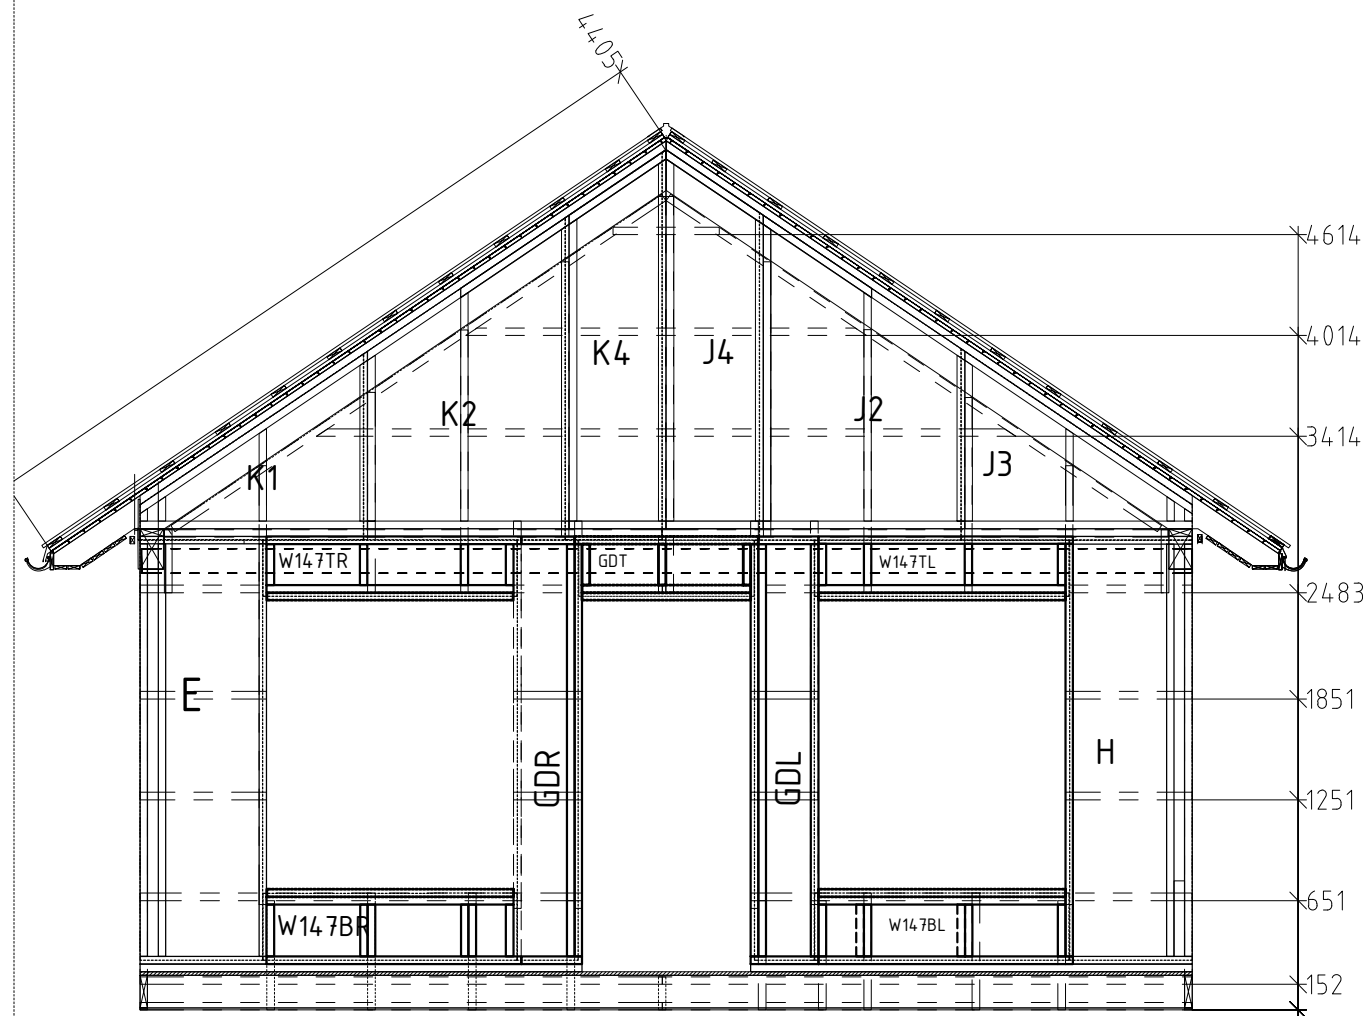





Vert. batten 21x45
Hor.batten 25x45






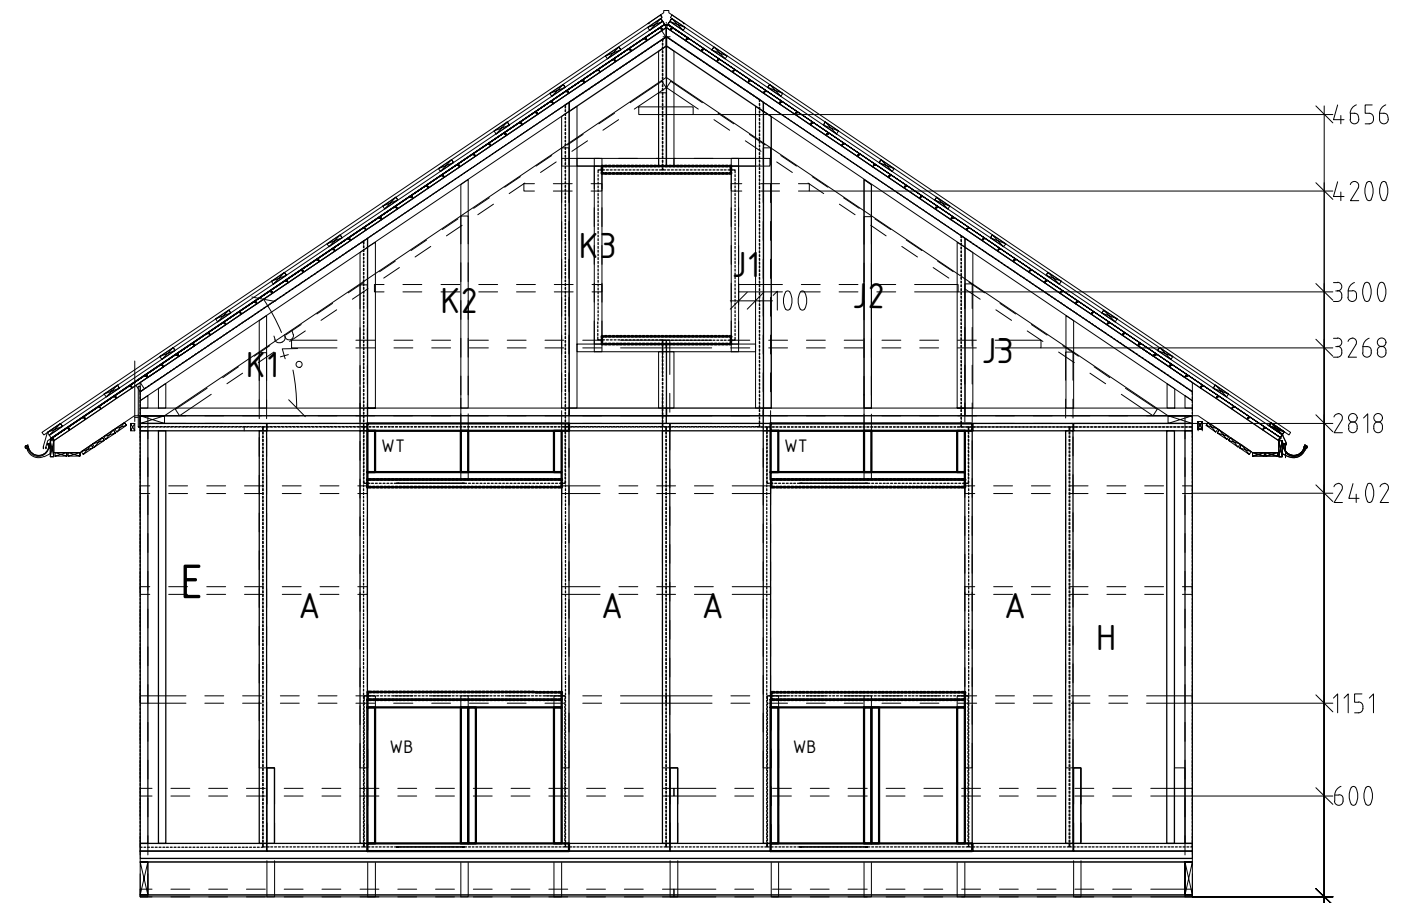


Vert. batten 21x45
Hor.batten 25x45

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Last board of every wall must be cut to correct width.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

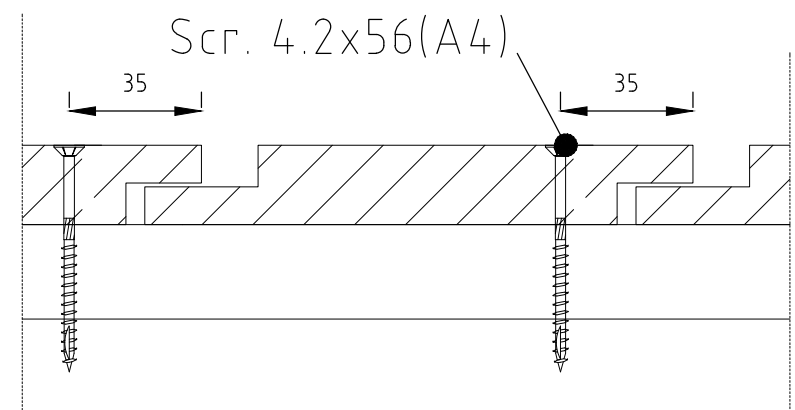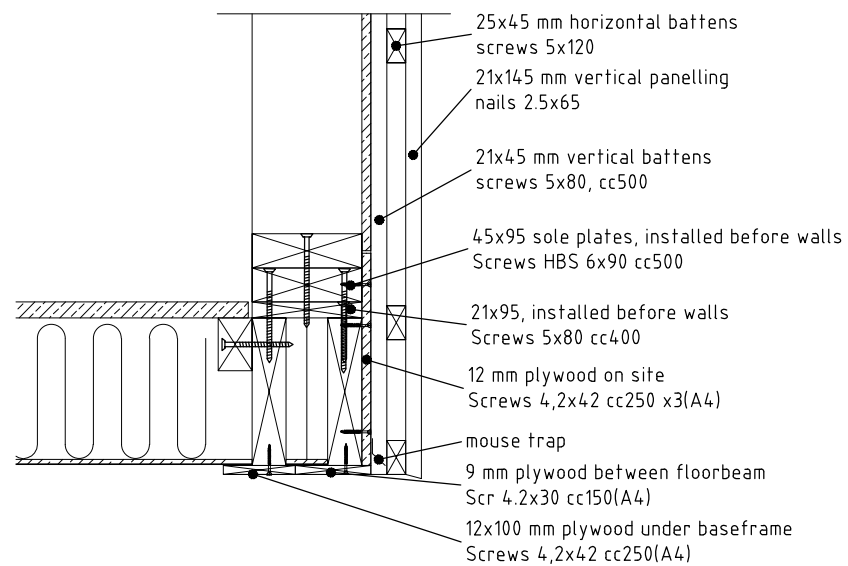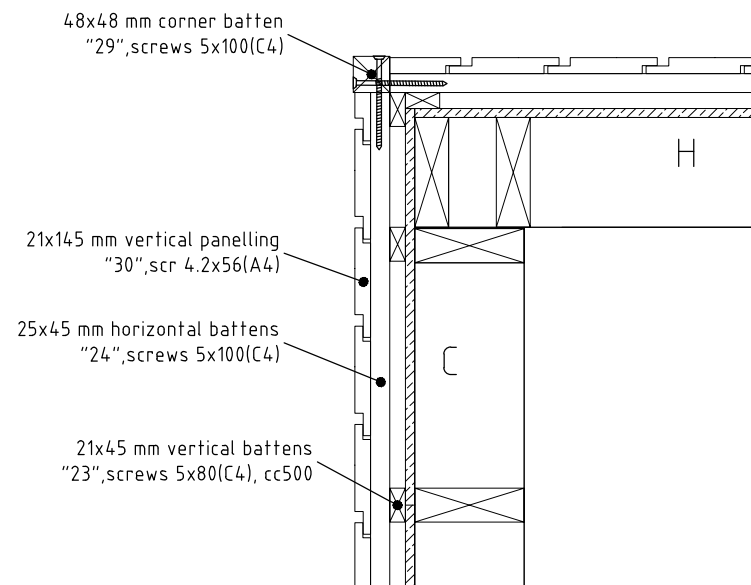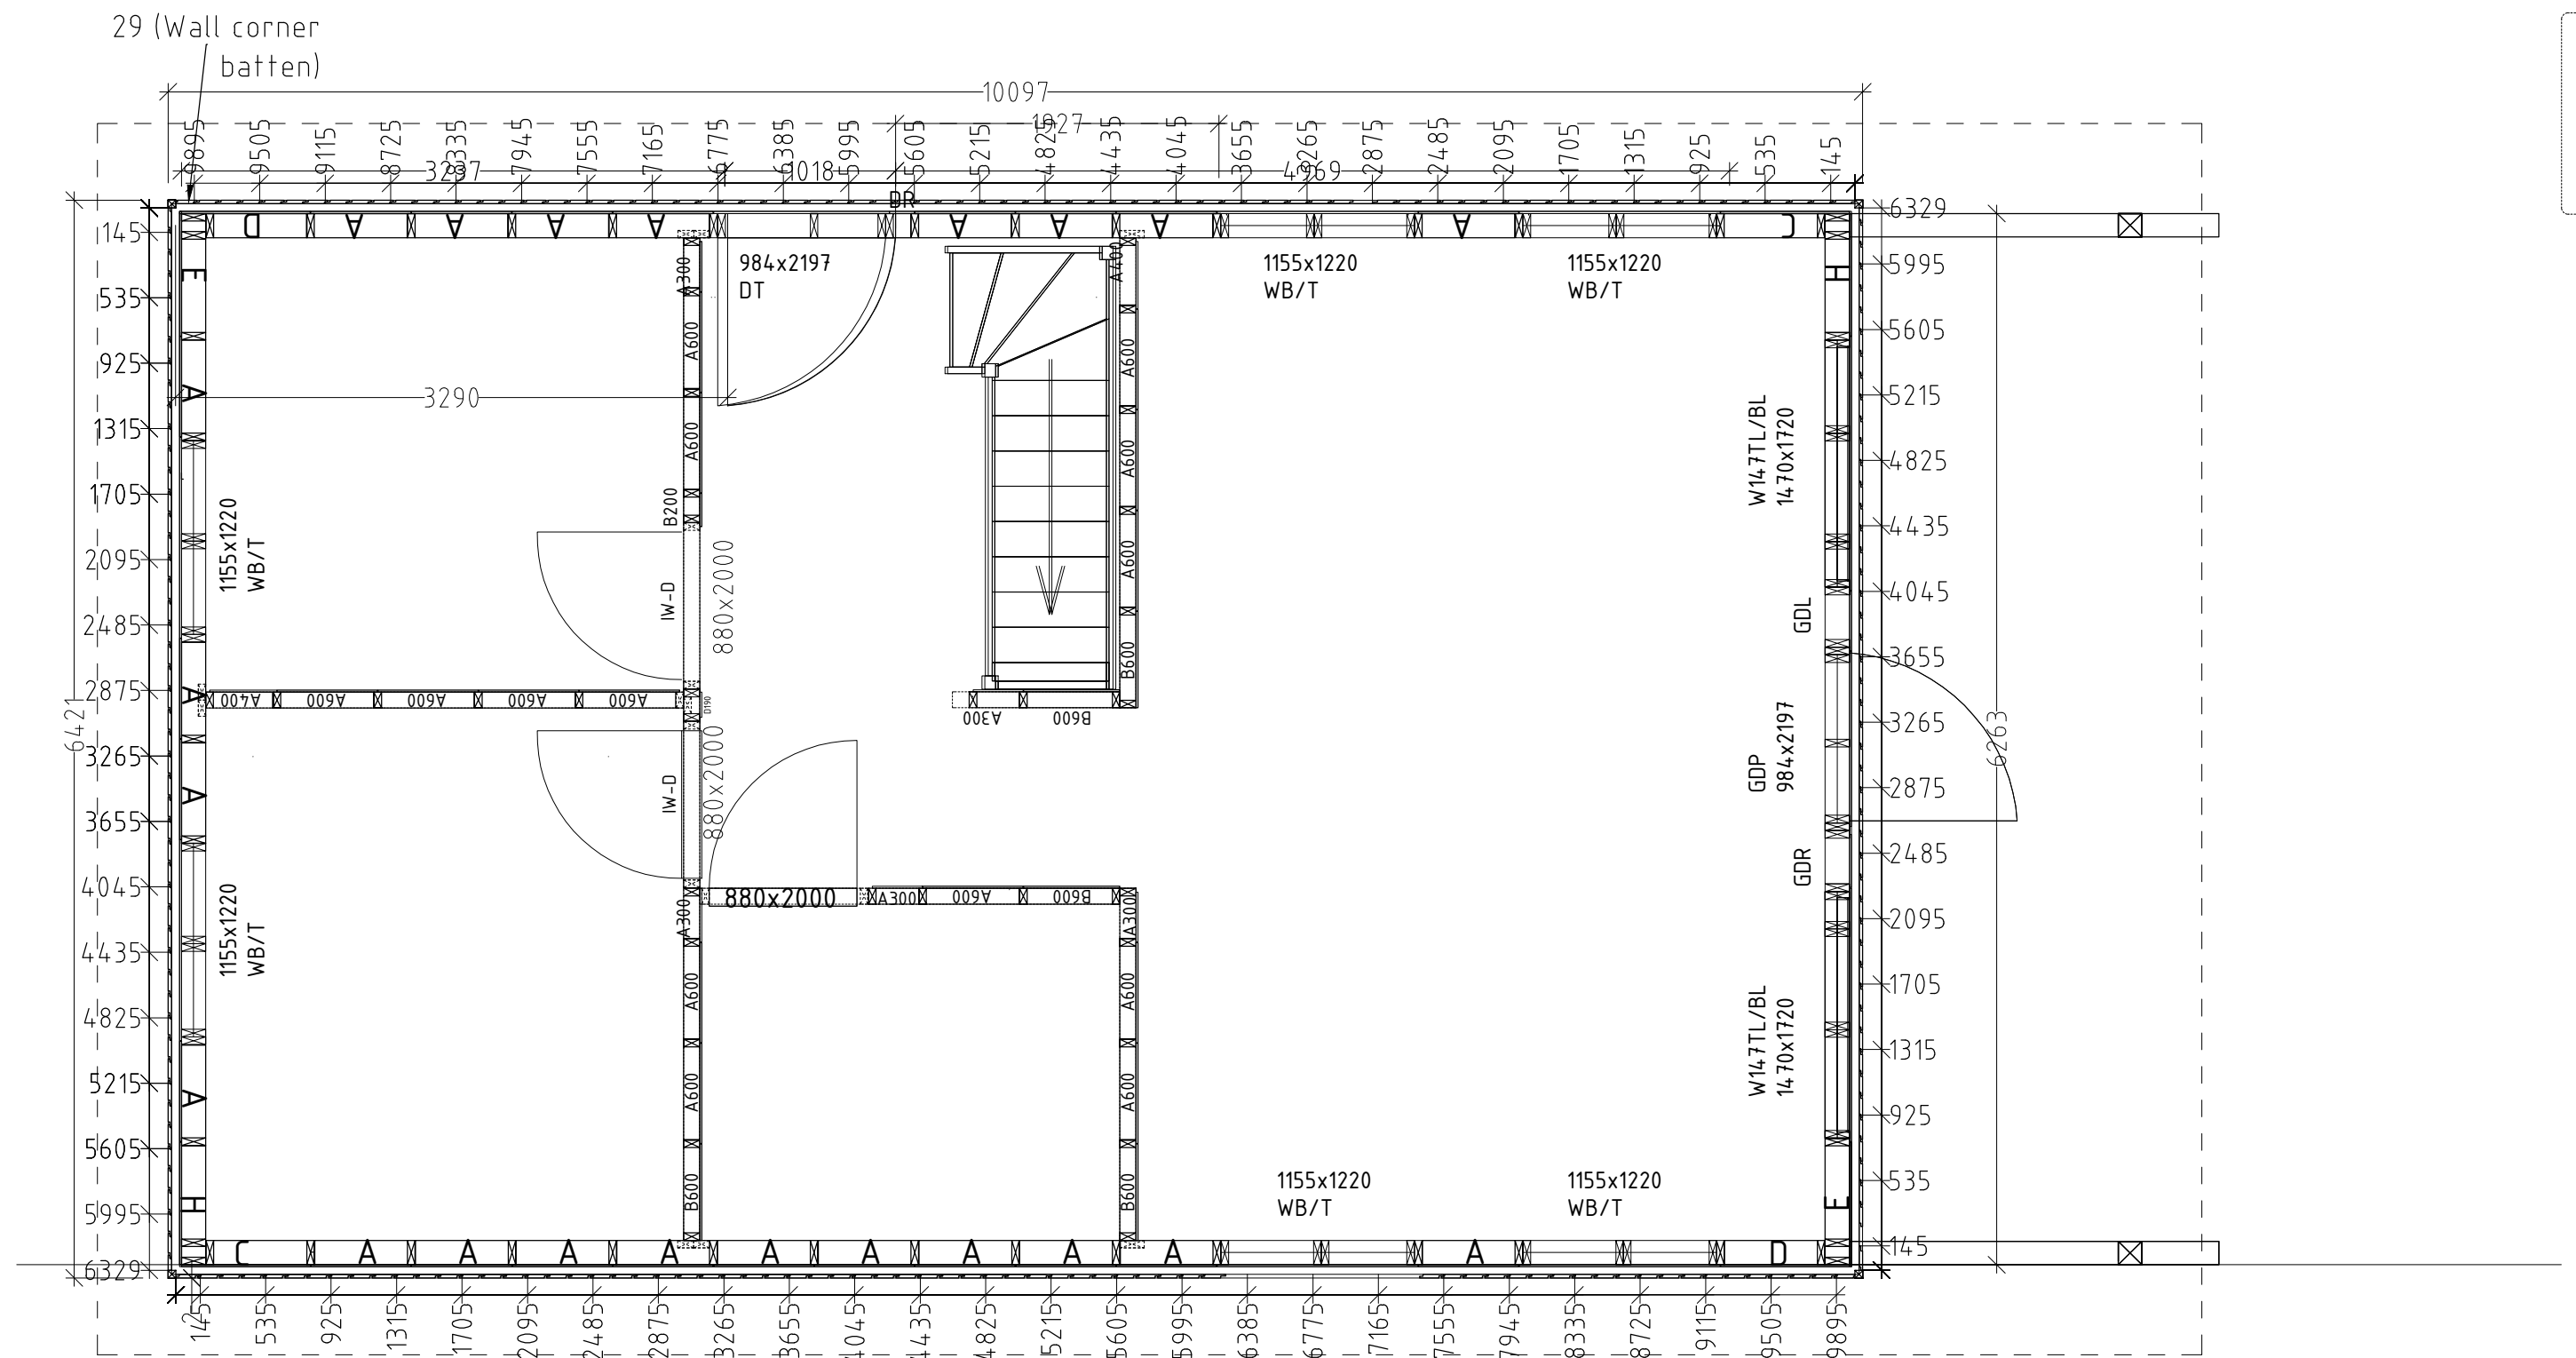

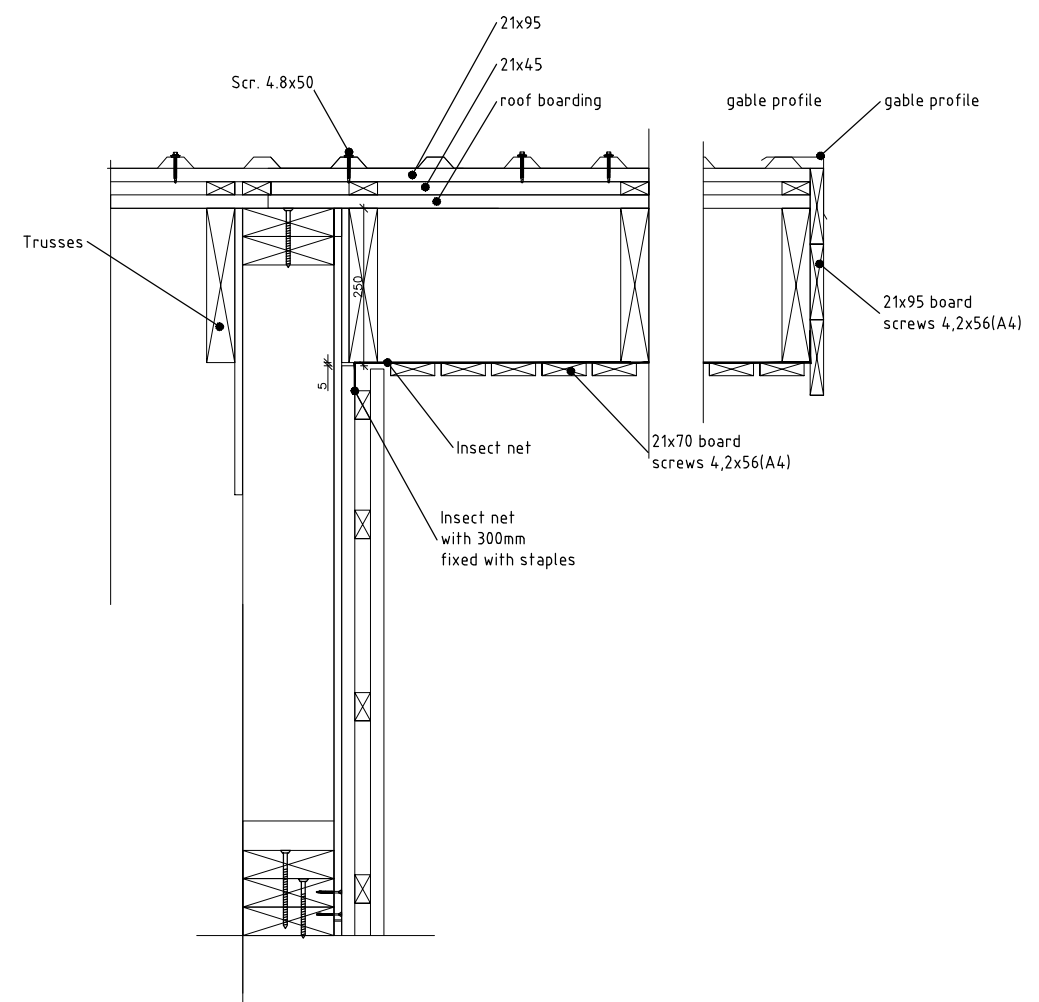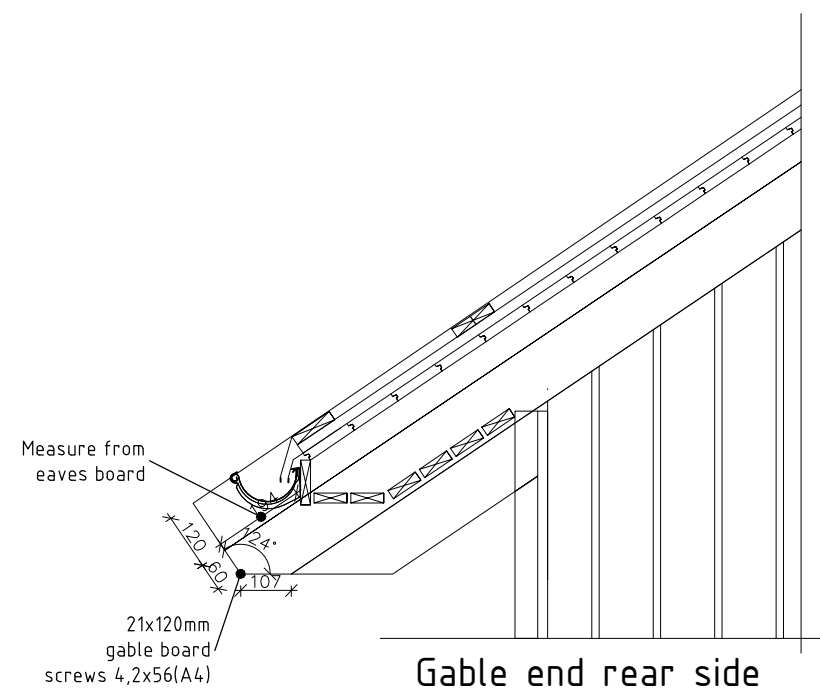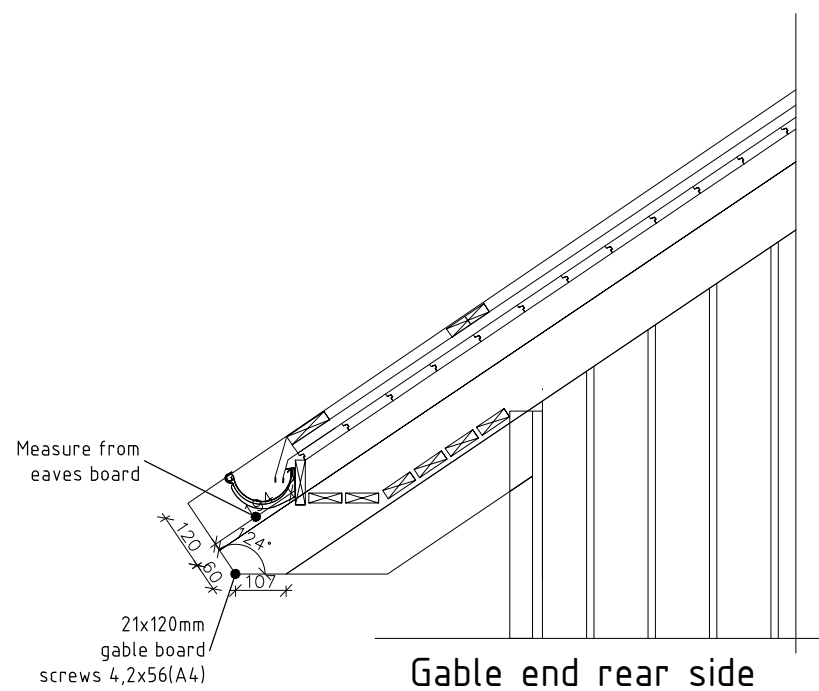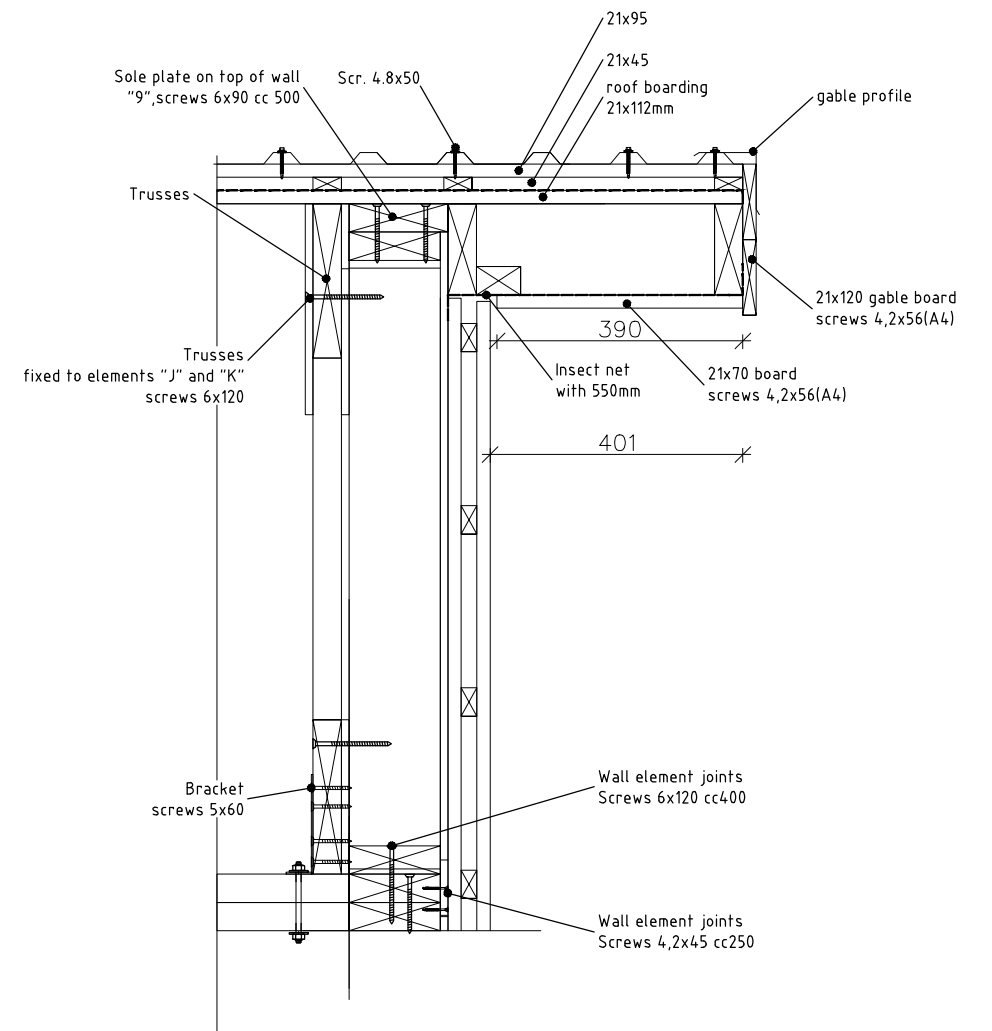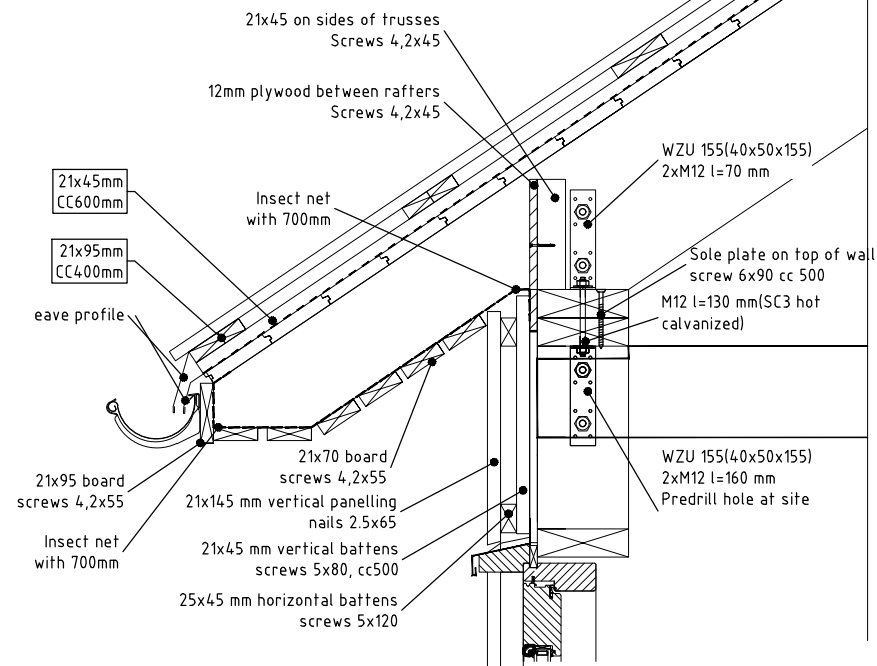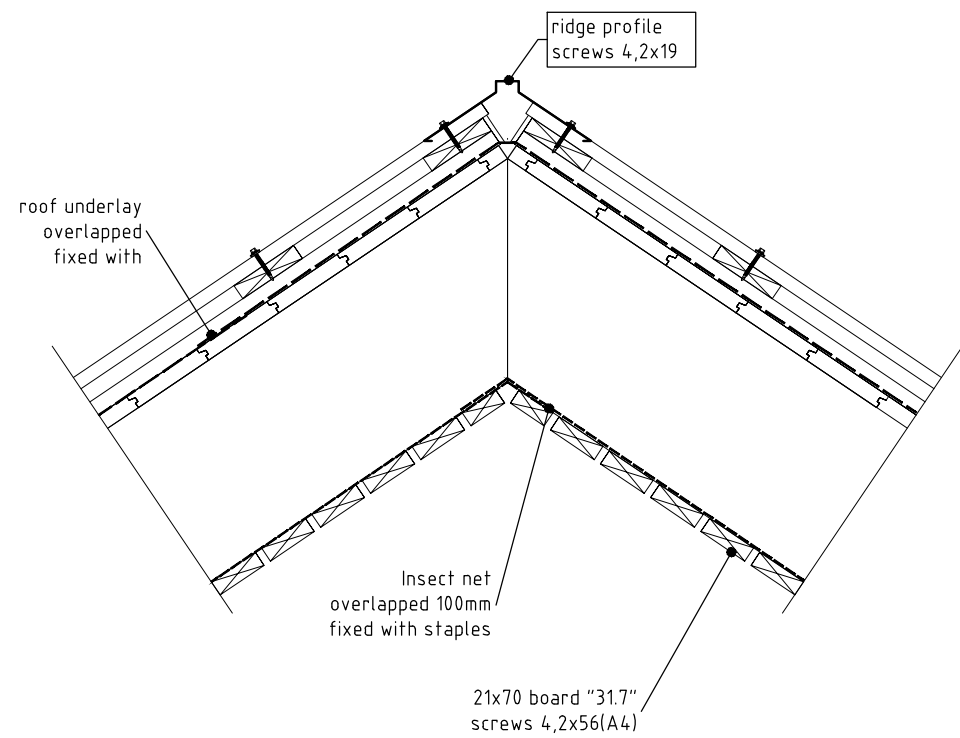


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Parapet steel profile installation order: corner profile and end profile, parapet profile.
3. Installation plans and fastening materials are recommended by factory and are not mandatory.
4. Factory is not responsible for this project statics and stability.

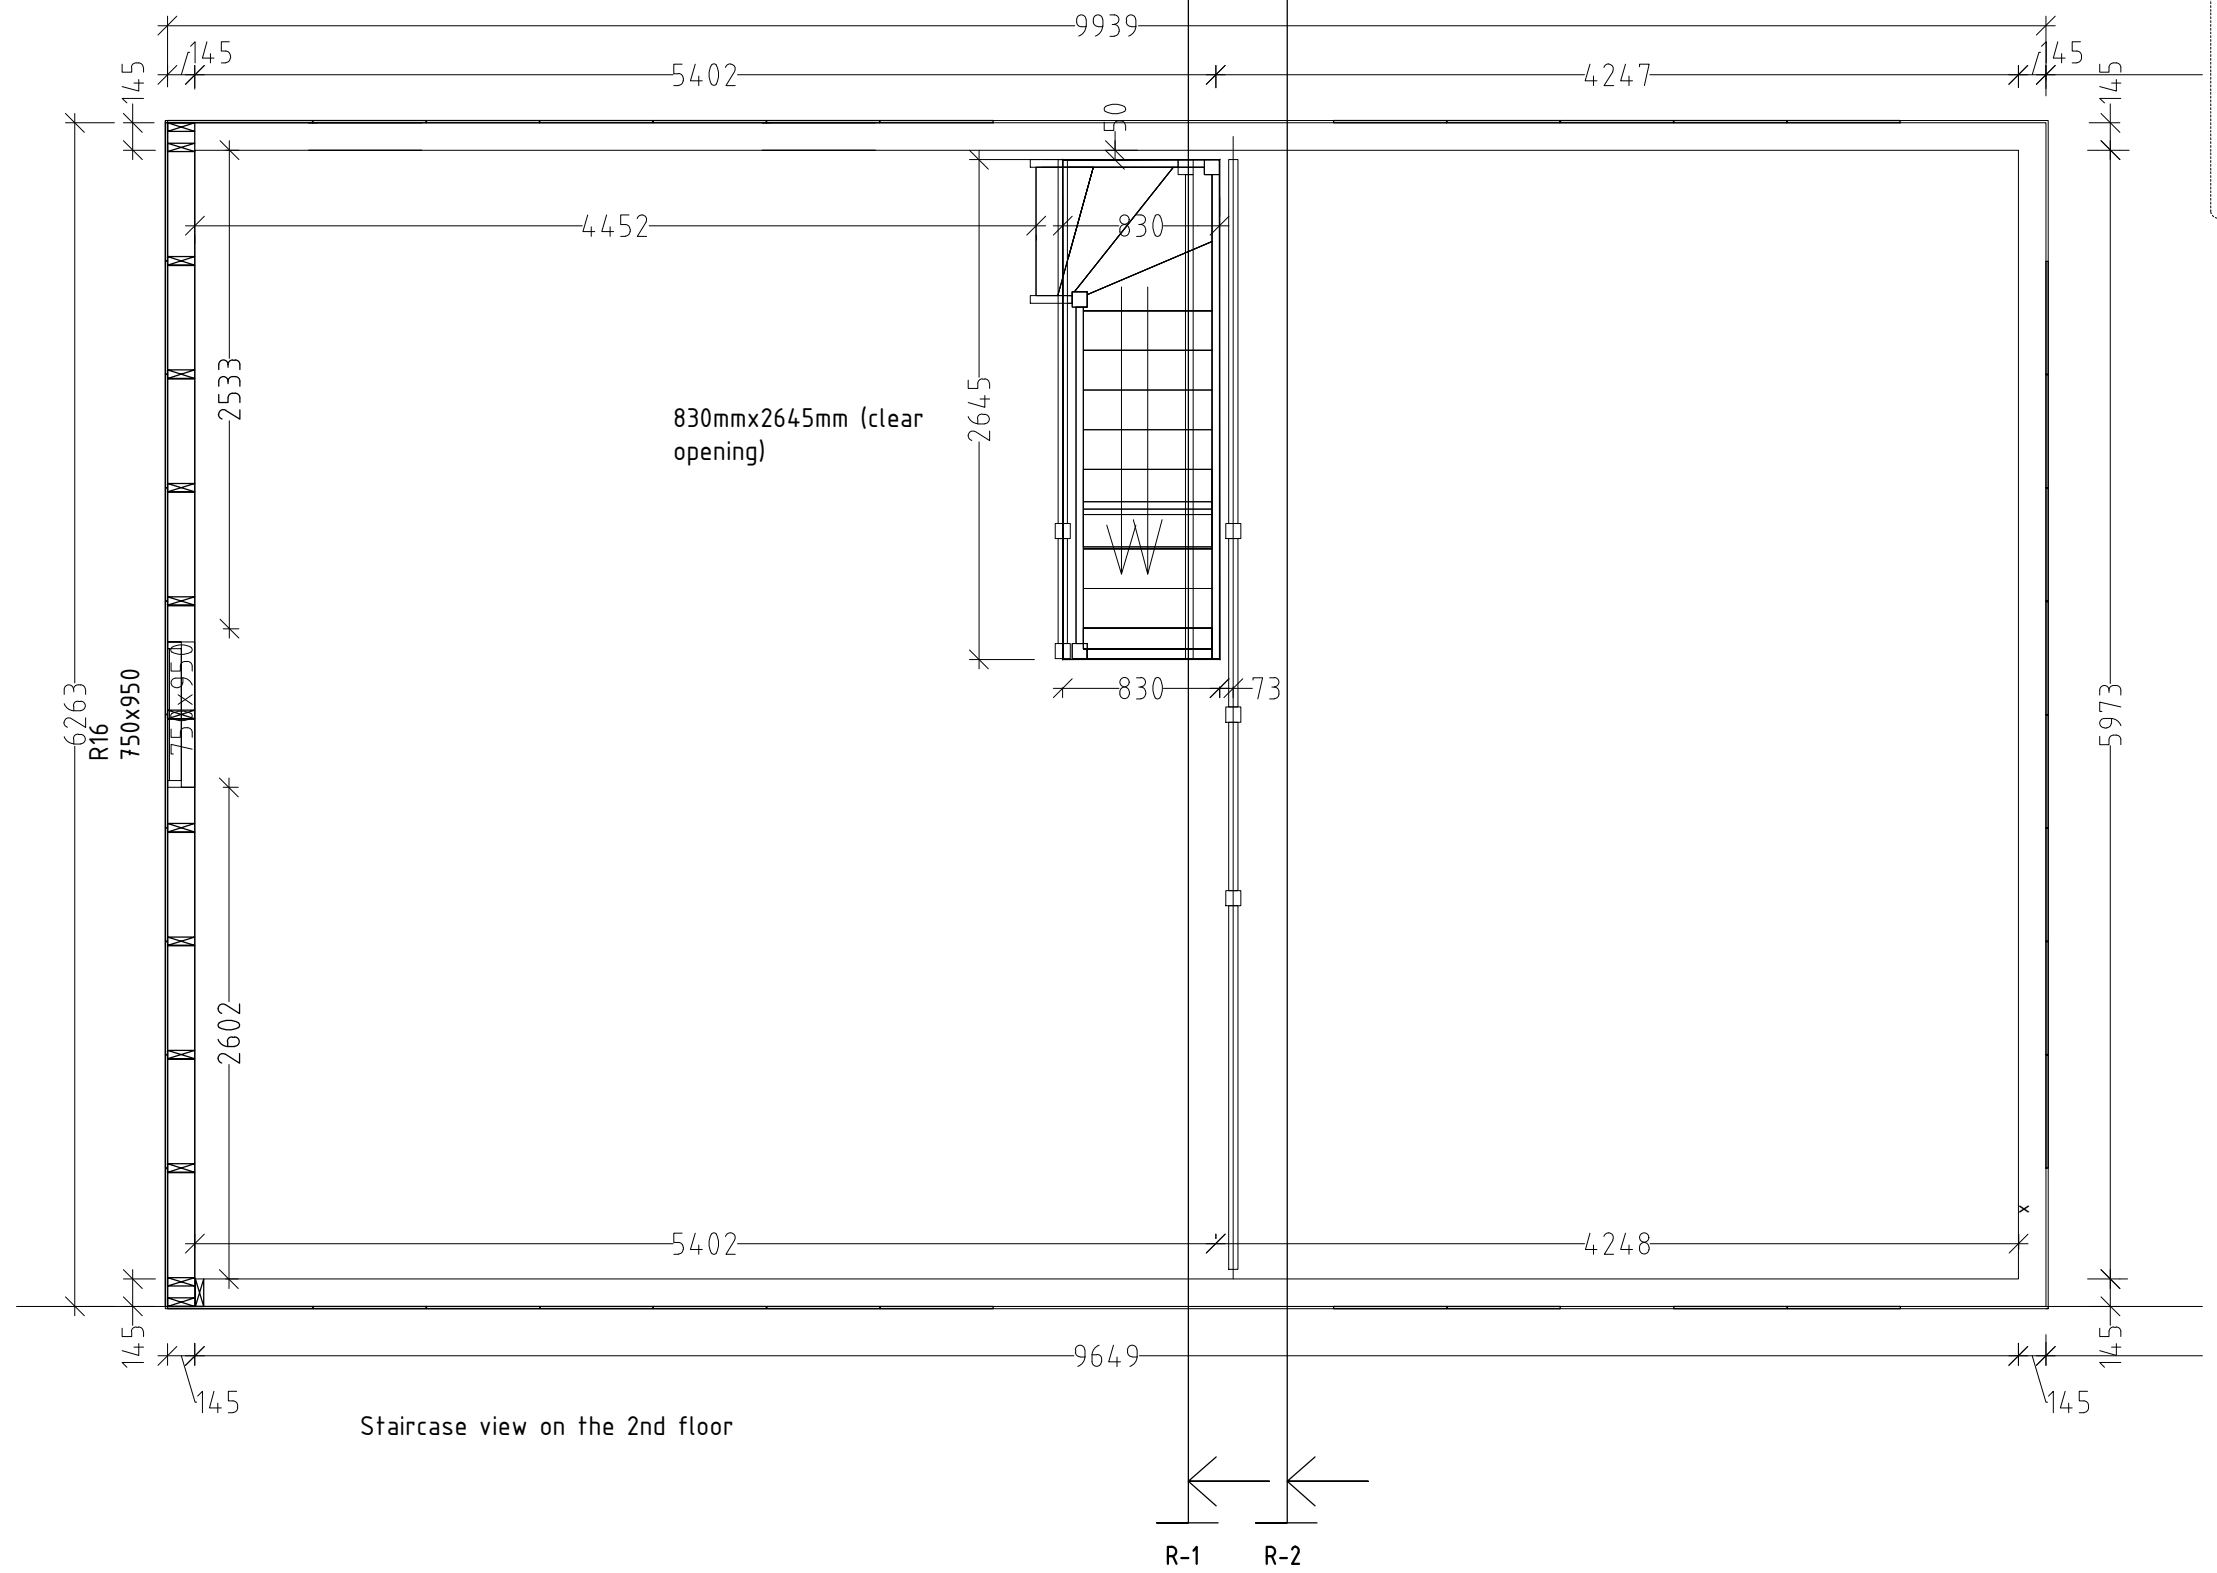



Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.


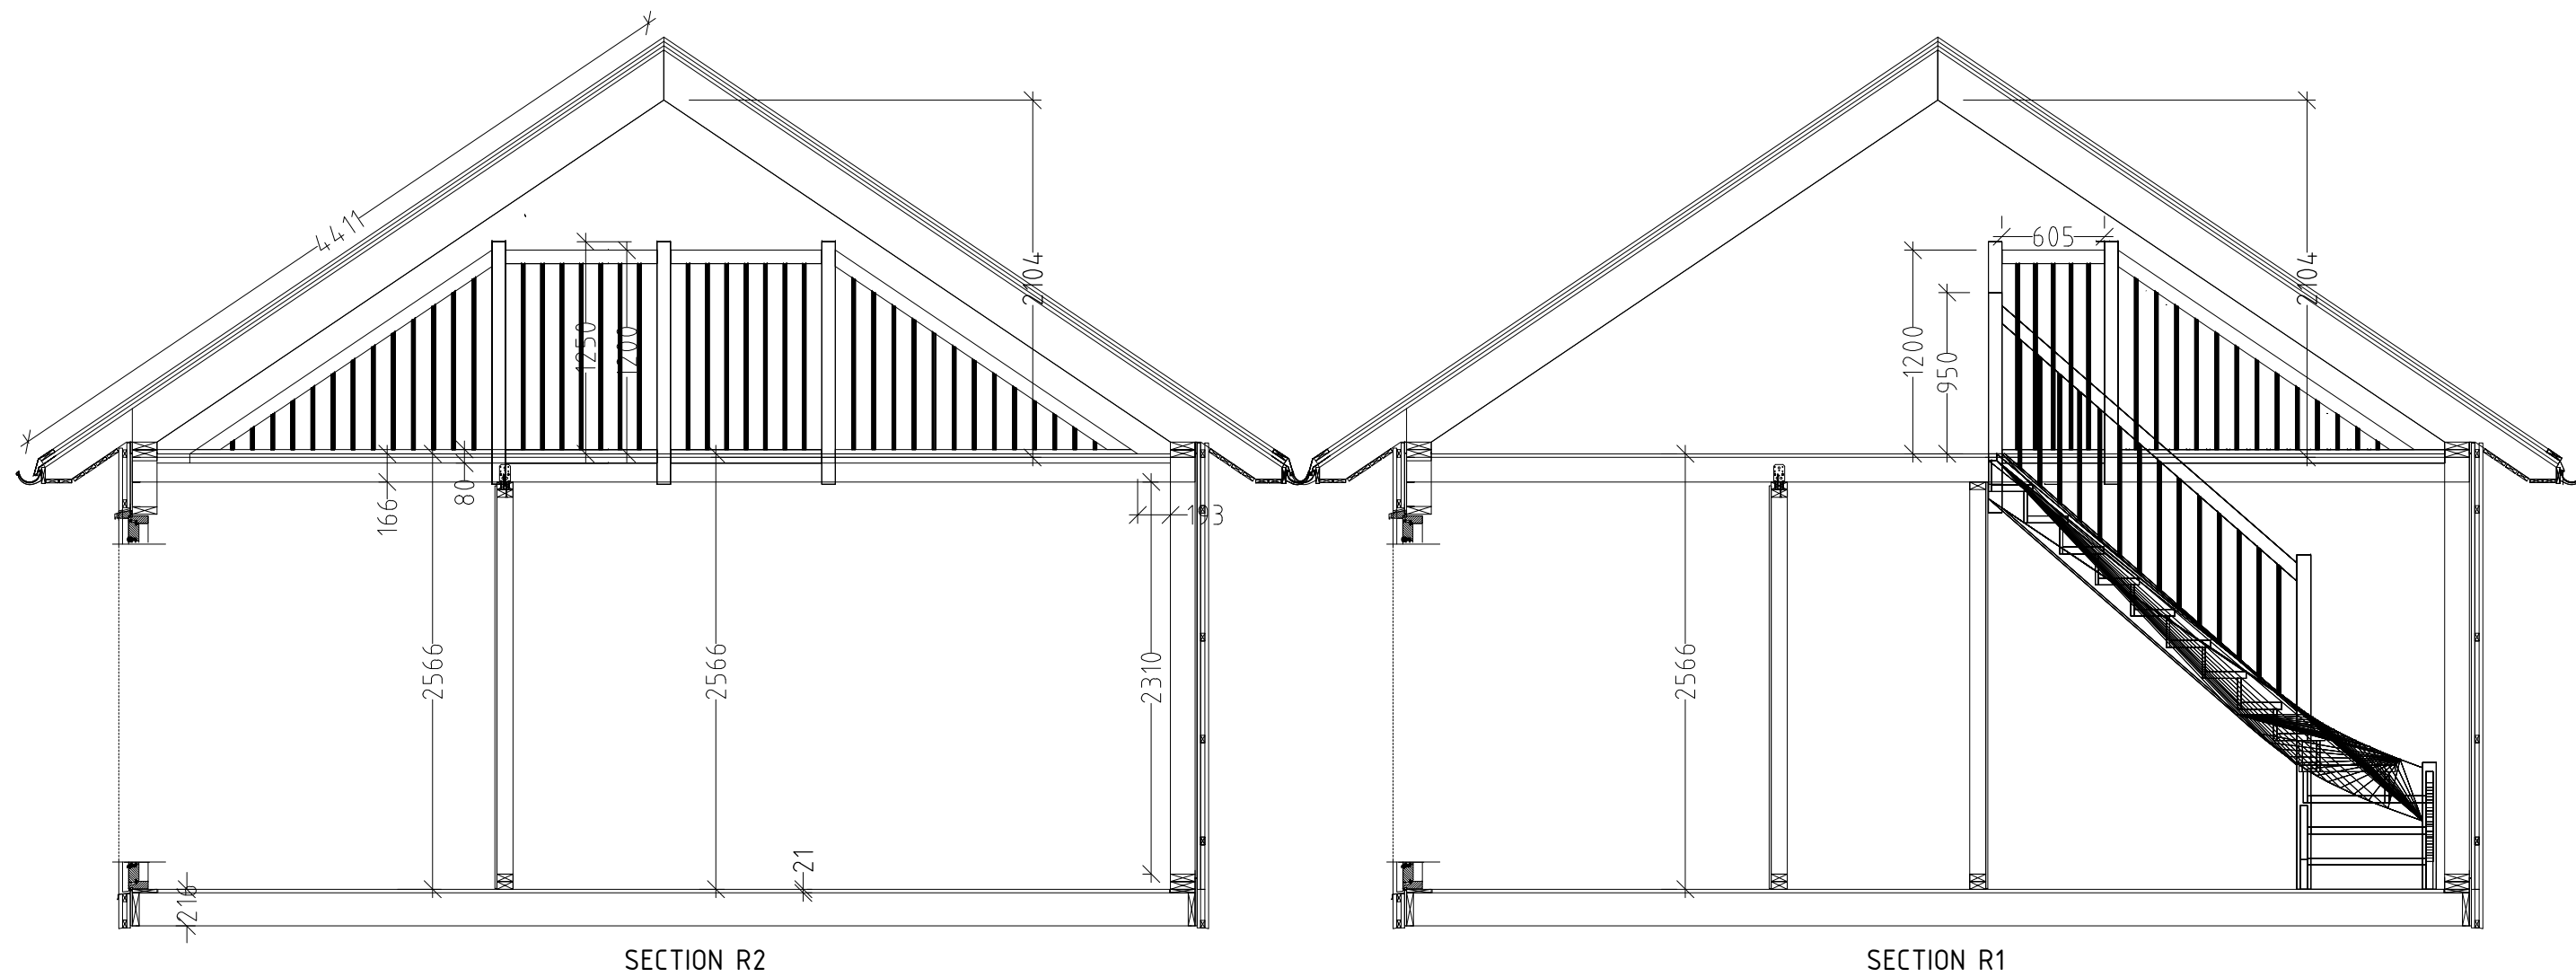


Notes:



1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

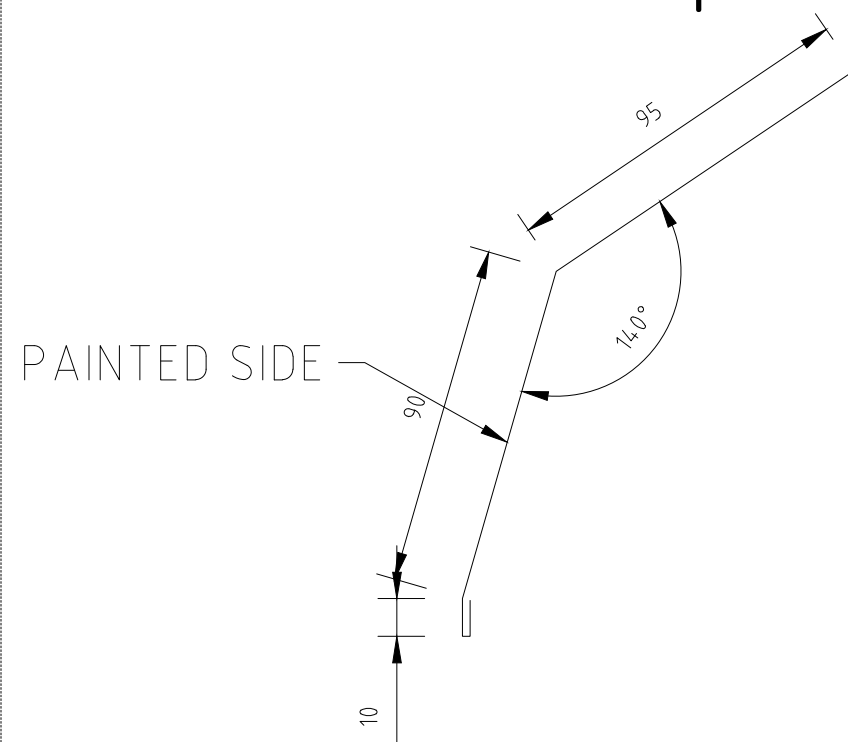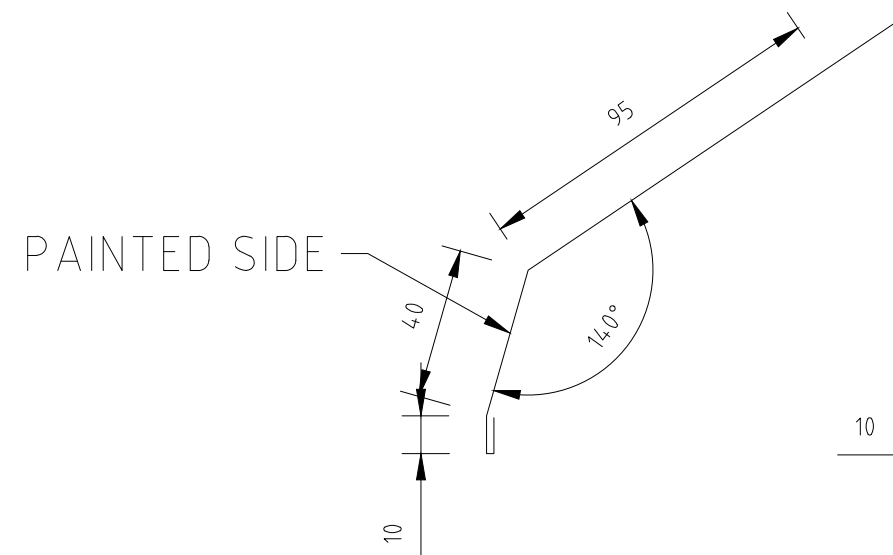Eave profile
on top of eaveEave profile
below of eave

Ridge profile

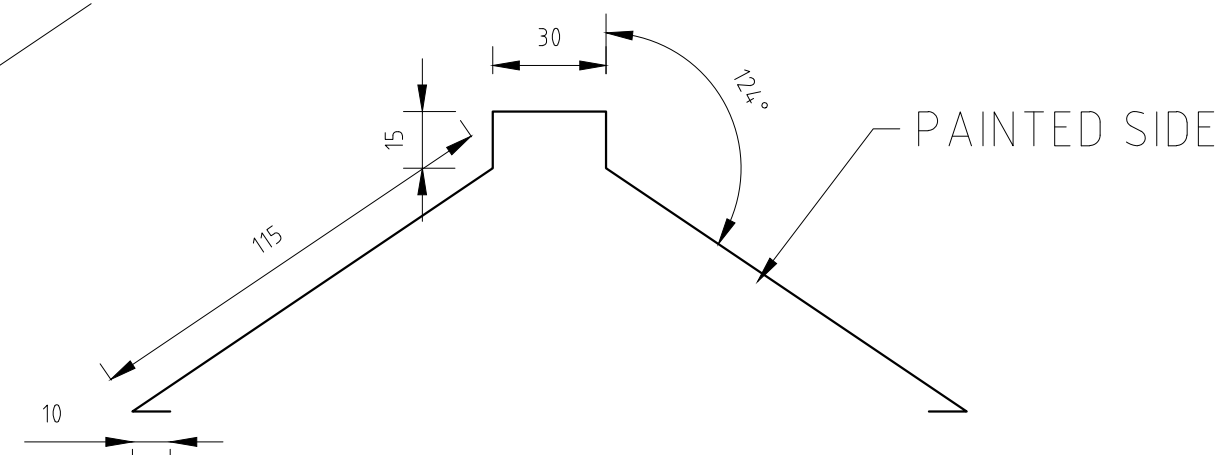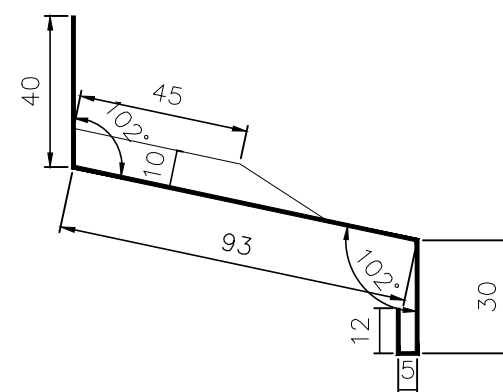
Door&window top sill
profile

Gable profile

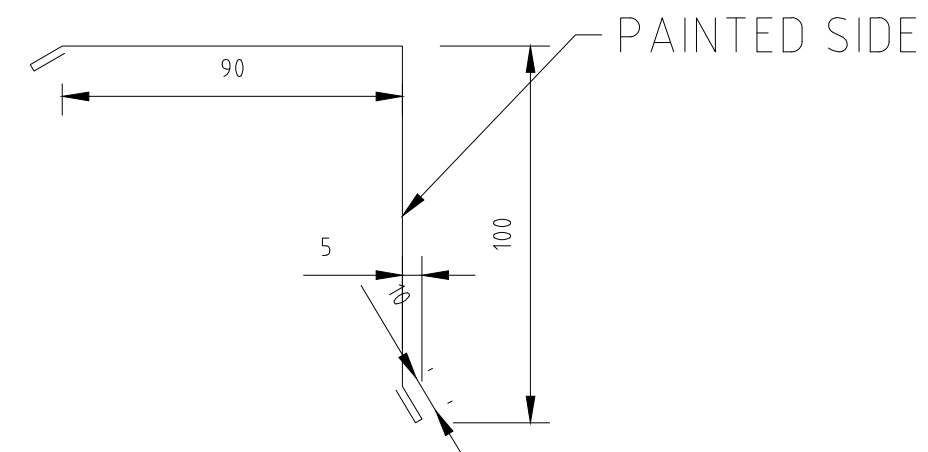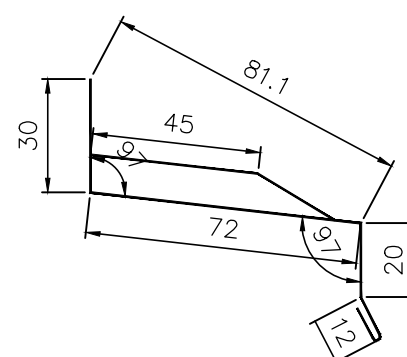Door&window low sill
profile


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

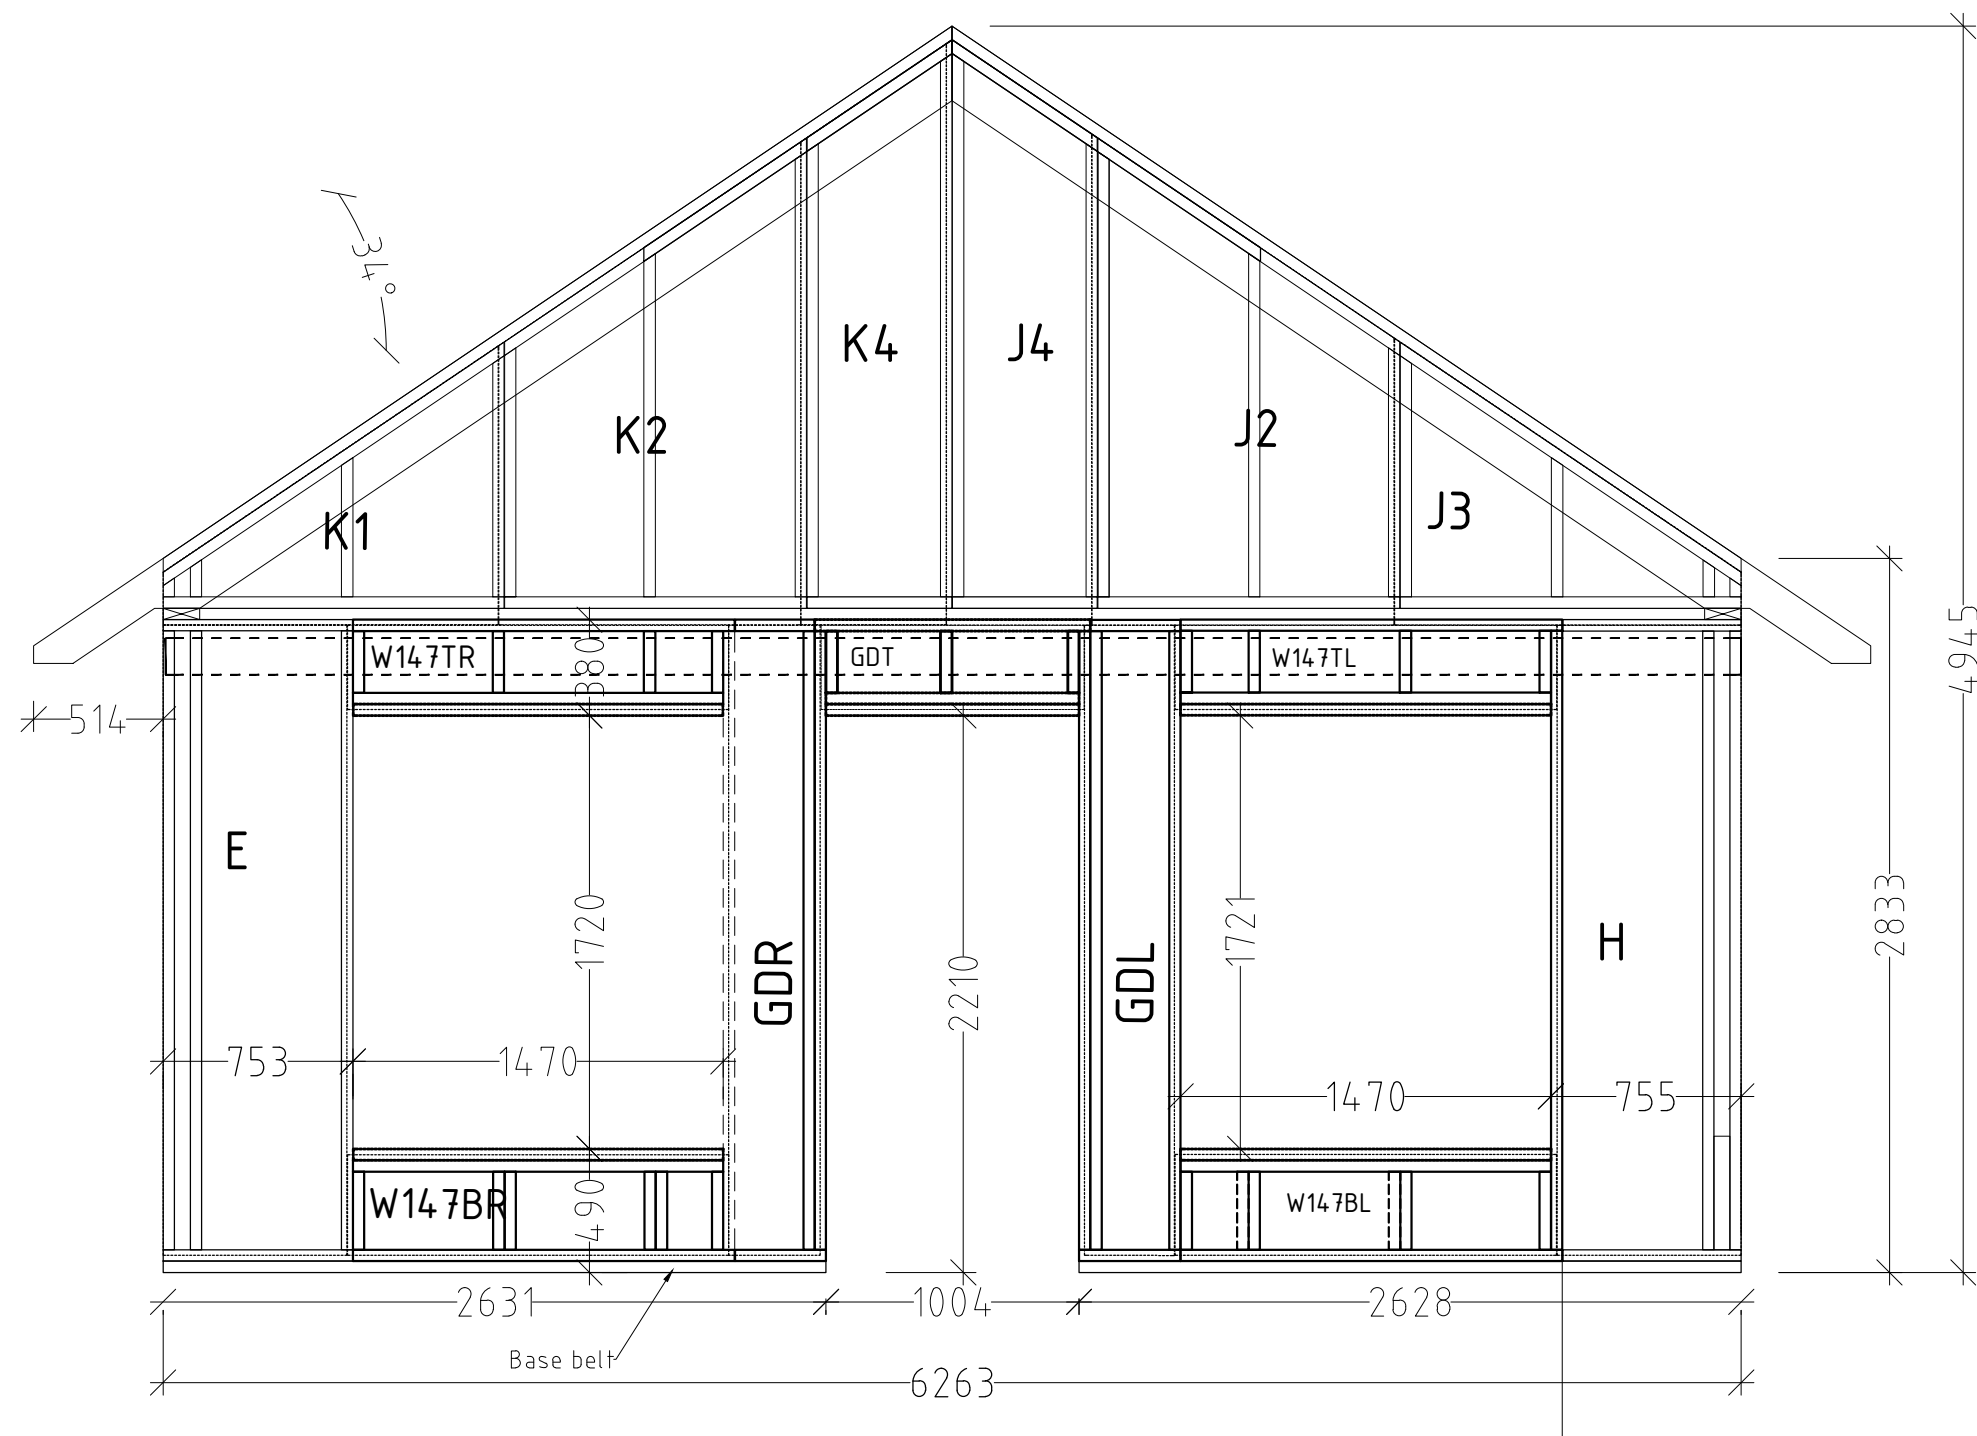



Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

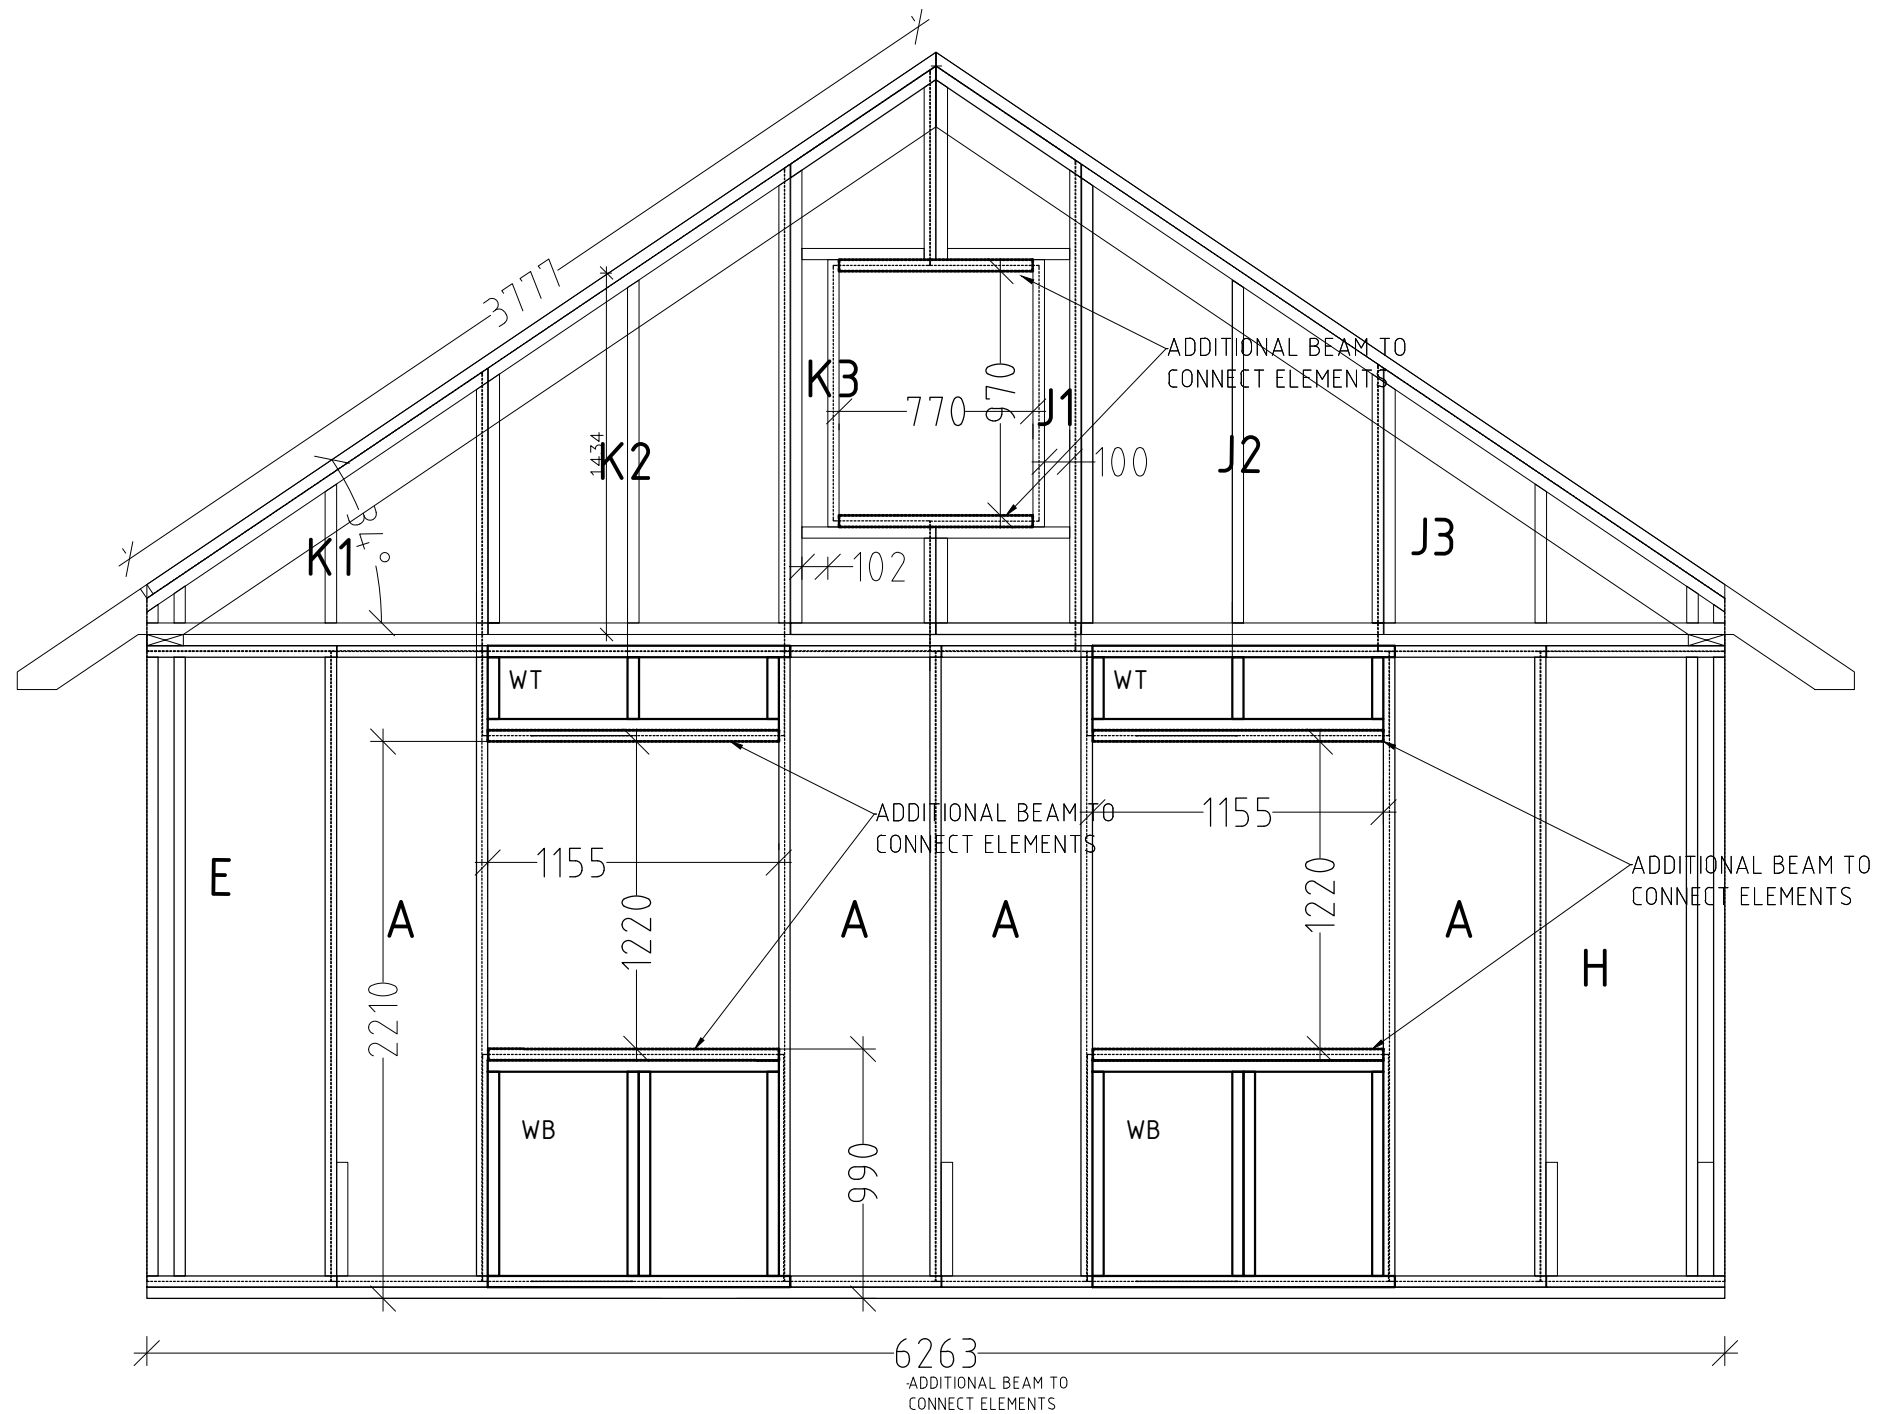

Notes:


1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.


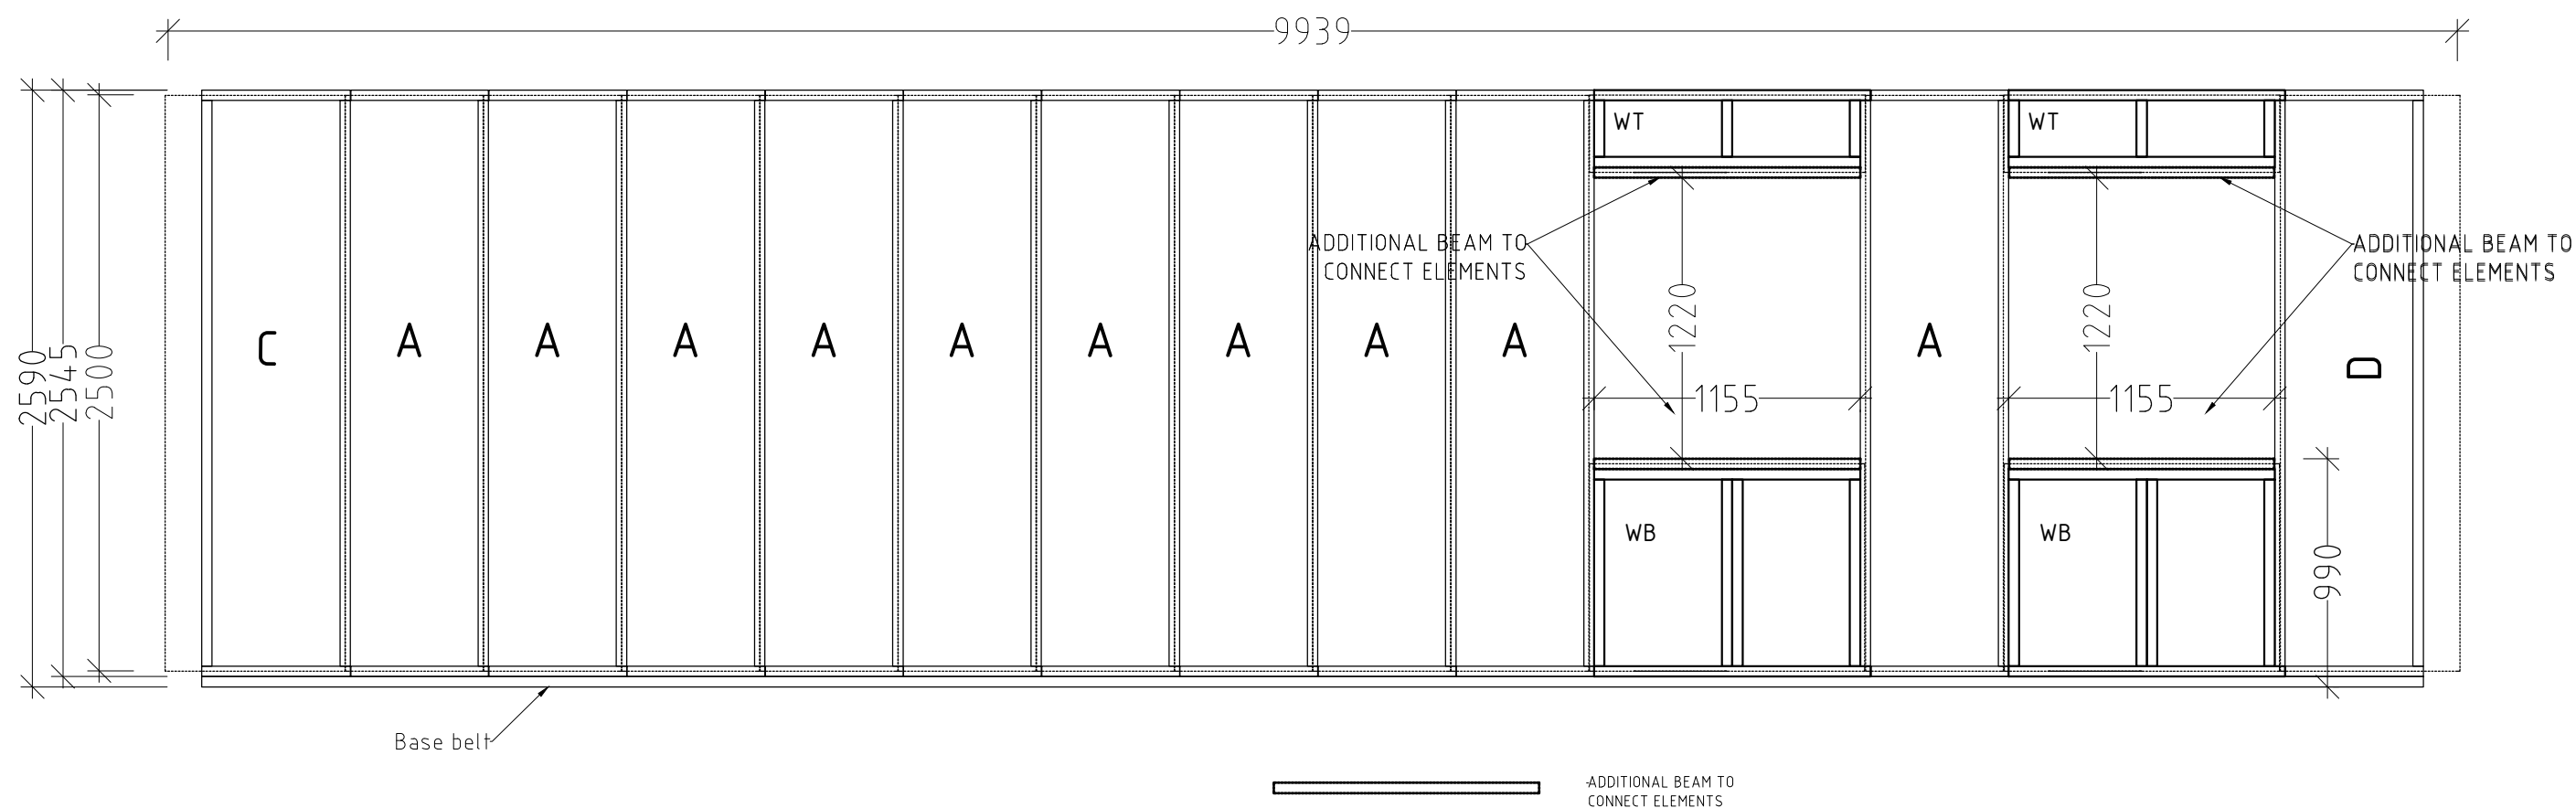
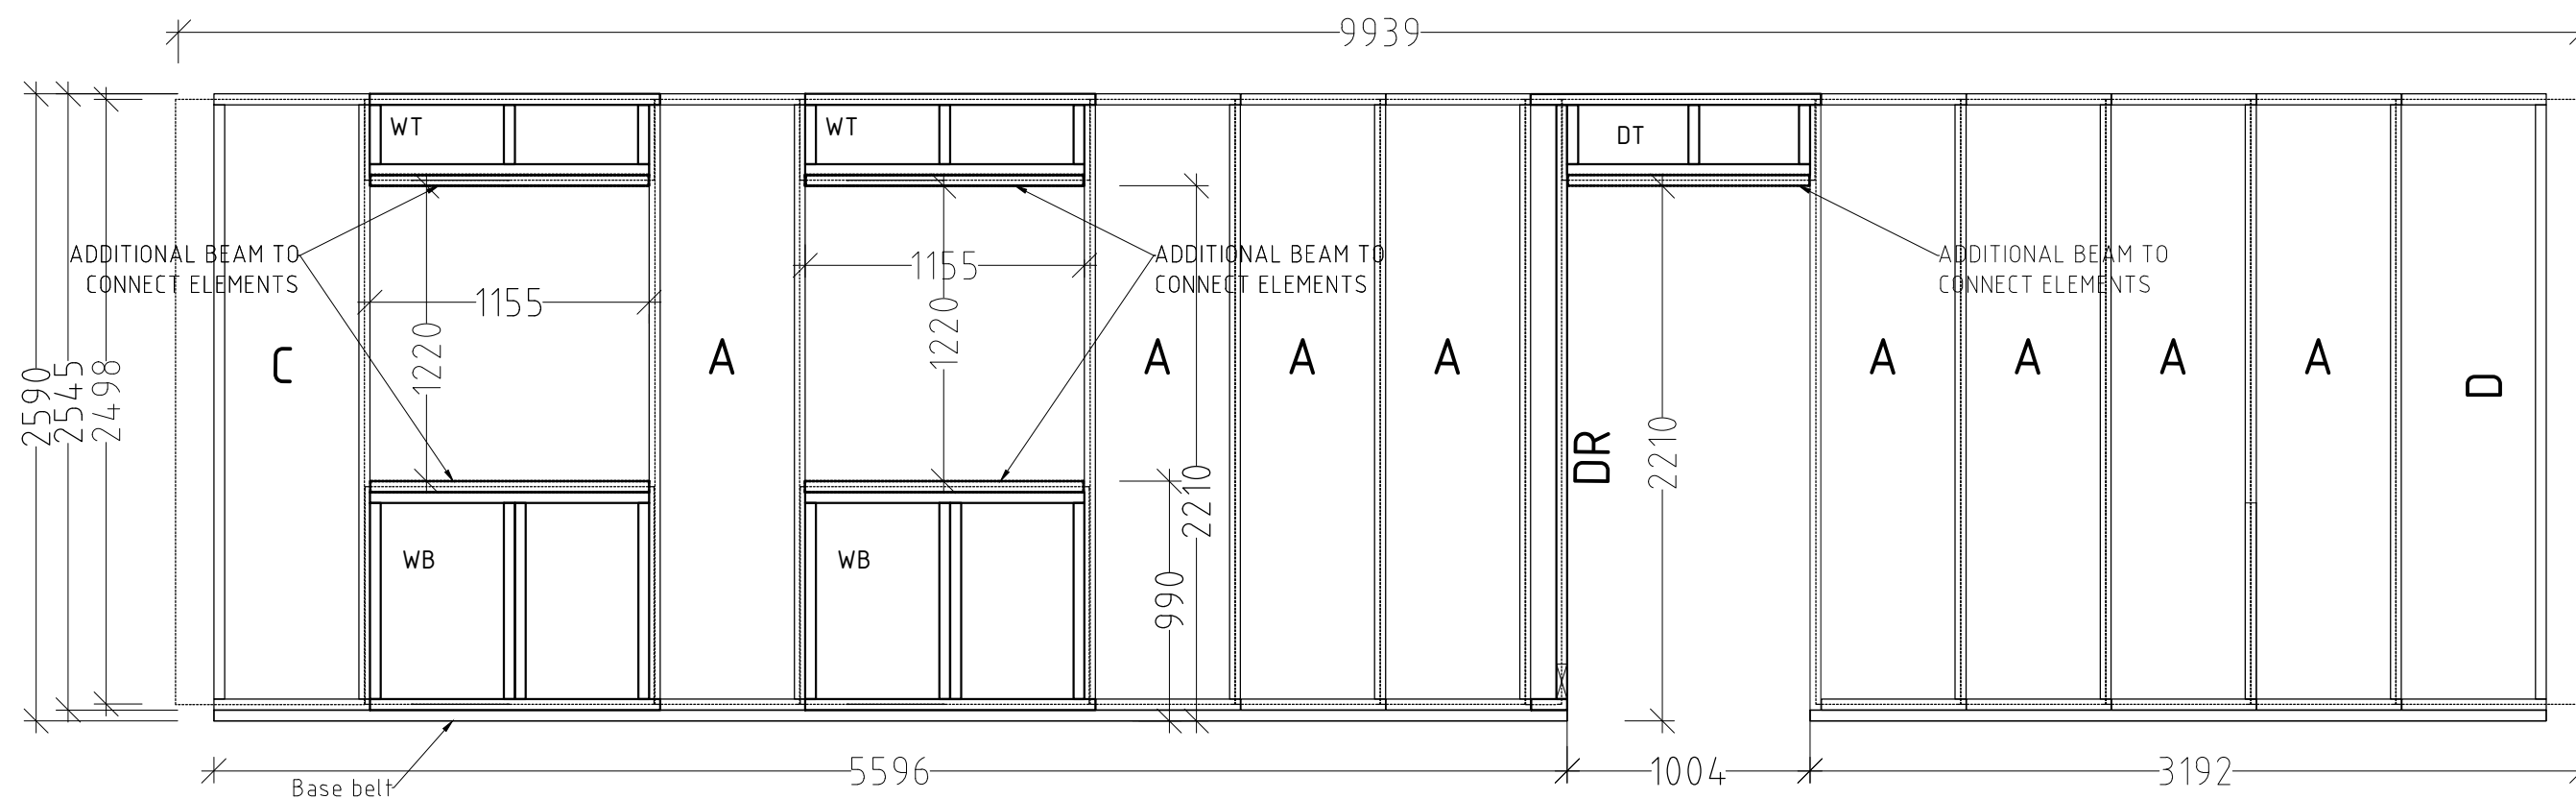


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

Roof metal cover principal connection scheme:
Scr. 4.8x50
I: Every second high point cc.400 mm
J: Every high point cc200
K: Every high pint cc400

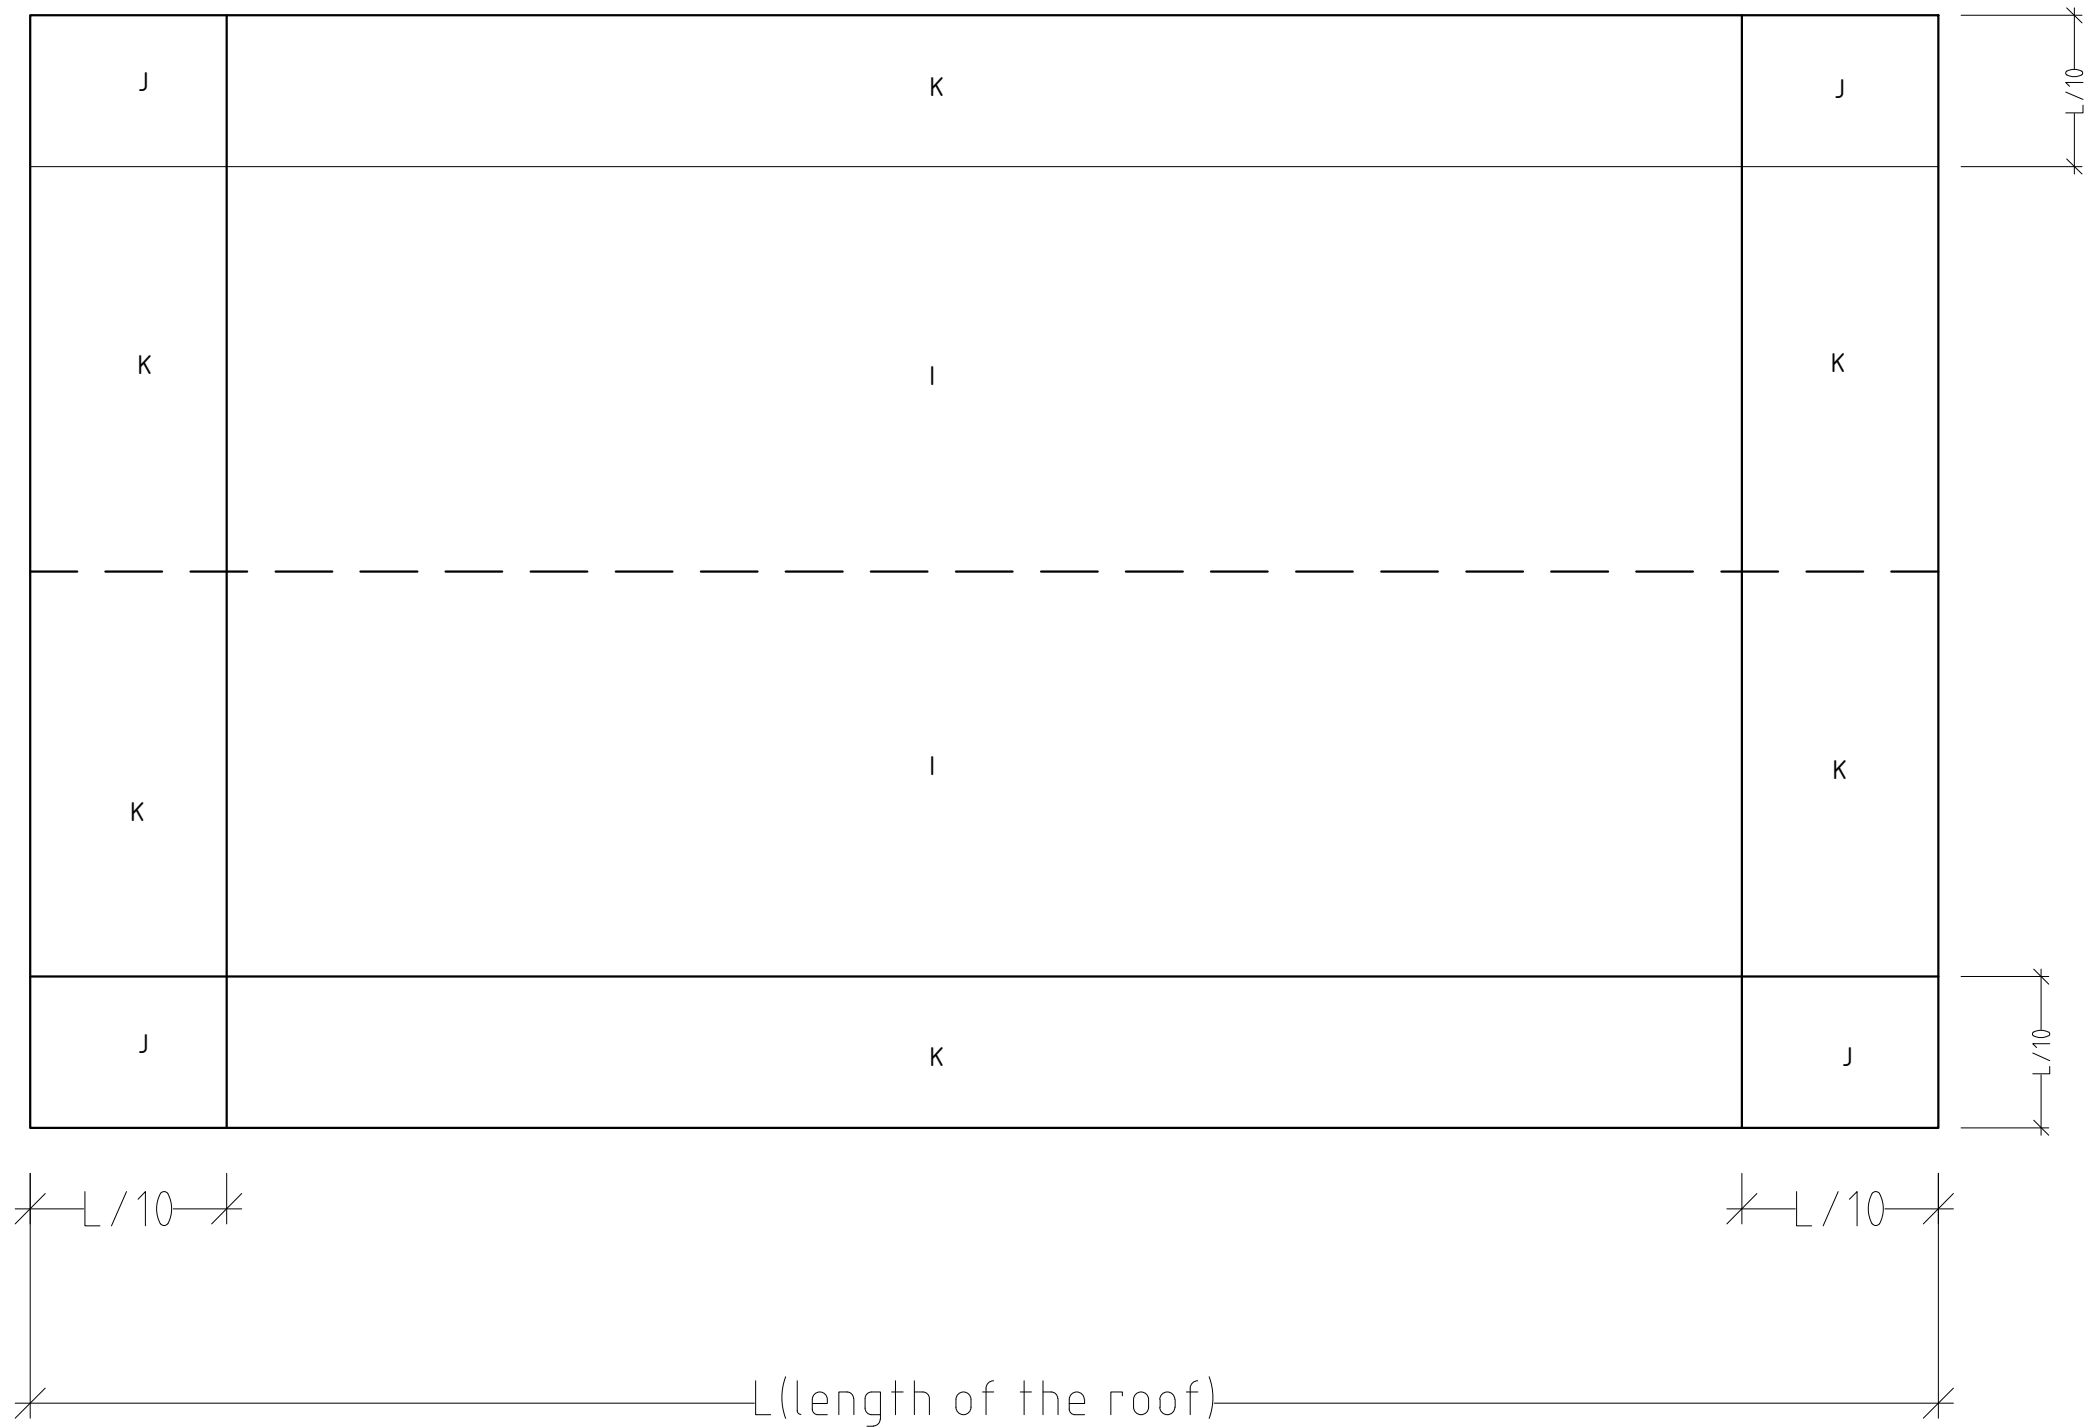


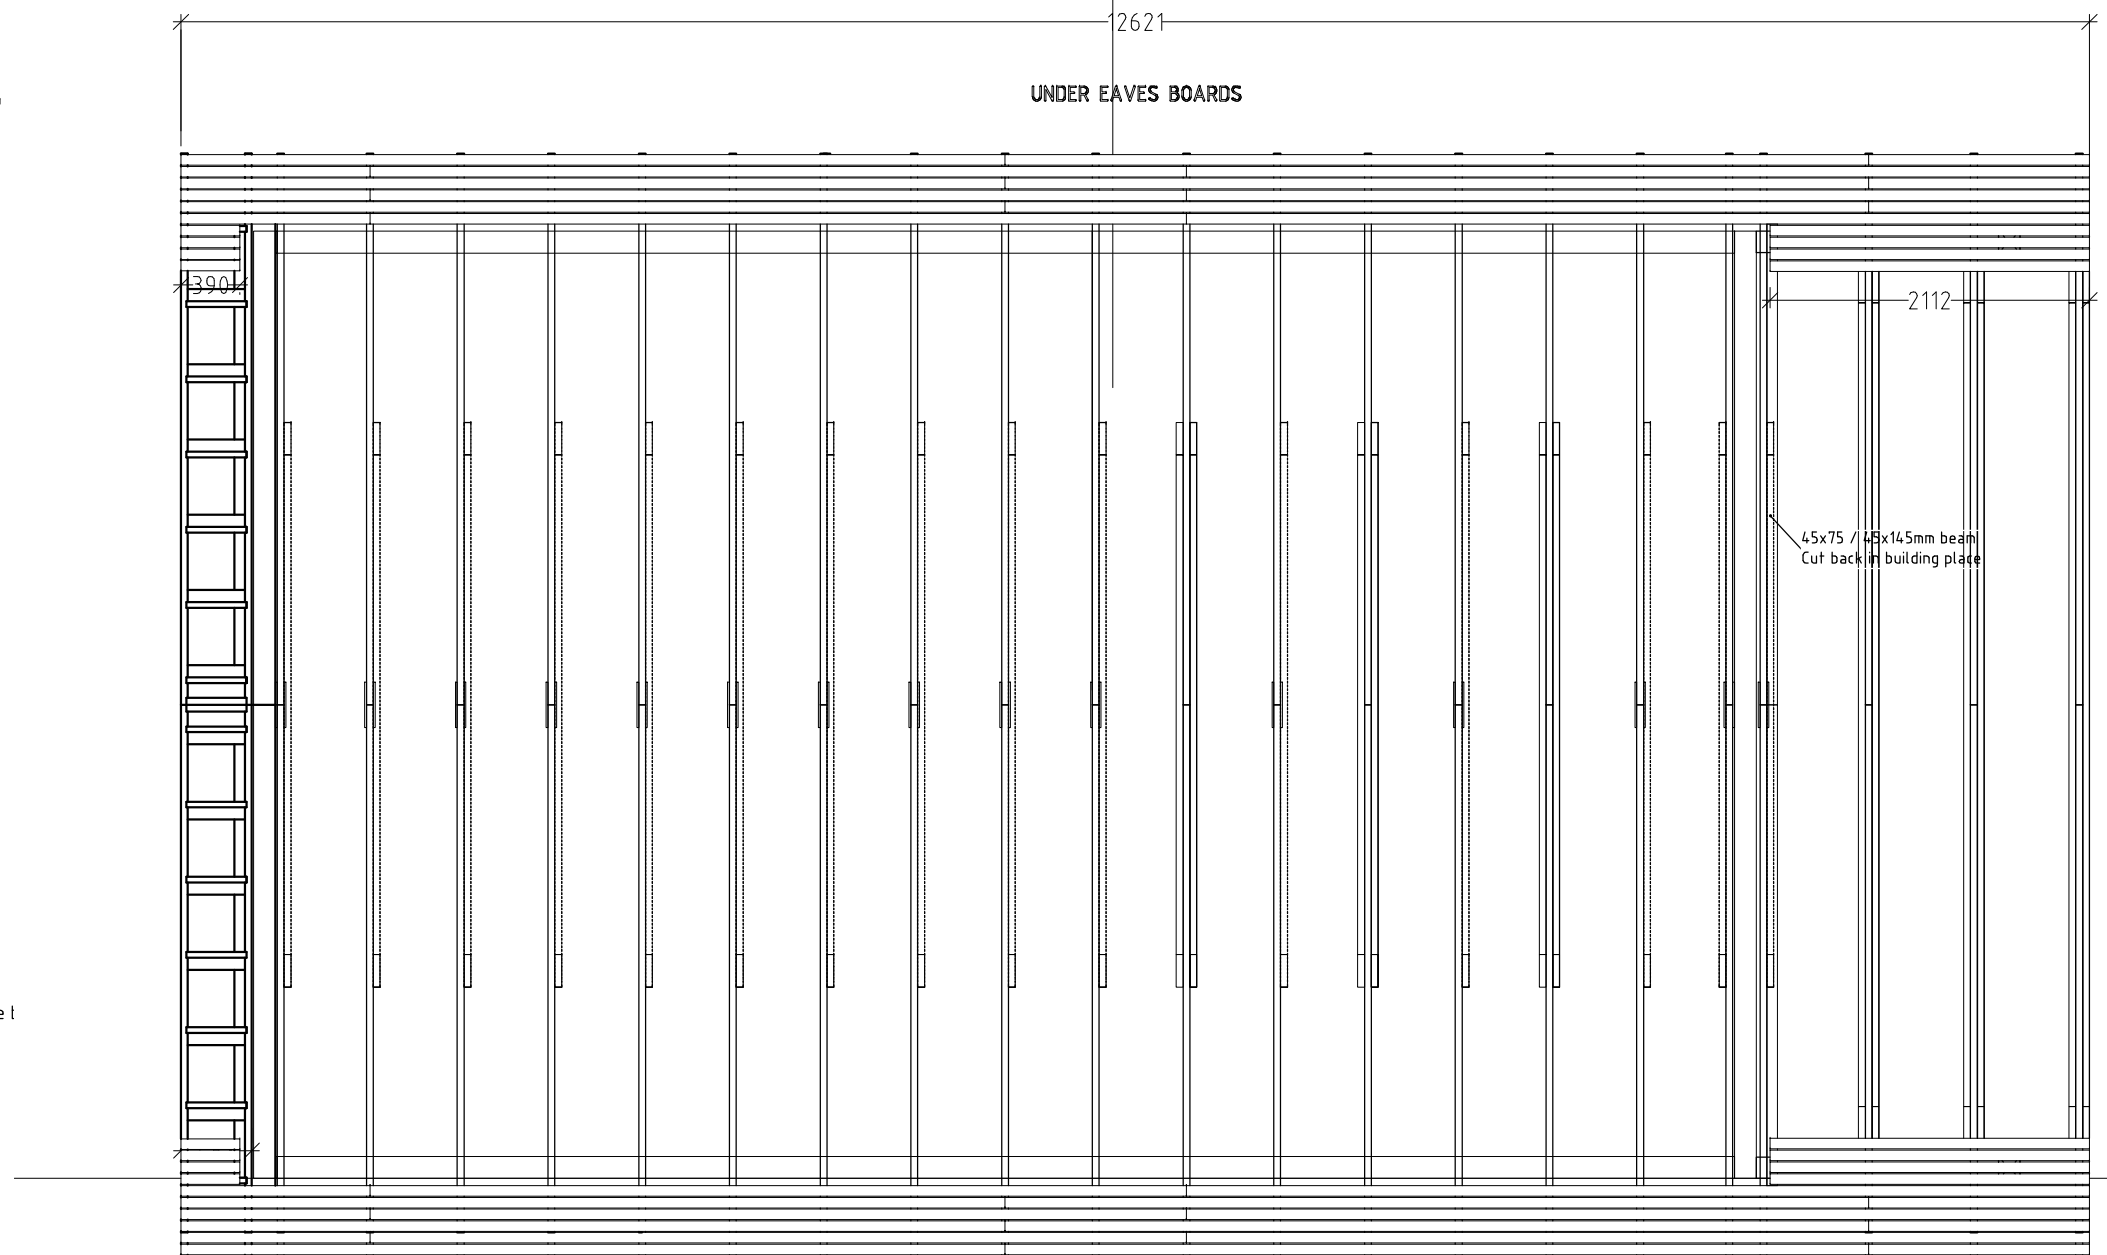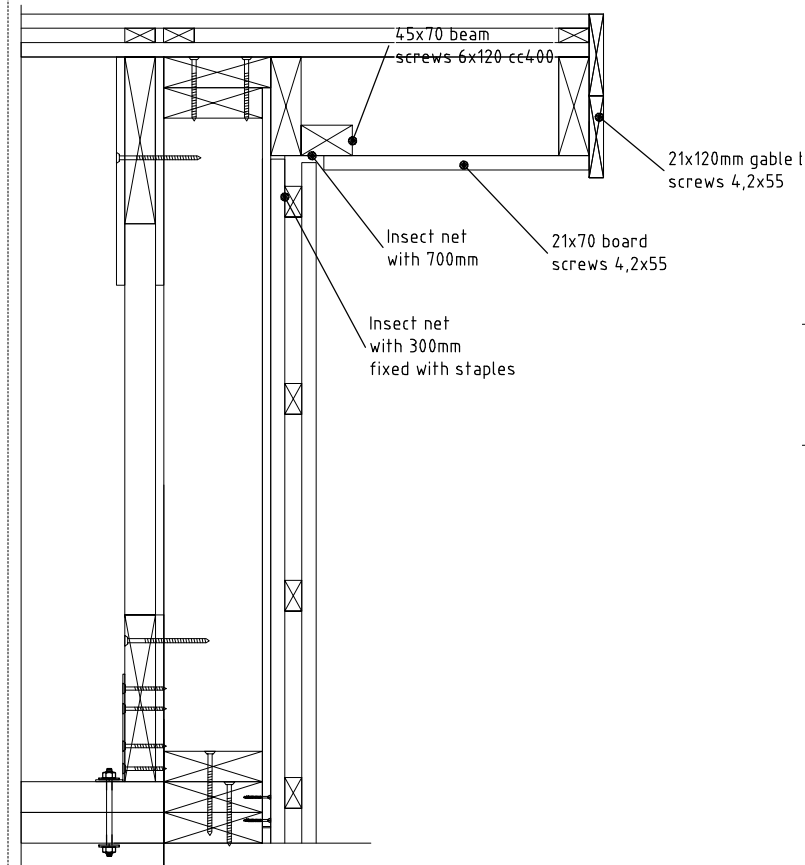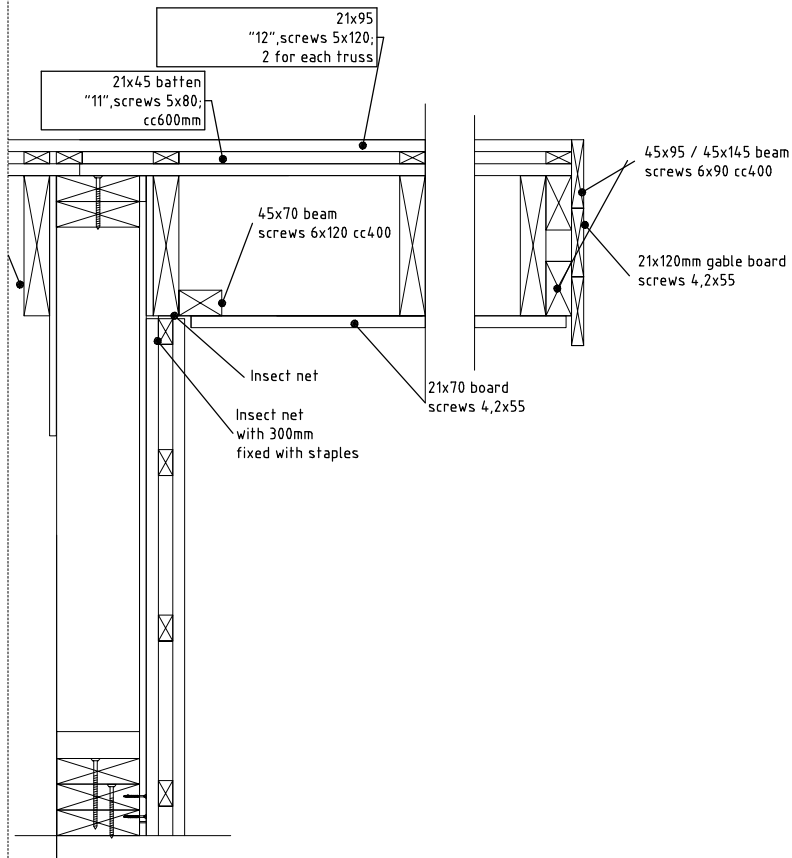

Measurements 390mm and 2112 mm are in exact measure.
All other board material is sent in meter amount
Board connection must be dispersed.
Board connection on the same bearing support is allowed over 2 boards


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

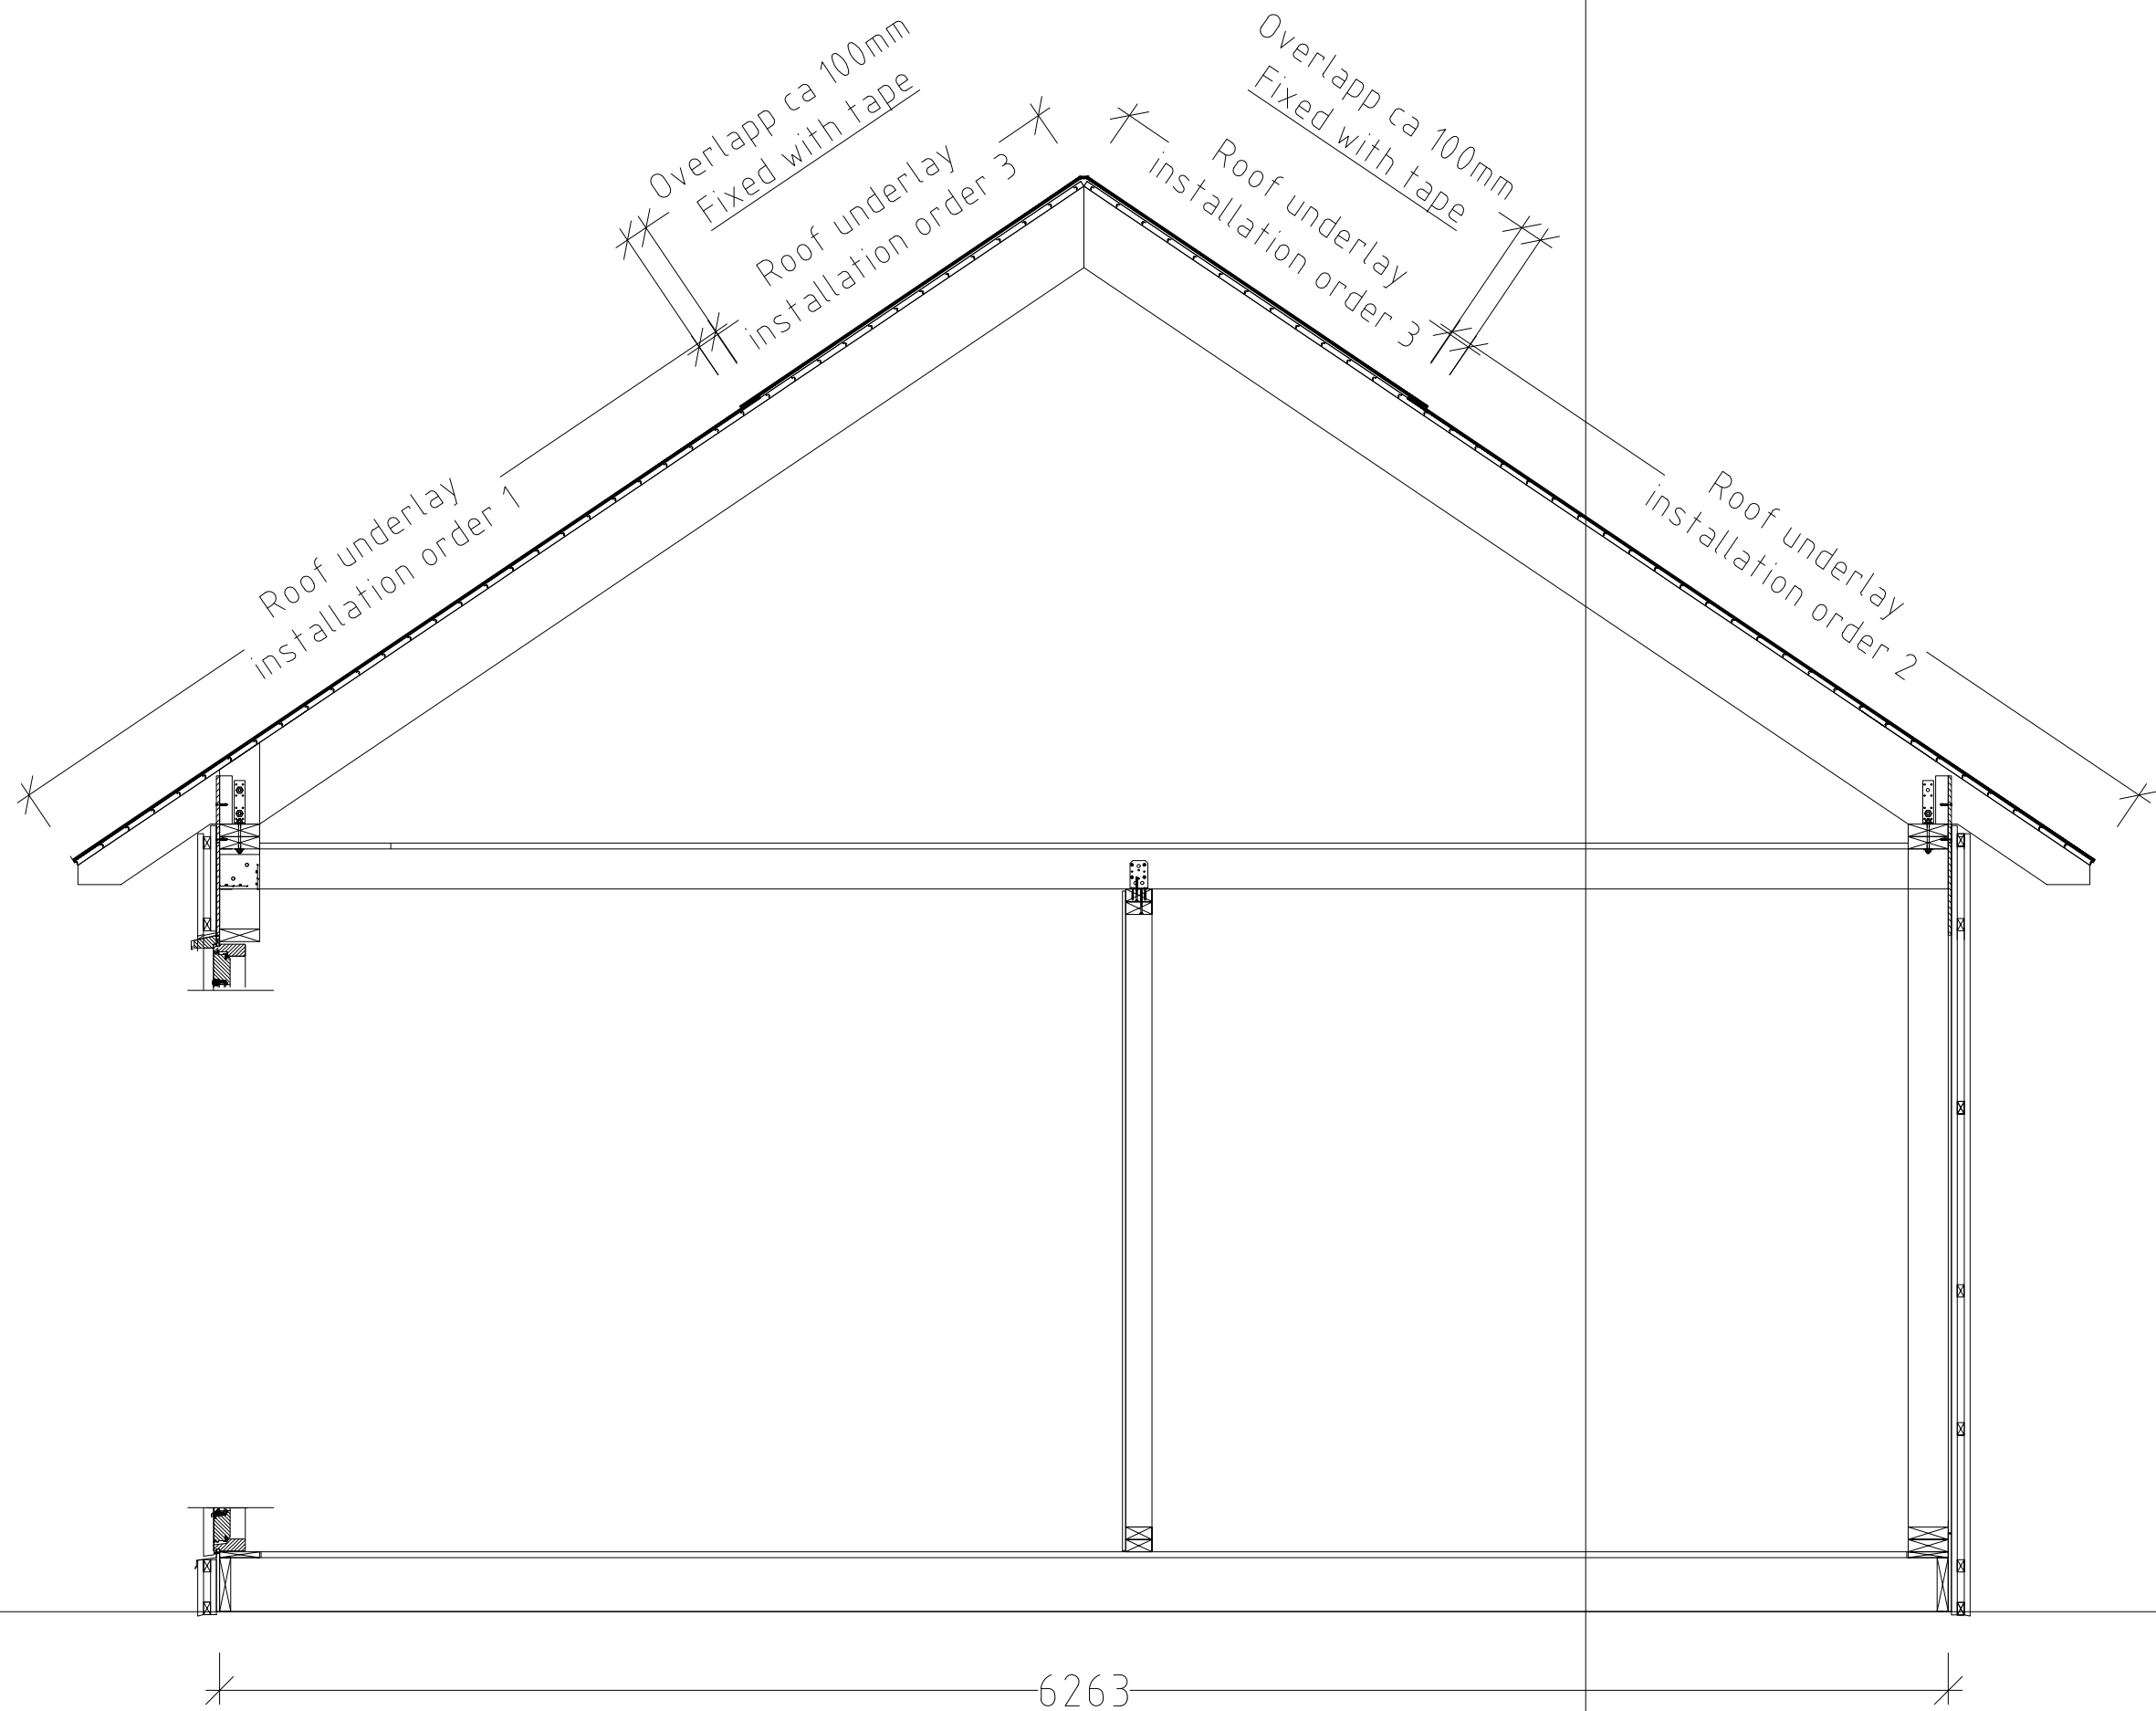




Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

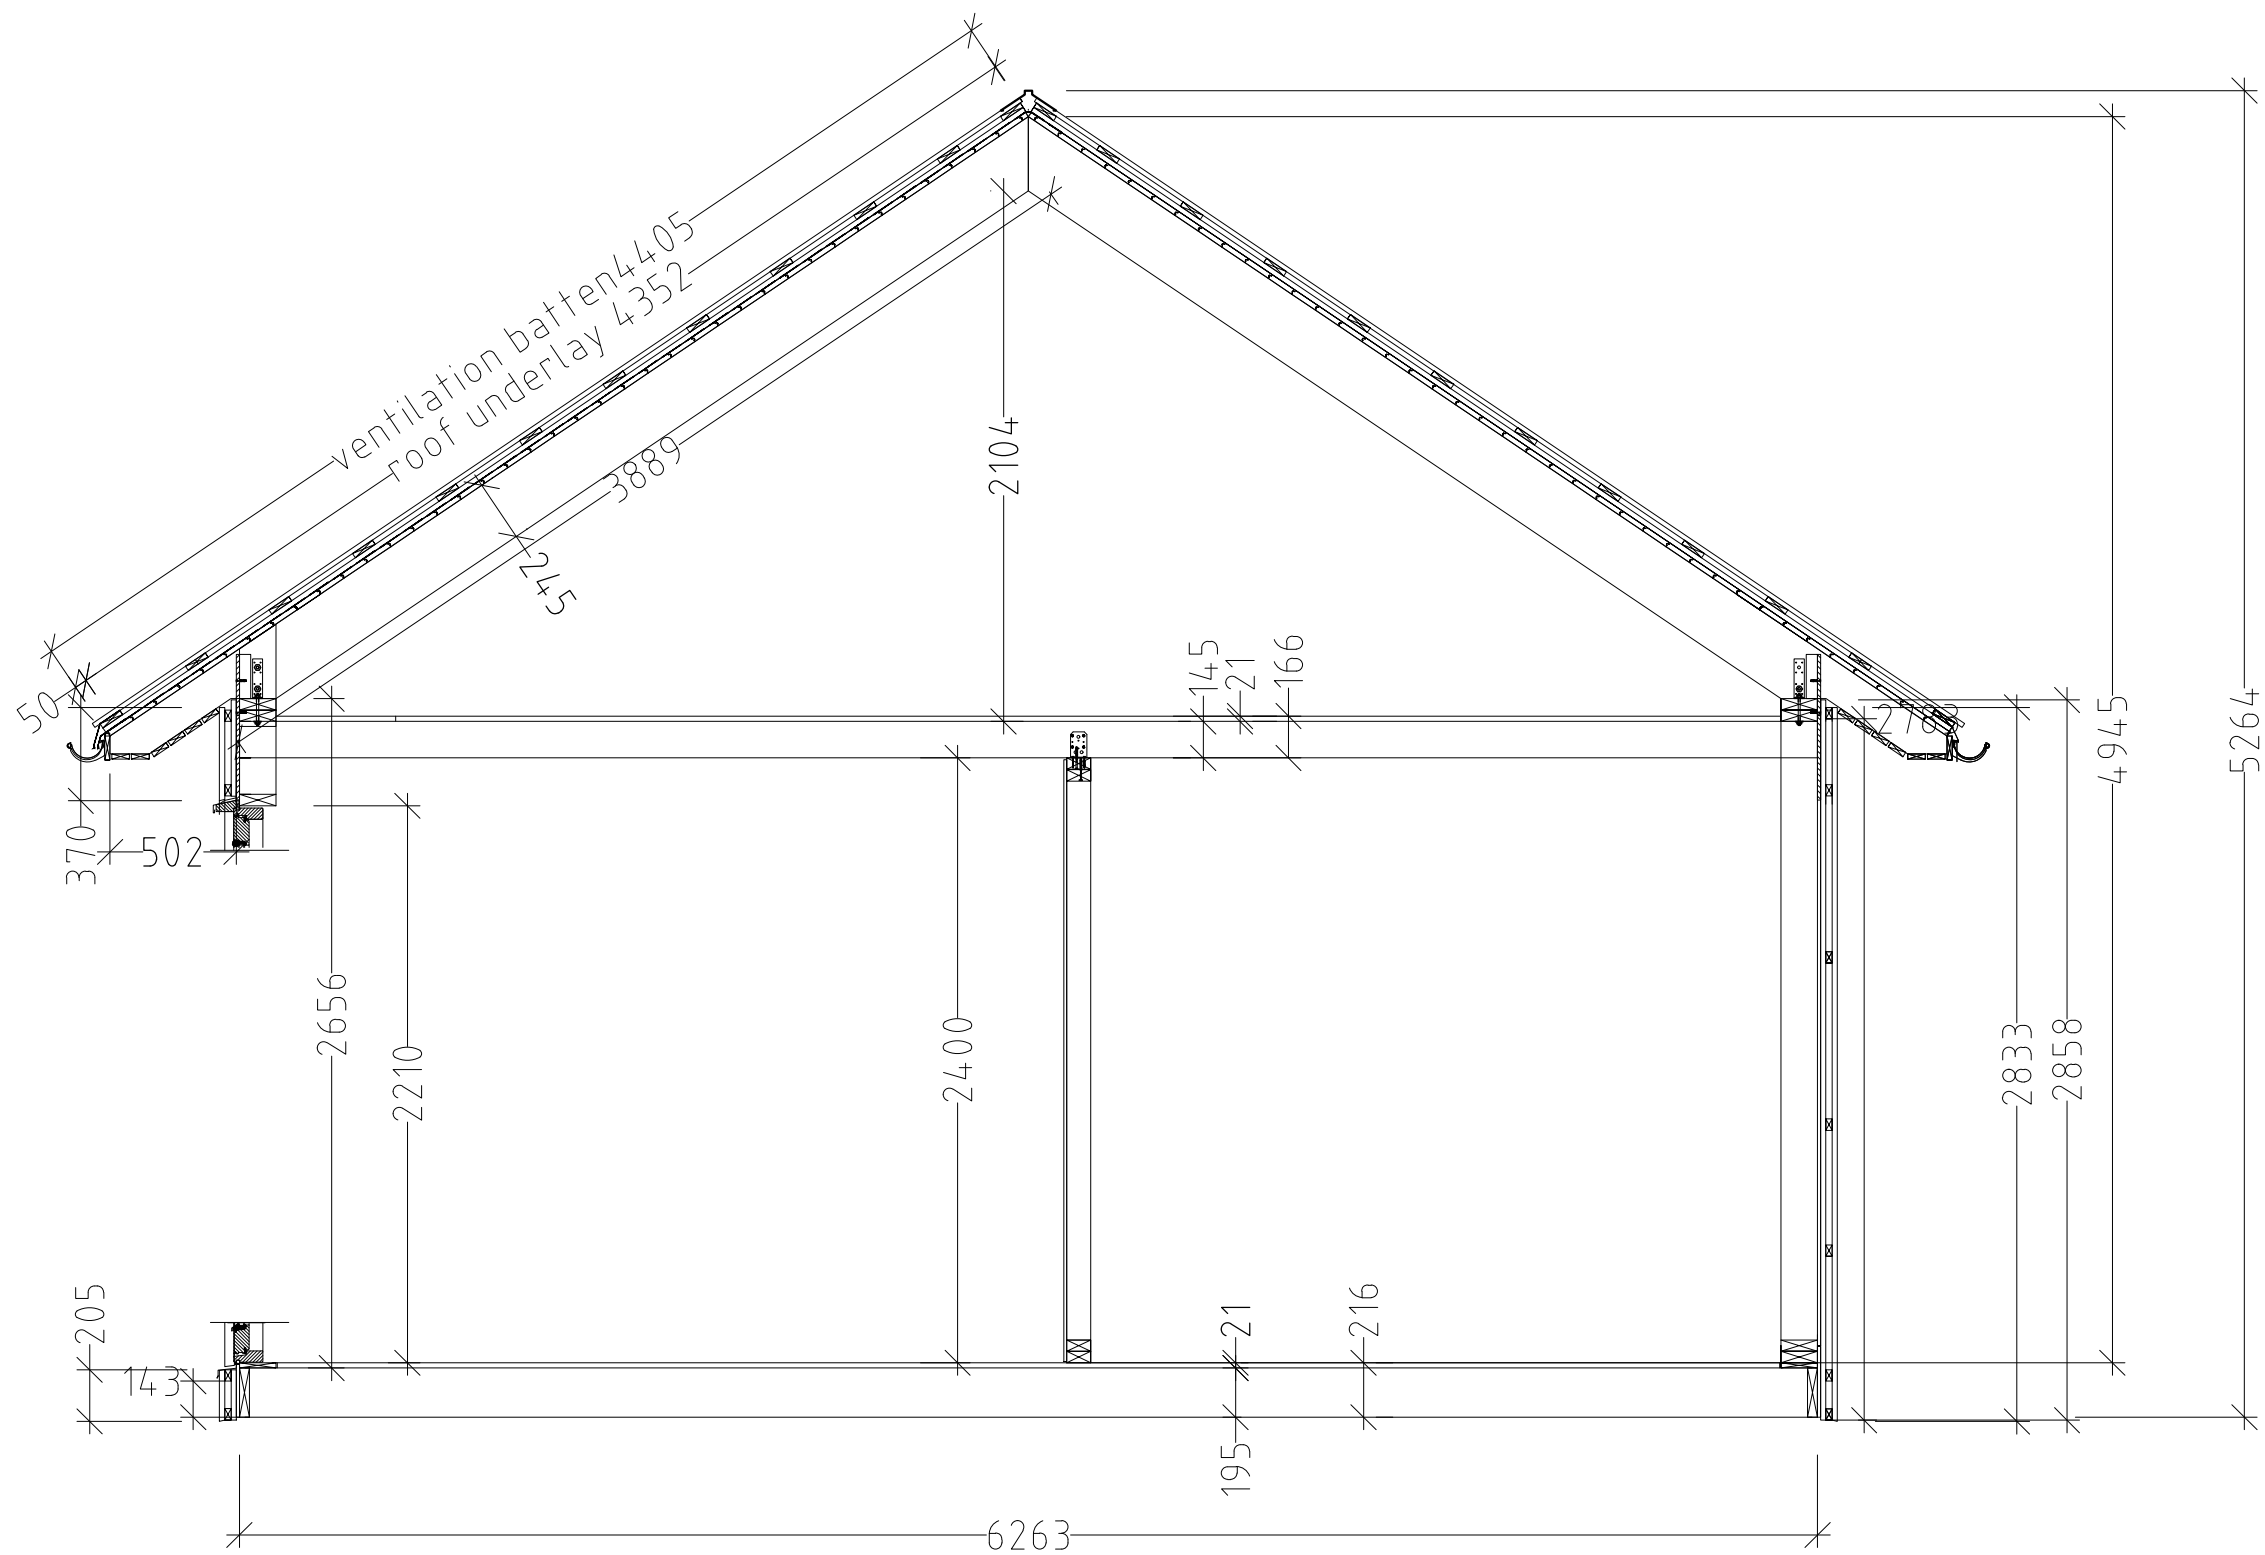


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

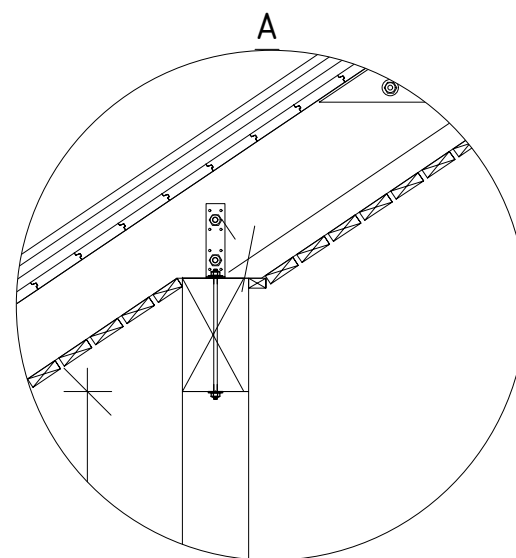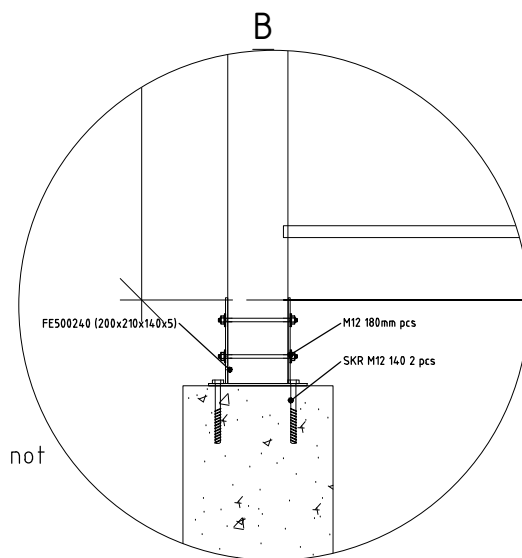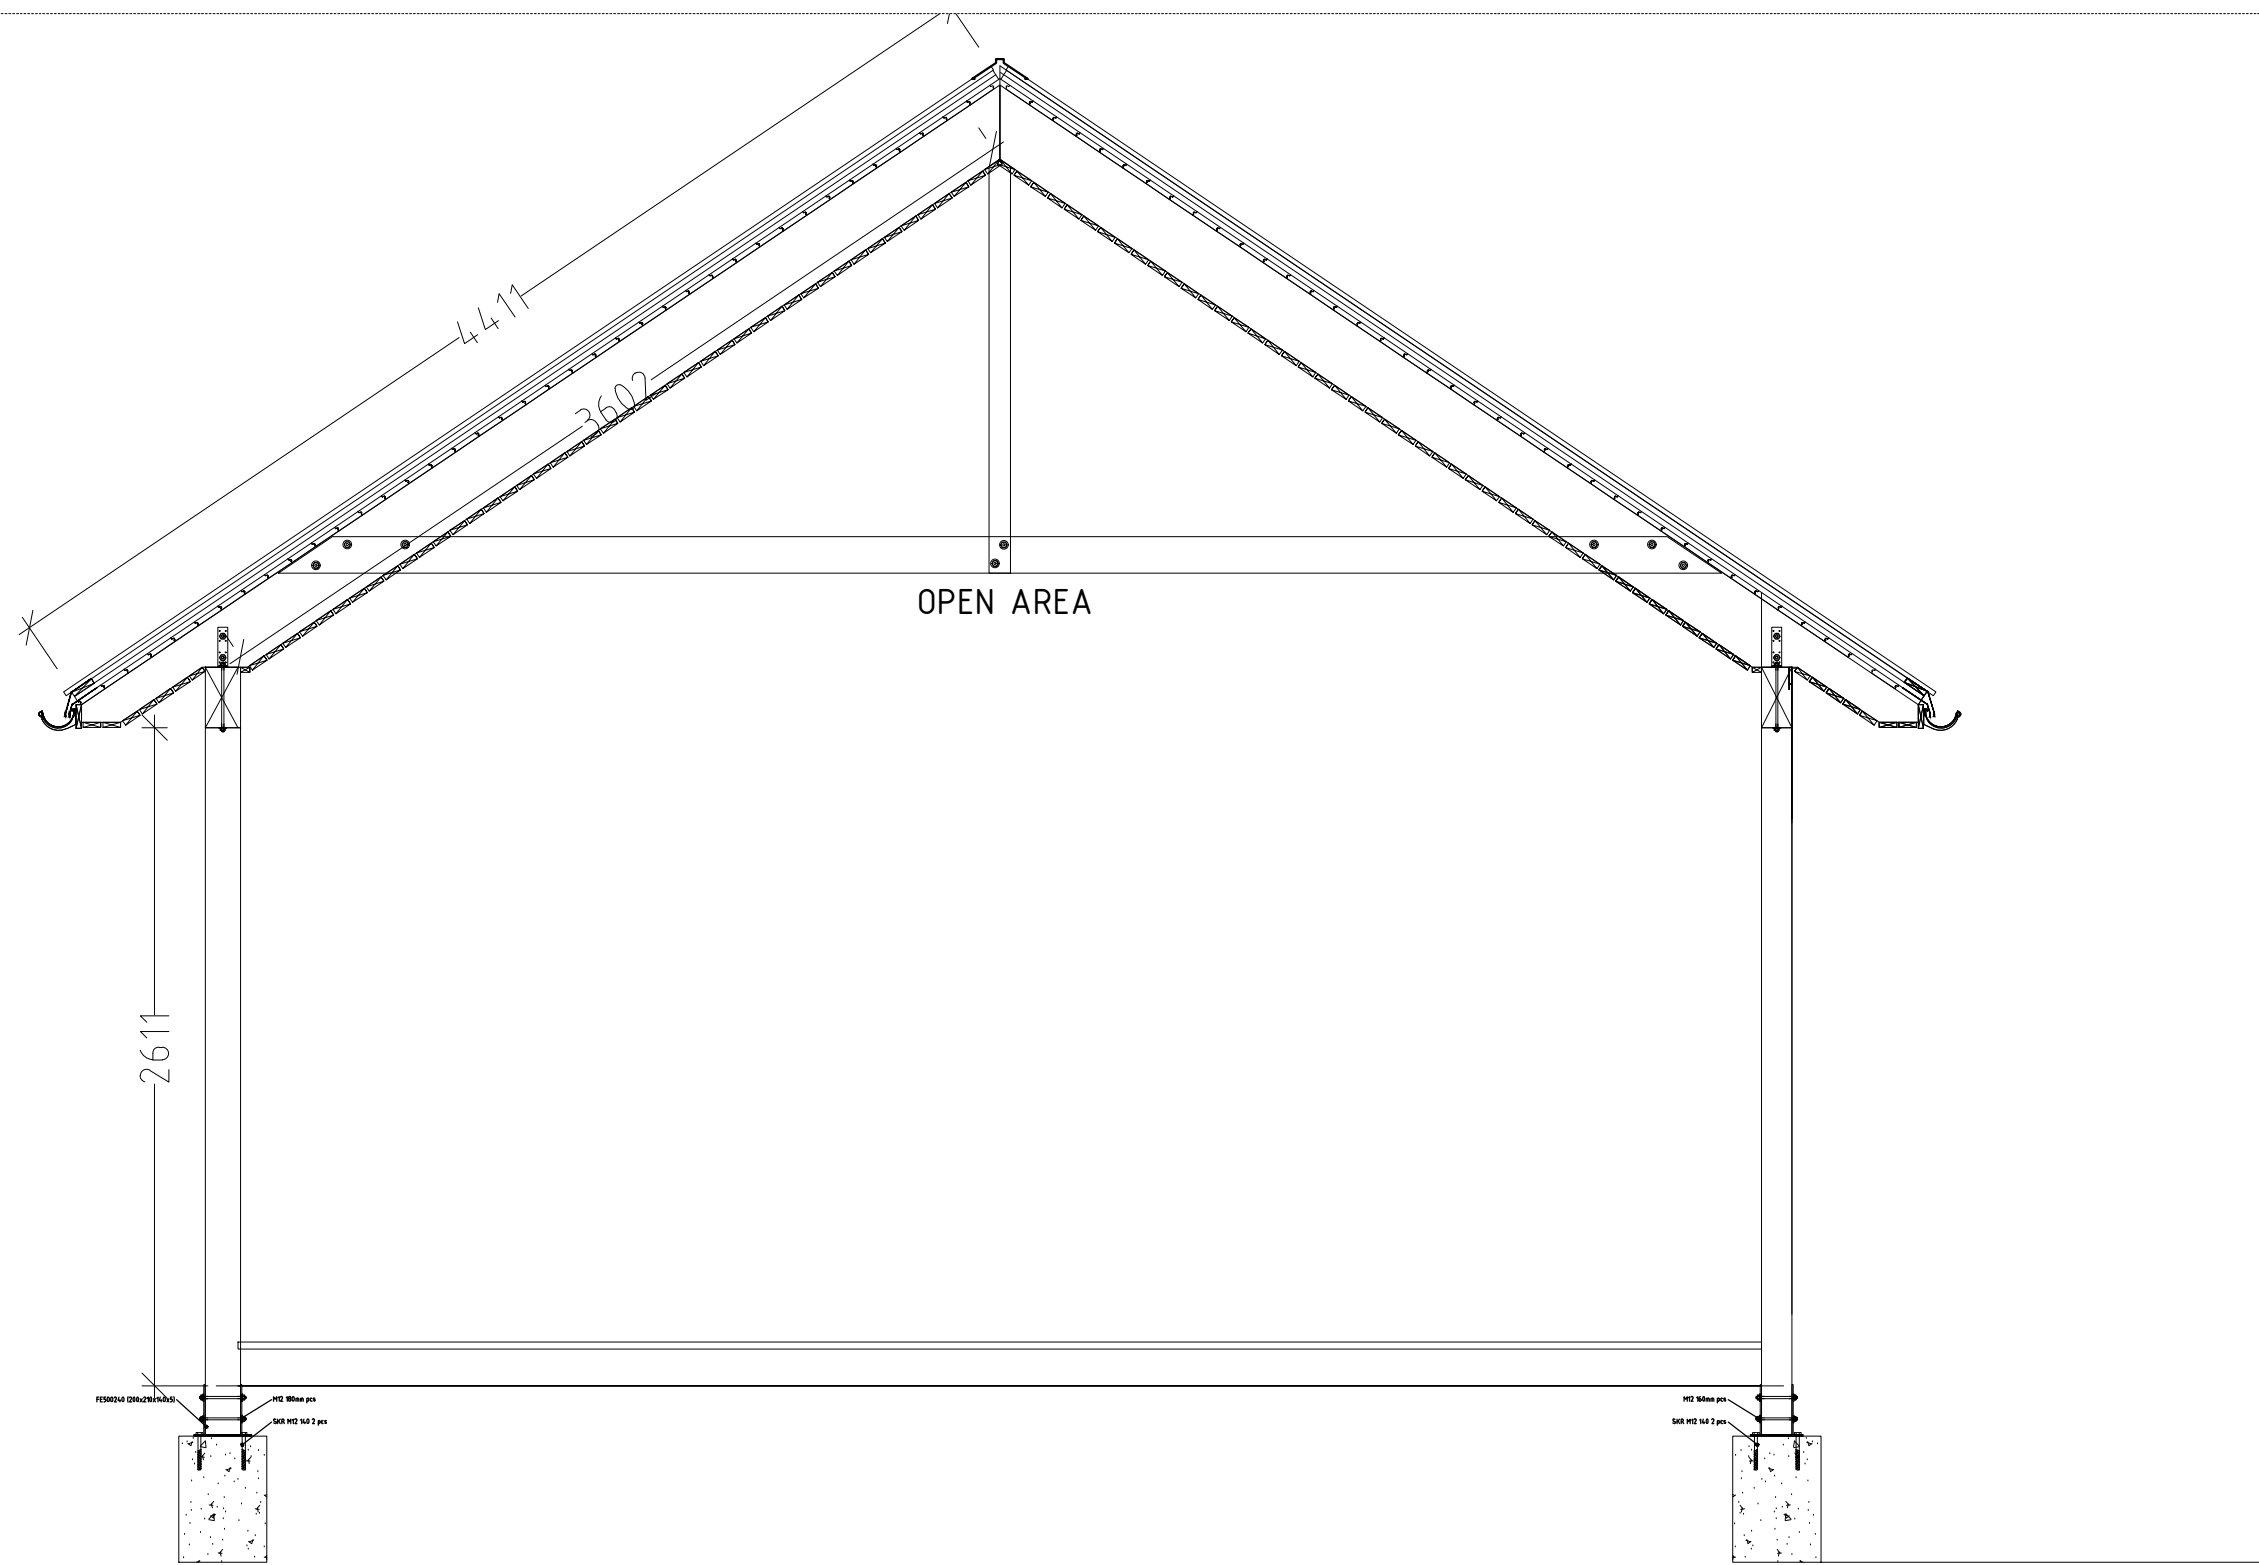


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

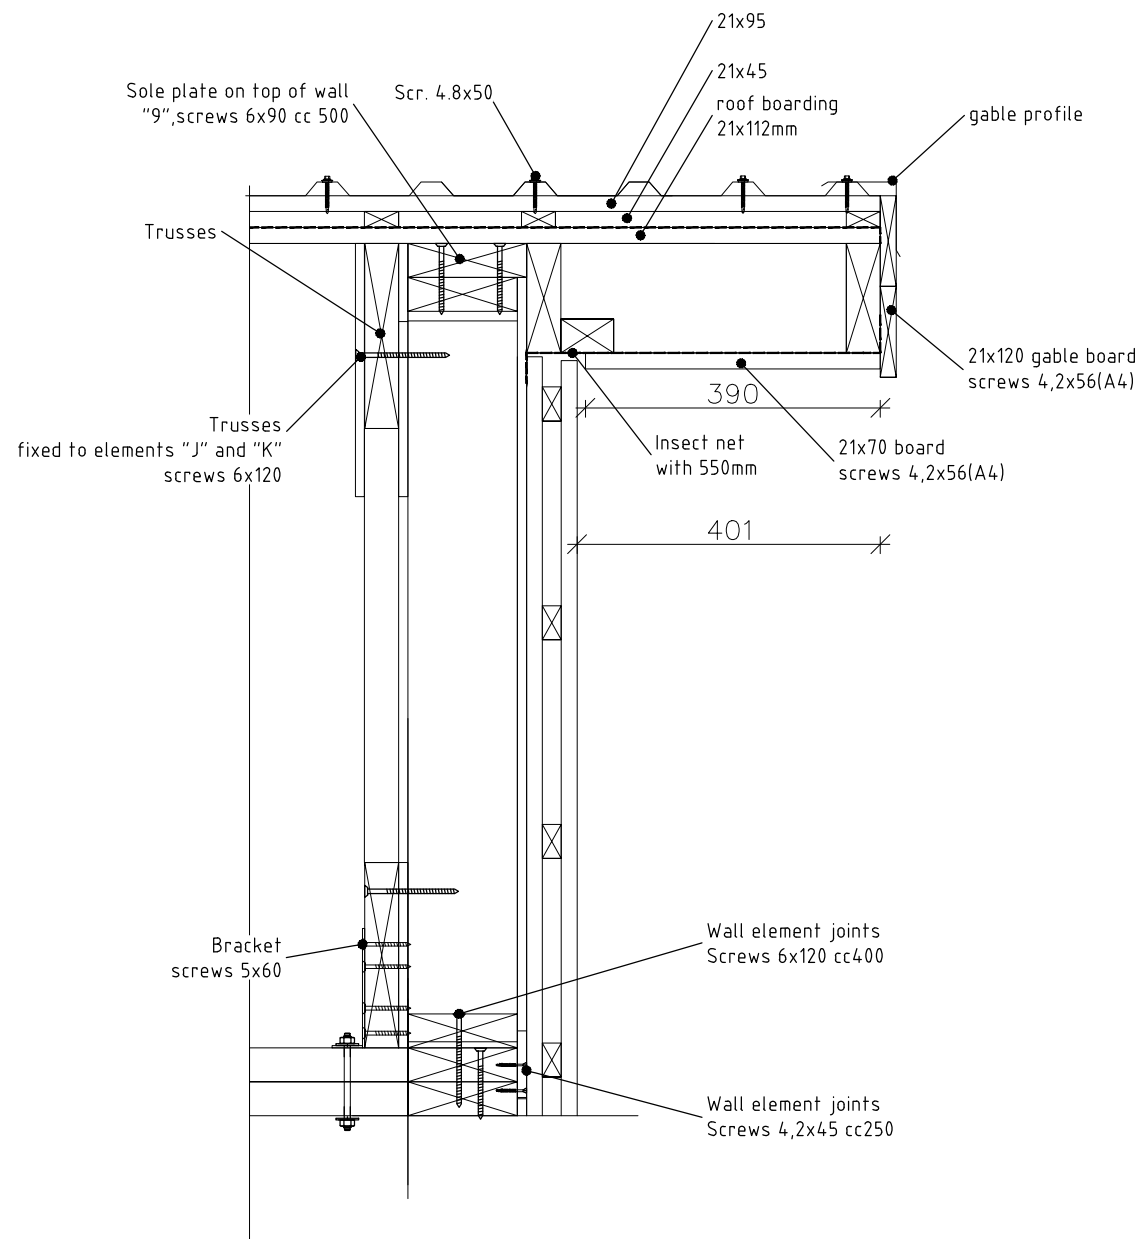


Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

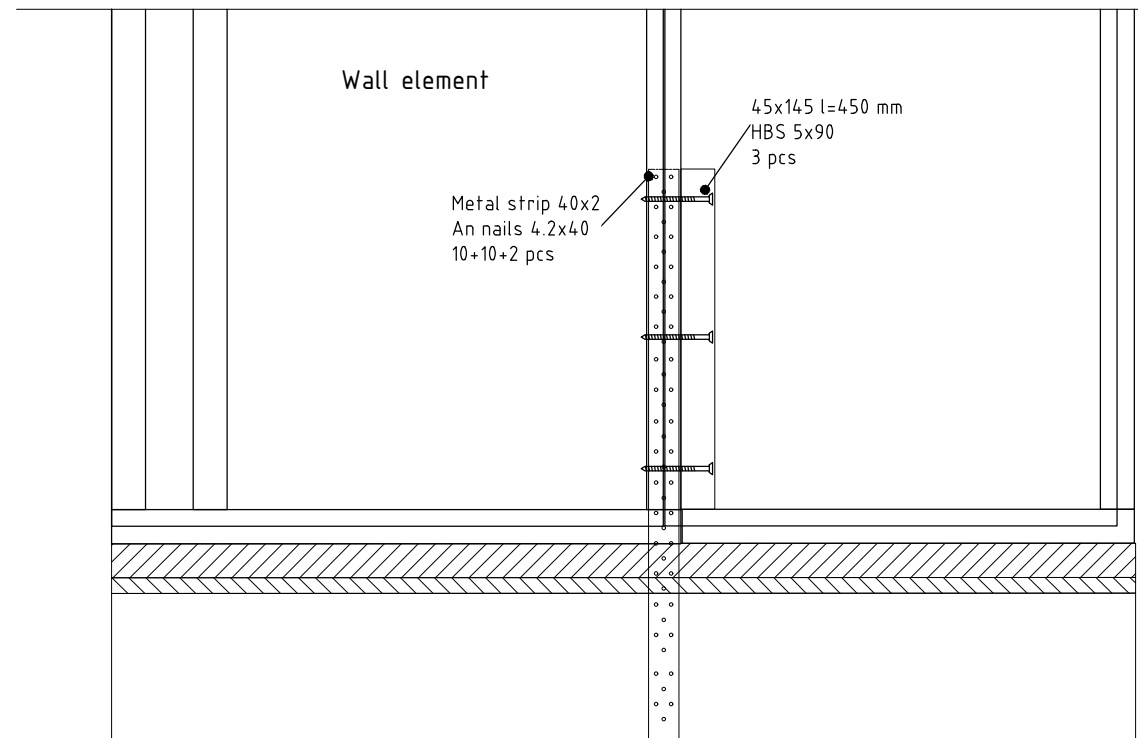

Notes:

1. Follow appropriate detail drawings to fasten elements.
2. Installation plans and fastening materials are recommended by factory and are not mandatory.
3. Factory is not responsible for this project statics and stability.

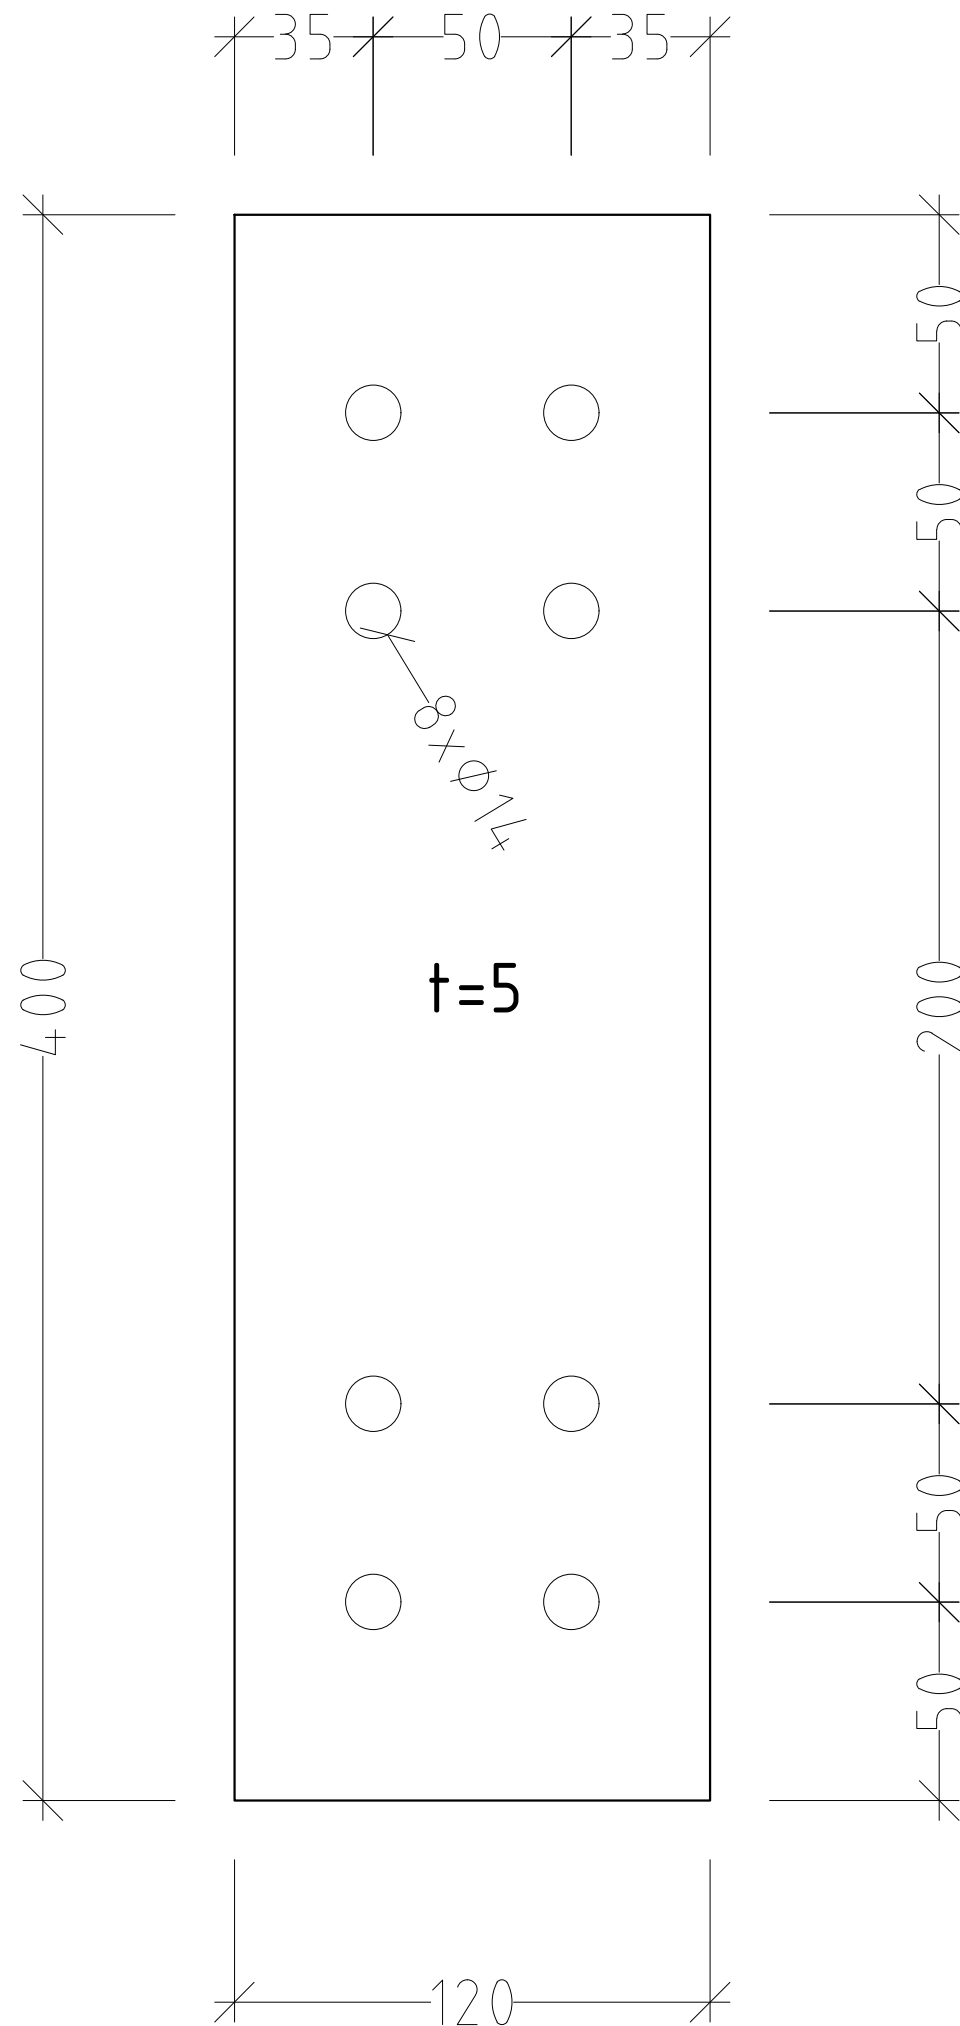

Metal plate MP1 120x400
4 tk
Hot galvanized

- Notes:
- Follow appropriate detail drawings to fasten elements.
 - Installation plans and fastening materials are recommended by factory and are not mandatory.
 - Factory is not responsible for this project statics and stability.